



Instructions for BEHRINGER BCF2000 & 'Simple Mixer' preset

BEHRINGER BCF2000 Simple Mixer

This document will give you a quick overview about the BEHRINGER BCF2000 'SIMPLE MIXER' PRESET and how to install it.

Installation:

1. Open and extract the ZIP file.

The following files are included:

- This INSTRUCTION text document (.pdf)
- SINGLE PRESET file (.syx)

2. How to get the B-CONTROL PRESET from your computer into your hardware:

- **Connect the B-Control to your computer** via USB or MIDI port (Computer MIDI OUT to B-Control MIDI IN)
- **Select the correct USB or stand alone operating mode** on the hardware (please refer to the manual for details)
- **Open the B-Control preset file with a MIDI dump program** like "MIDI-OX" or "Send SX" on your computer
or use the B-CONTROL EDIT software editor, which is available free of charge at our homepage www.behringer.com
- Don't forget to **select the correct MIDI ports** into the dump software!

- **Dumping a single preset (SINGLE DUMP)**
 1. **Select the preset** ('bcf_Simple_Mixer.syx') on your MIDI dump program
 2. **Send the preset** to the B-CONTROL and wait until completion
 3. **Push the STORE** button on the hardware
 4. **Select the desired destination** preset number
 5. **Push the STORE** button again
 6. **The preset is now saved** on your hardware
 7. Now you can dump the next preset (proceed with steps 1 thru 5 again)

Hint: If you do not want to overwrite one of your presets in the B-CONTROL hardware, select a vacant destination number during step 4 (e.g. preset 'P-32').

#	Name	Type	Description/Application
02	'bcf_Simple_Mixer'	Single Preset	Assignment for a simple mixer control (ch. 1-8) with standard CC-commands + MMC control buttons + direct program change buttons (ch. 11) for an additional sound module or effect plug-in

Preset Name: BCF - Simple Mixer

The interface displays a grid of 48 channels (8x6) for various parameters:

- Pan (Ch. 1) to Pan (Ch. 8):** Channels 1-8.
- Balance (Ch. 1) to Balance (Ch. 8):** Channels 9-16.
- FX 1 (Ch. 1) to FX 1 (Ch. 8):** Channels 17-24.
- FX 2 (Ch. 1) to FX 2 (Ch. 8):** Channels 25-32.
- Prg. Chg. 1 to Prg. Chg. 8 (Ch. 11):** Channels 33-40.
- Prg. Chg. 9 to Prg. Chg. 16 (Ch. 11):** Channels 41-48.

Below the grid, there are 8 Volume channels (Ch. 1) to (Ch. 8).

On the right side, there are footswitch controls (FOOT-SW/CTRL) for:

- MMC Punch In (FS)
- Volume (Ch. 11) (FC)
- Encoder buttons E1, E2, E3, E4.
- Buttons for MMC Locate 0, MMC Fwd, MMC Stop, and MMC Play.

The interface also includes a 'P- 2' display and a 'B-CONTROL FADER BCF2000' logo.

Please consider this preset as a basic starting point for building up your individual edits/alignments.

