

Cast Iron Stove (Triple Burner) Owner's Guide



Read and understand this manual to safely operate and maintain this product. \(\)





Failure to follow these hazard instructions when using the Carolina Cooker® Burner (appliance) could result in a fire or explosion causing property damage, personal injury, or even death.

ADANGER

If you smell gas:

- 1. Shut off gas to the appliance.
- 2. Extinguish any open flame.

If odor continues, keep away from the appliance and immediately call your gas supplier or your fire department.

ADANGER

- Do not store a spare LP cylinder under or near the appliance or other heat sources.
- NEVER fill an LP cylinder beyond 80 percent full.

Note: Not following these instructions could result in a fire, causing death or serious injury.

AWARNING

- Do not store or use gasoline or other flammable liquids or vapors in the vicinity of this or any other appliance.
- An LP cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.
- This instruction manual contains important information necessary for the proper assembly and safe use of the appliance.
- Read and follow all warnings and instructions before assembling and using the appliance.
- Follow all warnings and instructions when using the appliance.
- Keep this manual for future reference.

SAFETY INSTRUCTIONS

Even though all the safety instructions in this Owner's Guide are important and should be read and understood before using this appliance, these are some of the more important user instructions. Failure to comply could result in a fire, property damage, or personal injury.

- 1. This appliance is for outdoor use only and should never be left unattended. Constant supervision is necessary.
- 2. Never operate this appliance within 10 feet (3m) of any structure, extended awnings, combustible material, or other LP cylinder. Never operate this appliance within 25 feet (7.5m) of any flammable liquid.
- 3. Read all the operating instructions before lighting the burner. If ignition does not occur in 5 seconds, turn the burner control OFF, wait 5 minutes, and repeat the lighting procedure.
- 4. Do not fill a cooking pot beyond its maximum capacity.
- 5. Never allow oil or grease to smoke or get hotter than 400° F (200° C). If this happens, immediately turn the burner and gas supply OFF.
- 6. Hot cooking liquids remain at dangerous temperature levels long after the burner is OFF. Never touch the appliance until liquids have cooled to 115° F (45° C) or less. Do not move or put the appliance into storage until it is cool to the touch.
- 7. If a fire should occur, immediately move away from the appliance and call your local fire department. Do not attempt to extinguish an oil or grease fire with water.
- 8. Disconnect the LP cylinder whenever this appliance is not in use.

Table of Contents

1.	. General Information	<u>)</u>
	1.1 Welcome to the Carolina Cooker® Family 2)
	1.2 It's All About Safety)
	1.3 Unanswered Questions	3
	1.4 Contents	3
	1.5 End of Life Cycle3	3
2.	. Safety Nomenclature	}
	2.1 General	3
	2.2 Safety Alert Symbols	3
	2.3 Safety Icon Nomenclature	ļ
	2.3.1 Personal Protection/Important	
	Information	
	2.3.2 Prohibited Actions	
	2.3.3 Hazard Avoidance	
3.	. General Safety	
	3.1 Propane Gas Hazard 5	
	3.2 Carbon Monoxide Hazard	
	3.3 General Operating Safety 5	
	3.4 Location Safety	
	3.5 Personal Protection6	
	3.6 Protection Against Fire	;
	3.7 LP (Propane) Gas and LP Cylinder Safety 7	
	3.7.1 LP Cylinder Specifications	7
	3.7.2 Transporting and Refilling an LP Cylinder7	,
	3.7.3 Using an LP Cylinder	,
	3.7.4 Storing an LP Cylinder7	
4.	. Assembly	,
	4.1 Replacement Parts7	
	4.2 Contents	7
	4.3 LP Cylinder Requirements	3
	4.4 Assembly Instructions	3

5. Operations	10
5.1 General Safety	10
5.1.1 Prior to Cooking	10
5.1.2 While Cooking	10
5.1.3 After Cooking	10
5.2 Connecting the LP Cylinder	10
5.2.1 Safety Instructions	10
5.2.2 Connecting Instructions	
5.4 Lighting Instructions	11
6. Maintenance	13
6.1 Maintenance Safety	13
6.2 Maintenance Guidelines	13
7. Storage	14
8. Transporting	14
9. Warranty	14

1.1 Welcome to the Carolina Cooker® Family

Congratulations on your choice of a Carolina Cooker® Burner. The Carolina Cooker® Burner has been engineered for safe and efficient operations with two 15,600 BTU (per vendor) burners. The appliance is energy-saving, environmentally friendly, and convenient to operate. When properly maintained, the appliance will provide a long and trouble-free service life.

SAFETY INSTRUCTIONS

This appliance is not intended for commercial use. It is also not

intended to be used as a turkey fryer.



NOT FOR COMMERCIAL USE

1.2 It's All About Safety

Your safety, and the safety of others, is very important. The proper and safe use of this appliance is an important responsibility and should be taken seriously. This Operator's Guide contains important safety information.

Keep this Owner's Guide for future reference.

The information, specifications, and illustrations/ photos in this Owner's Guide are based on the information that was available at the time this material was published. We reserve the right to change specifications or design at any time without notice.

No part of this publication may be reproduced without written permission from Direct Distributors, Inc. which is a Carolina Cooker® Distributor.

To help you make informed decisions about safe operation and maintenance of this appliance, you will find important safety information in a variety of forms, including:

- Safety labels on the appliance or LP cylinder.
- The LP gas supply cylinder to be used must be constructed and marked in accordance with the specifications for LP gas cylinders, U.S. Department of Transportation (DOT) or the Standard for Cylinders, Spheres and Tubes for the Transportation of Dangerous Goods, CAN/CSA-B339;
- The General Safety section in this Owner's Guide.
- Specific safety instructions in sections, such as Operation, Maintenance, Cleaning, etc. in this Owner's Guide.



Think SAFETY!

Work SAFETY!

AWARNING



Read and Understand Owner's Guide

TAKE SAFETY SERIOUSLY. Even though the safety instructions and informational text in

this Operator's Guide may seem long and tiresome, they are provided for your safety and those nearby the appliance when it is operating.

To prevent property damage, personal injury, or even death, carefully read, understand, and follow ALL warnings and instructions contained within this Owner's Guide and/or other referenced publications.

This appliance, if not used and maintained properly, can be dangerous to users unfamiliar with its operation. Do not operate, maintain, adjust, or clean this appliance until you have read this Owner's Guide and have developed a thorough understanding of the safety precautions and functions of the appliance.

This appliance is designed for the specific purpose of preparing food for human consumption. DO NOT modify or use this equipment for any application other than that for which it was designed.

Appliance maintained or operated improperly, or by untrained users, can be dangerous; exposing the user and/or bystanders to possible serious injury or death.

1.3 Unanswered Questions

If you have any questions not answered in this guide, require additional copies, or the Owner's Guide is damaged, please contact:

Carolina Cooker® P.O. Box 799 Garner, NC 27529

Orders: 833-926-6537 Inquires: 844-478-4334

Web: www.CarolinaCooker.com

1.4 Contents

The contents include the stand, burner, and burner control valve.

The appliance is intended to be used with a pressure regulator and hose assembly designed for an LP cylinder Type 1 connection. Do not use any other type of gas regulator or LP cylinder. The appliance does not include an LP cylinder.

1.5 End of Life Cycle

This appliance is designed to prepare food for human consumption. When the appliance is no longer capable of performing its designed function, destruction of the appliance should be conducted according to federal and local environmental regulations. Do not use any materials or components from the appliance for any other purpose.

2. Safety Nomenclature

2.1 General

Safety of the user and bystanders is one of the main concerns in designing and developing a new product. Designers and manufacturers build in as many safety features as possible. However, every year many accidents occur which could have been avoided by a few seconds of thought and a more careful approach to handling the appliance.

Most accidents are caused by failure to observe basic safety rules or precautions. An accident can often be avoided by recognizing potentially hazardous situations before an accident occurs. As you assemble, use, or maintain the appliance, you must be alert to potential hazards. You should also have the necessary training, skills, and tools to perform any assembly or maintenance procedures.

Improper operation and maintenance of this appliance could result in a dangerous situation that could cause injury or death.

AWARNING



Do not assemble, operate, or maintain the appliance until you read and understand the information contained in this Owner's Guide.



persons.

Safety precautions and warnings are provided in this Owner's Guide and on the appliance. If these hazard warnings are not heeded, bodily injury or death could occur to you or to other

Carolina Cooker® cannot anticipate every possible circumstance that might involve a potential hazard. The warnings in this Owner's Guide and on the appliance are, therefore, not all-inclusive. If a method of assembly, use, or maintenance not specifically recommended by us is used, you must satisfy yourself that it is safe for you and for others. You should also ensure that the appliance will not be damaged or be made unsafe by the methods that you choose.

2.2 Safety Alert Symbols



This is the safety alert symbol. It is used to alert you to potential physical injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

This Owner's Guide contains DANGERS, WARNINGS, CAUTIONS, SAFETY INSTRUCTIONS, IMPORTANT NOTICES, and NOTES which must be followed to prevent the possibility of improper service, damage to the equipment, personal injury, or death. The following key words call the readers' attention to potential hazards.

Hazards are identified by the "Safety Alert Symbol" and followed by a signal word such as "DANGER", "WARNING", or "CAŬTION".

A DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in serious injury or death. This signal word is limited to the most extreme situations.

AWARNING

Indicates a potentially hazardous situation which, if not avoided, could result in serious injury or death.

ACAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

NOTICE

Indicates that equipment or property damage can result if instructions are not followed.

SAFETY INSTRUCTIONS

• Indicates specific safety-related instructions or procedures.

Note: Contains additional information important to a procedure.

2.3 Safety Icon Nomenclature

Pictorial icons signal a type of hazard and warn of personal protection issues, prohibited actions, and hazard avoidance.

2.3.1 Personal Protection/Important Information



Read the Owner's Guide



Damaged hazard label



Eye protection



Fire extinguisher



First aid kit



Hand protection



Protective shoes



Think safety



Handling hot surfaces



Maintain safe distance to combustible materials



Safe cooking temperature

2.3.2 Prohibited Actions



Do not alter or modify



Do not weld



No alcoholic influence



No drug influence



No smoking



No use by young children



Do not operate inside a vehicle, such as a food truck



Do not operate inside a tent or other temporary structure



Do not leave unattended



Do not use near flammable liquids



Do not use on combustible surfaces



Do not use on boats or other floating structures



Hot cooking liquid, do not touch



Do not place cover over cooking vats



Do not use under overhanging structures



Do not use inside garage or living structure



Keep small children and pets away



Do not operate without proper foot wear

2.2.3 Hazard Avoidance



Replace defective or broken part



Fire hazard



Hot liquid, burn hazard



Hot surface, burn hazard



Dangerous fumes hazard



Operate outdoors and in a well ventilated area



Safety alert symbol

3. General Safety

DO NOT modify or use this equipment for any application other than that for which it was designed.



This appliance is not intended for commercial use.



NOT FOR COMMERCIAL USE

3.1 Propane Gas Hazard


A DANGER

If you smell gas:

- 1. Shut off gas to the appliance.
- 2. Extinguish any open flame.
- 3. Carefully open the cooker lid.

If odor continues, keep away from the appliance and immediately call your gas supplier or your fire department.

3.2 Carbon Monoxide Hazard **Carbon Monoxide Hazard**

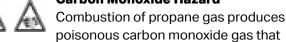

can build up to dangerous levels in enclosed areas. Breathing carbon monoxide can cause unconsciousness, brain damage, and death. Never use the appliance in an enclosed or partially enclosed area.

Carbon monoxide is odorless, colorless, and tasteless, which makes it difficult to detect. Most cases of carbon monoxide poisoning are due to inadequate ventilation or poor maintenance of the appliance.

Early symptoms of carbon monoxide (CO) poisoning can mimic many common ailments and may easily be confused with food poisoning, viral infections, flu, or simple tiredness. Symptoms to watch for include:

- headaches or dizziness
- breathlessness
- nausea
- loss of consciousness
- tiredness
- pains in the chest or stomach
- erratic behavior
- visual problems

3.3 General Operating Safety

AWARNING

Failure to comply with the following safety instructions could result in serious injury and possibly even death.

Outdoor Use Only

Do NOT use this appliance indoors. This appliance shall be used only outdoors, and shall not be used in a building, garage, or any other enclosed area. A fryer or boiler shall not be used on or under any apartment or condominium balcony or deck.



Do NOT use under a tree, park shelter, or other overhanging roof structure.



Do NOT use inside a vehicle, such as a food truck.

Do NOT use in or on a recreational structure or vehicle, boat, or sleeping facility. This appliance is not intended to be installed in or on a boat or on a recreational vehicle.

Not a Source of Heat

NEVER use this appliance as a heat source. It is not intended as a source of heat, nor should it be used as a heater.





No Unattended Use

Never leave the appliance unattended. Even with low flame, heat will build up quickly and may ignite foods or other combustible material.



No Unauthorized Modifications

Do not modify the appliance or any of its safety devices. Do not weld on the appliance or burner. Unauthorized modifications may impair its function and safety. Personal injury or death can result from unauthorized modifications.

If the appliance has been altered in any way from the original design, the distributor does not accept any liability for injury or warranty.

AWARNING

Failure to comply with the following safety instructions could result in serious injury and possibly even death.



Use Only on Noncombustible Surfaces

Always place the appliance on a level, stable, noncombustible surface such as brick, concrete, or dirt.

 Do not use on surfaces made of wood (such as a deck or table), asphalt (such as a driveway), plastic, or painted metal which may burn, blister, or melt.

- Do not use this appliance under over head combustion surface. The appliance shall not be located or used under overhead unprotected combustible construction.
- Do not use on a combustible surface, such as a wooden picnic table, plastic folding table, or other similar combustible surfaces.
- Do not use on the surface of a passenger vehicle, such as the tailgate of a pickup truck.

Minimum Safe Clearance

Keep combustible material at least 10 ft. (3 m) from the appliance. For a fryer or boiler, the minimum clearance shall be at least 10 ft (3 m) from any structure or combustible material. Minimum clearance from side and back of unit to combustible construction: 24" (60.96mm) from sides and 24" (60.96mm) from back.



Outdoor Ambient Temperature

Do not use when outside temperature is below 21° F (10° C).

3.5 Personal Protection

ACAUTION

The following safety instructions are provided to help prevent potential injury. Not following these instructions may lead to injury.





Personal Protection Equipment Always wear safety glasses or

goggles, slip-resistant, closed toe

shoes, gloves or mitts. Wear long sleeves when using the appliance with cooking oil.



Burn Protection

Use well-insulated, properly fitting pot holders or oven mitts for protection from hot surfaces or splatter from cooking liquids.



Eye Protection

Safety goggles are recommended for eye protection whenever using hot cooking liquids.



Clear the area of people, especially small children and pets, before using the appliance. Under no circumstances should children, pets, or unauthorized persons be allowed near the appliance.

ACAUTION





Impaired User Hazard

Do not attempt to assemble, use, or maintain this appliance under the

influence of drugs or alcohol. Consult your doctor before using the appliance while taking prescription or non-prescription medications.



Tripping Hazard

Tripping over the gas supply hose can cause spillage of hot oil, resulting in seri-

ous burns. Position the hose to prevent human or animal entanglement.





Slipping Hazard

Keep the floor clean and dry. Immediately clean up spilled oil. An oily or wet floor

can cause slips and falls.



First Aid

Have a first aid kit available for use should the need arise and know how to use it.

3.6 Protection Against Fire

AWARNING

Failure to comply with the following safety instructions could result in serious injury and possibly even death. The vast majority of fires are the result of leaving cooking oil unattended.





911 Call 911

In the event of a fire immediately call the Fire Department (911).





Fire Hazard - No Smoking

Propane gas is HIGHLY FLAMMABLE and EXPLOSIVE, which could result in

burns or serious injuries. Do not smoke while using the appliance.





Fire Hazard - Proper Extinguisher

Have a Type BC or ABC fire extinguisher available for use, if

needed, and know how to use it. The proper type of fire extinguisher may, but not necessarily always, contain a cooking fire.





Fire Hazard - DO NOT USE WATER

In the event of an oil/grease fire, do not attempt to extinguish with water. If a

fire extinguisher is not available, use dirt, sand, or baking soda.



Do not use the appliance if it is damaged in any way. If in doubt, do not use the appliance.

3.7 LP (Propane) Gas and LP Cylinder Safety

Failure to follow these safety instructions and warnings could result in a fire or an explosion, which could cause property damage, personal injury, or death.

AWARNING

Use Carolina Cooker® products (appliances) only in accordance with Federal, state, and local laws and/or ordinances. Whenever connecting, using, storing, or transporting an LP cylinder, the tank and its connections must be in compliance with the following:

- National Fuel Gas Code, ANSI Z223.1/NFPA 54
- Storage & Handling of Liquefied Petroleum Gases, ANSI/NFPA 58
- Natural Gas and Propane Installation Code, CSA B149.1
- Propane Storage and Handling, CSA B149.2
- •Standard for Recreational Vehicles, ANSI A119.2/NFPA 1192
- Recreational Vehicle Code, CSA Z240 RV Series

3.7.1 LP Cylinder Specifications

When purchasing or exchanging an LP cylinder for this appliance, it must be constructed and marked in accordance with the applicable standards of the US and/or Canadian governing agencies.

The cylinder must also be equipped with:

- A shut-off valve terminating in a Type 1 LP cylinder valve outlet.
- A Type 1 valve that prevents gas flow until a positive seal is obtained.
- A collar to protect the cylinder shut-off valve.
- An overfilling prevention device (OPD).
- The cylinder supply system must be arranged for vapor withdrawal.

Note: For use with 20, 30, 40 lb. cylinders of LP gas only.

3.7.2 Transporting and Refilling an LP Cylinder

1. Never transport an LP cylinder inside a car or in the trunk of a car. Use an open vehicle, such as a pickup truck.

- 2. Allow only qualified LP gas dealers to properly fill or repair the LP cylinder. DO NOT OVER FILL.
- Check the dates on the cylinder collar, and if the cylinder is past its re-qualification date, return it for a new LP cylinder. Do not refill an out-of-date LP cylinder.

3.7.3 Using an LP Cylinder

- 1. Never use the LP cylinder in a position other than upright. Do not lay an LP cylinder on its side during use.
- 2. Propane gas is heavier than air and will collect in low areas. Proper ventilation is extremely important.
- 3. When the appliance is not in use, the gas must be turned OFF by closing the LP cylinder valve and the gas pressure shutoff valve.
- 4. Before storing the appliance after use, always disconnect the LP cylinder.
- 5. Never use an LP cylinder if it shows signs of dents, gouges, bulges, fire damage, corrosion, leakage, excessive rust, or other forms of visual external damage. The cylinder may be hazardous and should be checked by a qualified LP supplier.

3.7.4 Storing an LP Cylinder

- 1. LP cylinders must be stored outdoors, out of reach of children, and must not be stored in a human dwelling place, garage, or any other enclosed area.
- 2. Never place a connected LP cylinder under the appliance.
- 3. Do not store an LP cylinder within 10 feet (3m) of any cooking appliance.

4. Assembly

AWARNING



Before beginning assembly, read and understand the information contained in this Owner's Guide.



Safety precautions and warnings are provided in this Owner's Guide and on the appliance. If these hazard warnings are not heeded, bodily

injury or death could occur to you or to other persons.


4.1 Replacement Parts

Description	Part No.
Cast Iron Leg W/Screw F/Cast	108869
Cast Iron Burner W/Air Adj Screw	108870
Air Adjusting Screw And Spring	108871
Double Adjustment Knob	108873


4.2 Contents

Check the contents of the box to be sure all parts are present prior to assembly. If parts are damaged or missing, call 833-926-6537.

Contents					
Item	Description	Qty.			
1	Loose Parts Bag With Items 4-9	1			
2	Burner	3			
3	Base	1			
4	Gas Pressure Shutoff Valve Manifold	1			
5	Flat Head Screws for Shut-Off Valve Manifold	4			
6	Spring	3			
7	Air Flow Control Bolt	3			
8	Leg	4			
9	Flathead Screw, Washer, Lockwasher, and Nut for Legs and Burner Attachment	10			

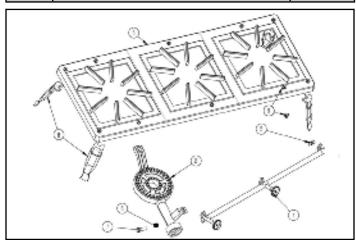



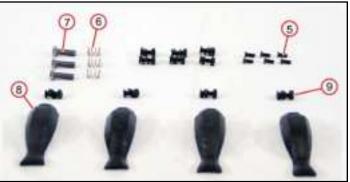

4.3 LP Cylinder Requirements

This appliance is specifically designed to be used with a LP cylinder with a Type 1 cylinder valve and an overfilling protection device (OPD).

1. A Type 1 valve can be identified by its large external threads. Do not connect to a cylinder that uses any other type of valve connection device.

Note: Do Not use any other type of LP cylinder or valve with this appliance.


4.4 Assembly Instructions

1. Attach and tighten four legs using a fiat head screw, washer, lockwasher, and nut.





2. Check to make sure all gas ports in both burner heads are clear. Remove any obstructions that are present.

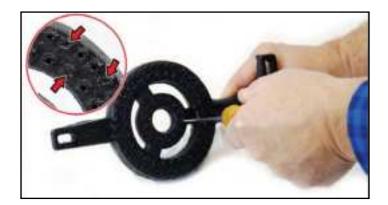

3. Install air flow control bolt and spring in each burner.





4. Install burner assemblies with two fiat head screws, washers, lockwashers, and nuts.



5. Install gas valve manifold to the burners using four flat head screws.



6. Attach a hose assembly (customer supplied).

To Prevent damage to the shut-off valve when tightening the connection, hold brass hex nut with one wrench while tightening regulator hose assembly fitting with the other wrench. Do not tighten the connection using a single wrench.



This appliance was not designed for, and should not be connected to, a natural gas supply line.

- 7. Make sure both shut-off valves are closed and connect an LP cylinder, as described in section "5.2 Connecting the LP Cylinder" on page 10.
- 8. Perform the Soapy Water Test, as described in section "5.3 Soapy Water Test" on page 11.

5.1 General Safety

Failure to follow these safety instructions and warnings could result in a fire or an explosion, which could cause property damage, personal injury, or death.

AWARNING

Read and follow all instructions and warnings in this Owner's Guide, on the cylinder, and on the supply hose safety tags before connecting the cylinder to the appliance.

Do not allow anyone to conduct activities around this appliance during or following its use until the appliance and the cooking liquid has cooled. The appliance is hot during operation and remains hot for a long period of time following its use.

5.1.1 Prior to Cooking



Do NOT leave the appliance unattended while the burner is lit or while heating oil, grease, water, or when cooking food.



Carefully monitor the appliance, especially when the cooking oil, grease, or water is above 100° F (38° C).

This appliance gets dangerously hot while in use. Use well-insulated pot holders or oven mitts for protection from hot surfaces or splatter from cooking liquids. Safety glasses or goggles are also recommended to protect from oil splatter.

6.1.2 While Cooking



Never leave hot cooking liquids unattended.



Carefully remove food from the appliance to prevent burns from hot cooking liquids.



Do not place an empty cooking container on a lit burner. Empty aluminum cooking containers will melt if placed over lit burner.



Do NOT move the appliance when in use.



Avoid bumping of or impact with the appliance to prevent contact with hot surfaces, spillage or splashing of hot cooking liquids.

5.1.3 After Cooking

Heated cooking liquids and equipment will remain at temperatures capable of causing severe burns and injuries long after cooking has ended.



Do not leave the appliance unattended until the oil, grease, or water temperature falls below 100° F (38° C).



The valve on the LP cylinder must be closed when not in use.

5.2 Connecting the LP Cylinder

5.2.1 Safety Instructions

SAFETY INSTRUCTIONS

- Do not connect this appliance to any other fuel supply source, such as natural gas.
- If the regulator is not working correctly, do not attempt to adjust or repair it.
- Never use an LP cylinder if it shows signs of dents, gouges, bulges, fire damage, corrosion, leakage, excessive rust, or other forms of visual external dam age. This type of damage may be hazardous and should be checked by an LP service technician.
- Route the gas supply hose away from any hot surface on the appliance stand.

5.2.2 Connecting Instructions



1. Make sure both shutoff valves are CLOSED prior to connecting the regulator and hose assembly.

2. Make sure the LP cylinder is upright and the valve is closed by turning the knob clockwise.



3. Remove the protective cap from the LP cylinder valve, if installed, and connect the hose and gas regulator assembly to the LP cylinder.



NOTICEBe careful not to cross thread the connector onto the valve. Hand tighten only. Do not use tools to tighten this connection.

4. Make sure the hose is not kinked and is routed away from any sharp edges or hot surface. The LP cylinder should be placed at least 24 inches away from the appliance.

The supply hose can be a trip hazard. Tripping over the gas supply hose can cause spillage of hot oil or food, resulting in serious burns. Place the LP cylinder away from human or pet traffic. Do not walk between the

5. Perform the Soapy Water Test described in the following section to check for leaks.

5.3 Soapy Water Test

appliance and the LP cylinder.

SAFETY INSTRUCTIONS

- The soapy water test must be performed outdoors in a well-ventilated area.
- Do not perform the test around open flames, sparks, lit matches, lighters, or cigarettes.
- Never use an open flame to test for gas leaks.

The "soapy water test" **must** be performed each time:

- the LP cylinder is reconnected, or
- any time the appliance has been moved, or
- at least once per year and/or the appliance has not been used for more than 60 days.
- 1. Remove any cookware or oil vats from the appliance.
- The shut-off valves and the LP cylinder valve should be in the OFF or closed position.
- 3. Prepare a soapy water solution by combining one part dish washing liquid with three parts water.



Open the LP cylinder valve.



(with the shut-off valves in the closed position).

Apply the soapy water solution to ALL connections between the LP cylinder and the shutoff valves on the manifold assembly.

AWARNING Close the LP cylinder valve immediately if bubbles appear. Re-tighten the loose connection and repeat the test.

- If leaks are identified between the LP cylinder and the unit's shutoff valves, immediately turn OFF the LP cylinder valve.
- 7. If connections are leak-free, continue to Step 10.
- 8. All connections with evidence of leaking should be tightened, then repeat Steps 4 and 5.
- If after tightening any loose connections bubbles continue to appear, close the LP cylinder valve, disconnect the LP cylinder, and do not use the appliance. Contact the local retailer where the appliance was purchased.
- 10. Continue with the Lighting Instructions or if the appliance will not be used immediately, close all gas valves and disconnect the LP cylinder.

5.4 Lighting Instructions

Note: To prevent leaving the appliance unattended, have the food prepared, safely stored, and outdoors before lighting the appliance.

1. Make sure the shut-off valve is in the closed position before lighting.

AWARNING

Do not place any part of the body above the appliance

when lighting. Keep your hands, hair, and face away from the burner. Do not lean over the appliance when lighting the burner or cooking.

2.

Open the LP cylinder valve.



Use a long match or spark igniter and slowly open the shut-off valve until the ON burner lights.



4. Adjust the burner flame using the shut-off valve.

AWARNING If the burner does not light within five seconds, first close the shutoff valve and then close the LP cylinder valve OFF. Wait five minutes for fumes to diminish before relighting.

5. After the burner is lit, open the shut-off valve until the flame is at least 5 inches high.



 Use the air flow control bolt on the burner to adjust the flame until it turns blue. Adjust the air flow bolt by hand to either increase or decrease the amount of airflow.



7. If the burner flame does not burn blue, check the burner venturi for obstructions. Dirt daubers, spiders, and other insects will build nests blocking air and gas flow.

8. After each use, close the shut-off valve first then close the LP cylinder valve. Always allow the appliance to cool completely before touching or moving it.

Note: Due to the intense heat from the burner, it is normal for discoloration to occur on the appliance during the first few uses.

- 9. Disconnect the LP cylinder from the appliance when it is not in use.
- 10. The shut-off valves and the LP cylinder valve should both be in the OFF or closed position.



- 11. Close all gas valves and disconnect the LP cylinder.
- 12. Replace the protective LP cylinder cap when the tank is not connected.

6.1 Maintenance Safety

Failure to follow these safety instructions and warnings could result in a fire or an explosion, which could cause property damage, personal injury, or death.

AWARNING



Damaged Parts Hazard

Do not use the appliance if any parts are damaged. If the appliance has any type of defect, immediately stop using it and remedy the problem before continuing.



Improper Maintenance Hazard

Improperly maintaining the appliance can cause a malfunction, which can result in serious injury or death. Always perform a per-operation inspection of the appliance before use and correct any problems found.



Use Only Approved Replacement Parts

Use only approved replacement hoses, valves, or regulators.

Maintenance Guidelines

- 1. Regularly inspect the burner for cracks, abnormal holes, and other signs of significant corrosion or rust damage.
 - The burner is constructed of cast iron and steel and may rust as a result of the extreme heat and splatter from acidic foods.
 - b. Wire brush the outer surface of the burner to remove buildup of food particles, dirt, or other cooking residue.
 - c. Outward surface rust does not affect the use of the appliance.
 - d. Do not tamper with or attempt repairs on the burners. Replace damaged burners with new OEM parts.
 - e. Unauthorized modifications will void the warranty.
- 2. If the burner is hard to light or does not appear to be working correctly, check for an internal obstruction or replace the burner assembly.

AWARNING

Obstruction of combustion and ventilation airflow can prevent

proper gas mixture inside the burner, resulting in a burner tube fire.


3. Inspect the inside of the burner tube for blockage caused by insects or other small animals and/or outdoor debris such as leaves, grass, etc.

To remove any blockage:

- Close the LP cylinder gas valve and shutoff valve.
- Use a narrow bottle brush or a stiff wire to re move any blockage.



4. Check each flame port opening in the diffuser to make sure there is no blockage from food or other debris.

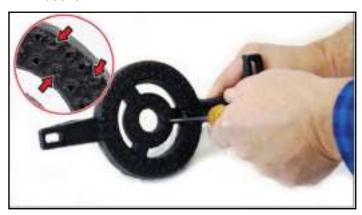

ACAUTION

To prevent potential eye injury, wear safety glasses when

cleaning the burner.

- 5. Regularly inspect the gas pressure regulator hose and shutoff valve.
 - a. Do not tamper with or attempt repairs on the regulator, shutoff valve, or hoses.
 - b. Replace damaged parts with new OEM parts.
 - c. Unauthorized modifications will void the warranty.
- 6. Regularly inspect the LP cylinder tank and valve assembly.
 - a. Do not tamper with or attempt repairs on the tank or valve assembly.
 - b. Replace or exchange damaged tanks.
 - c. Allow only qualified propane gas service technicians to make repairs.
- 7. The exterior of your appliance may be repainted using a high-temperature resistant paint. Perform

all touch-up maintenance to a cool, dry base, at ambient weather temperature.

- a. If any rusting occurs to the base or legs of the appliance, use steel wool to clean or buff the affected area.
- b. Spray paint on the affected areas of the base after it has cooled.
- c. Perform all touch-up maintenance to a cool, dry base, at ambient weather temperature.

AWARNING

Do not use aerosol spray paint or other similar aerosols which

contain flammable petroleum distillates under pressure around open flames. Flame from the burner or a hot surface could cause spray or the spray can to rupture violently, resulting in serious burns, bodily harm, or even death.

7. Storage

- 1. Store the appliance in a dry place.
- 2. Do not store the appliance outside where it would be exposed to the weather.
- 3. Indoor storage of the appliance is permissible only if the LP cylinder is disconnected and removed from this appliance. Refer to section "3.7 LP (Propane) Gas and LP Cylinder Safety" on page 7.
- 4. Store the appliance away from the reach of children.

- 5. For long-term storage, cover the burners and close the air shutter to prevent potential blockage.
- 6. Check and tighten any loose hardware or connections at the beginning of each new season.
- 7. Keep the appliance area clear and free from combustible materials, gasoline, and other flammable vapors and liquids.

8. Transporting

Transporting the appliance should be done in an open bed truck or trailer.

- 1. Remove the LP cylinder from the appliance prior to transporting.
- 2. Make sure the appliance and any cooking liquid is cool to the touch before transporting.
- 3. Do not transport the LP cylinder inside a vehicle containing passengers unless it has a separate cargo space.

- Make sure the tank is leak-free before placing inside a vehicle or trailer.
- b. Transport the tank in an upright position, never on its side.
- c. Place the tank on a flat surface.
- d. Place the tank in a rack or restrain it from movement when transporting to prevent tipping or other damage.

9. Warranty

Carolina Cooker® warrants, to the original purchaser, the appliance to be free of defects in material and workmanship for a period of one year from date of purchase.

Note: Paint finish may burn off under normal use and, therefore, it carries no warranty.



Distributed by Direct Distributors, Inc.

Carolina Cooker® P.O. Box 799 Garner, NC 27529

Orders: 833-926-6537 Inquiries: 844-478-4334 Web: www.CarolinaCooker.com



For a full-size versions of the English, Spanish & French Owner's Guide, scan the QR Code.