



# GRAPHTEC WIRELESS LAN SETUP

## Wireless LAN Setup for the Graphtec CE8000 Series Cutter


Setting up your Wireless LAN is easy and accomplished in a few simple steps.

Please follow the **ON-SCREEN INSTRUCTIONS**:

### 1 Select Language




### 2 Select Unit of Measure

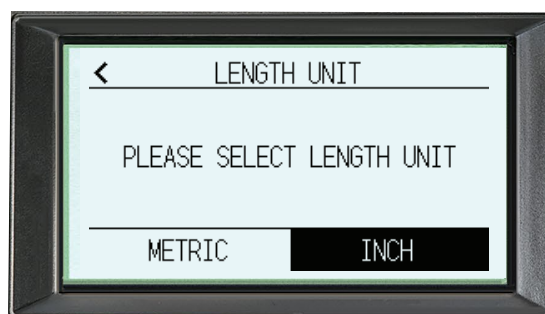

### 3 Confirm Ready for Setup



### 4 Select Wireless Network

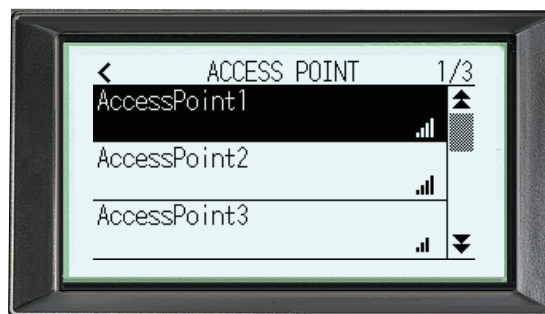

### 5 Input Password

Input the password to your Wireless Network.



### 6 Connect to Wireless Network

When the password has been accepted, it will ask if you want to Connect to the Network.






# GRAPHTEC WIRELESS LAN SETUP

## 7 Assign Dynamic IP Address

When connected, the screen will show the Default Static IP address with DHCP mode turned **OFF**

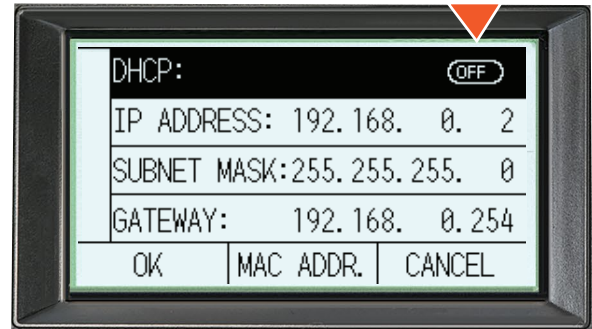


## 8 Switch to DHCP mode

Turn DHCP **ON** and then click **OK**

### THIS STEP IS VERY IMPORTANT:

A Dynamic IP address protocol is set and your cutter will automatically reinitialize.

## 9 Confirmation of Connection

After restarting, your cutter will show the  **WIRELESS ICON** at top right of display.

This indicates the Wireless LAN has been successfully setup and is now ready to be discovered on your Local Wireless Network.

For further information please reference **Chapter 9.2 Connecting via Wireless LAN** from the CE8000 User's Manual.

