



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Source		AV
	Menu/DVD		Menu
	Guide		Guide
	[■][■■]		3D
	Exit/Back		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	[<>]		Format
	→ ▣ ←		TV/R
	[i+] / [≡i]		Info
	Text / [≡] [/≡] []		Text
	■ ■ ▶ / [▼]		Pause
	▶ / I/II		Play
	▶ / I/II		Dual







Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	_ Menu/DVD		Menu
	- Exit/Back		Exit
	- Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	⏸ / [v]		Pause
	▶ / I/II		Play
	▶ / I/II		Dual
	⏮ / [≡●]		<<
	⏮ / [≡●]		TV/R
	⏭ / Subtitle		>>
	⏭ / Subtitle		Subt
	▲		Smart
	■ / [≡□]		Stop
	⏏ / [≡⇅]		Eject
	⏮ / [≡⇅]		I<<
	⏭ / [⊙][≡X]		>>I
	⏭ / [⊙][≡X]		Back





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	P+		Ch +
	P-		Ch -
	Vol-		Vol -
	Vol+		Vol +

Original	Replacement	Original	Replacement
	Fast Forward / [v]		Pause
	Play / I/II		Play
	Play / I/II		Dual
	Fast Reverse / [≡]		Fast Reverse
	Fast Reverse / [≡]		TV/R
	Subtitle		Fast Forward
	Subtitle		Subt
	Smart		Smart
	Stop		Stop
	Eject		Eject
	Eject		Fast Reverse
	Fast Forward / [⊙]		Back
	Fast Forward / [⊙]		Fast Forward

