



# What is a Cisco cBR Series Converged Broadband Router

---

- [Introduction, on page 1](#)
- [Functional Overview, on page 2](#)
- [Cisco cBR-8 Converged Broadband Router, on page 4](#)
- [Supervisor, on page 15](#)
- [Interface Cards, on page 25](#)
- [Power System, on page 33](#)
- [Fan Module, on page 39](#)
- [Air Filter, on page 41](#)
- [Cisco IOS-XE Software, on page 41](#)
- [NEBS Level 3 Compliance, on page 42](#)
- [How and What to Order, on page 42](#)

## Introduction

The Cisco cBR Series Converged Broadband Router (Cisco cBR) is an Edge Services platform designed for cable MSOs. It supports the RF and Data-over-Cable Service Interface Specifications (DOCSIS) interfaces of a Cable Modem Termination System (CMTS) and digital optical interfaces such as Passive Optical Networks (PON) and point-to-point Ten Gigabit Ethernet.

The Cisco cBR supports video including both traditional MPEG video and Video over IP over DOCSIS (VDOC). The advantage of Cisco cBR is the ability to support MPEG video and VDOC in the same platform allowing transition from MPEG to VDOC. The Cisco cBR is a single device that manages the entire RF spectrum of the cable plant.

The Cisco cBR provides high-speed data, broadband, and IP telephony services to residential and commercial subscribers using cable modems or digital set-top boxes (STBs). It supports data and digitized voice connectivity over a bidirectional cable television and IP backbone network. And uses advanced quality of service (QoS) techniques to ensure that real-time traffic such as voice can be reliably delivered, while still transmitting other traffic on a best-effort basis.

The Cisco cBR concentrates traffic from two-way DOCSIS-based cable modems and STBs that is transmitted over the coaxial cable television (CATV) network, and presents that traffic to local and remote Internet Protocol (IP) hosts over its high-speed network uplink interfaces.

The Cisco cBR runs on the Cisco IOS-XE networking software and supports the most advanced networking and routing options.

## Functional Overview

The Cisco cBR provides the following network solutions:

- High speed data access over DOCSIS
- Video over DOCSIS
- Voice services over DOCSIS
- Business services over DOCSIS
- MPEG transport-based video distribution
- Videoscape management system integration
- Data plane optimization to carry ABR traffic including monitoring of quality of service
- Assistance with the support of legacy devices in a Videoscape environment
- Video cache integration

The path from the Cisco CMTS to the cable modem or STB is the downstream, which carries the majority of traffic over the cable interface.

The path from the cable modem or STB to the Cisco CMTS is the upstream, and it carries approximately 10 percent of the traffic that is sent over the downstream.

A large number of users can be assigned to the same downstream, and for efficient use of bandwidth, those users can be split among several different upstream.

The following sections contain information about:

## Upstream Data Path

The following example describes the upstream data path.

1. A request for service is generated by a subscriber. The modem transmits the request as a series of packets to the Cisco CMTS on the upstream.
2. The cable line card receives the packets on its upstream interface and forwards them to its onboard processor.
3. The line card processor verifies the header check sequence (HCS), frame check sequence (FCS), and system identification number (SID), processes all fields in the DOCSIS MAC header, and then removes the header.
  - a. The line card examines and processes the extended headers (Request, Acknowledgment, Privacy, PHSs and Unsolicited Grand Synchronization header elements). If Baseline Privacy Interface (BPI) is used, the processor also decrypts the Privacy EH frames using the appropriate key.
  - b. Bandwidth requests, acknowledgment (ACK) requests, and unsolicited grant syncs are reformatted and passed to the request ring of the Cisco cable line card.

- c. The DOCSIS MAC header is removed and another header is added, which includes the SID, the upstream port information, and status bits that indicate whether any errors were detected.
4. The packet is sent across the backplane to the forwarding processor (FP) or the routing processor (RP) on the route processor.
5. The route processor performs packet operations such as access list processing, classification, switching, and QoS. It is also where major routing and IOS management functions (filtering) are run.
6. The packet is moved to the correct output queue and transmitted over the backplane to the network uplink card (Ten Gigabit Ethernet) or another cable interface line card.
7. The output card forwards the packet to the next interface point.

## Downstream Data Path

The following example describes the downstream data path.


1. Data packets from the Internet are received by the network uplink cards (Ten Gigabit Ethernet).
2. The packets are forwarded to the forwarding processor (FP) on the Supervisor module.
3. The FP performs MAC classification to determine the type of frame or packet to be processed.
4. The route processor performs access list filtering, policing, and marking.
5. The route processor performs a forwarding information base (FIB) lookup and rewrite.
  - a. The rewrite consists of a downstream header and 802.3 MAC header.
  - b. The downstream header contains destination primary SID, physical DS port number, PHS rule index, and some control bits and other fields.
  - c. The packet is policed, shaped, and prepared for queueing. Queueing is based on the priority of the queue and the state of the flow bits from the card. The destination card address (port) is pre-appended on the header of the packet being transmitted.
6. The packet is transmitted over the backplane to the appropriate cable interface line card.
7. The cable interface line card receives the packet and forwards it to all the ASICs on the line card.
  - a. Each ASIC decodes the header to determine if the packet is destined for one of the downstream ports on that card. If so, the downstream header is removed and the 802.3 MAC header is saved.
  - b. The MAC header is processed to determine how to build the DOCSIS MAC header and what operations to perform on the packet. These might include pre-appending the DOCSIS MAC header, computing the HCS and FCS, performing Packet Header Suppression, and BPI encryption.
8. After the packet is ready, it is immediately transmitted on the downstream.

# Cisco cBR-8 Converged Broadband Router

The Cisco cBR-8 Converged Broadband Router (Cisco cBR-8) is a 13 rack unit (RU) chassis. It supports multiple card modules and is designed with back-to-back midplanes; a front facing Digital Midplane and a rear facing RF Midplane.


The front card modules plug into the Digital Midplane and the associated Physical Interface Card (PIC) plugs into the rear of the chassis. All permanent connections to the Cisco cBR-8 chassis are made at the rear.

**Figure 1: Chassis Front View**

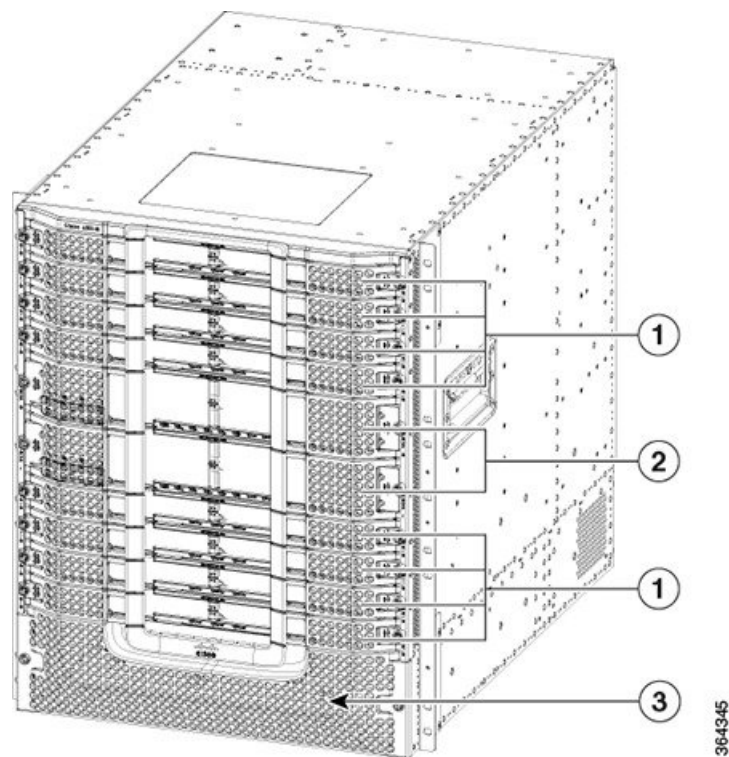


1	Line Cards	3	Front Power Entry Bezel
2	Supervisor Cards		

Figure 2: Chassis Rear View with AC FPWM

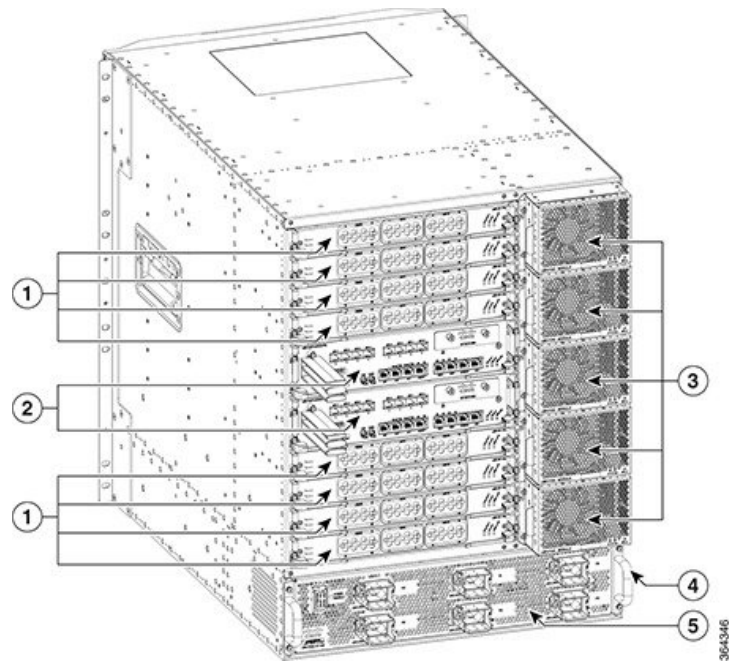

1	Line Card PIC	4	Lifting Handle
2	Supervisor PIC	5	AC FPWM
3	Fan Module		

Figure 3: Chassis Rear View with DC FPWM

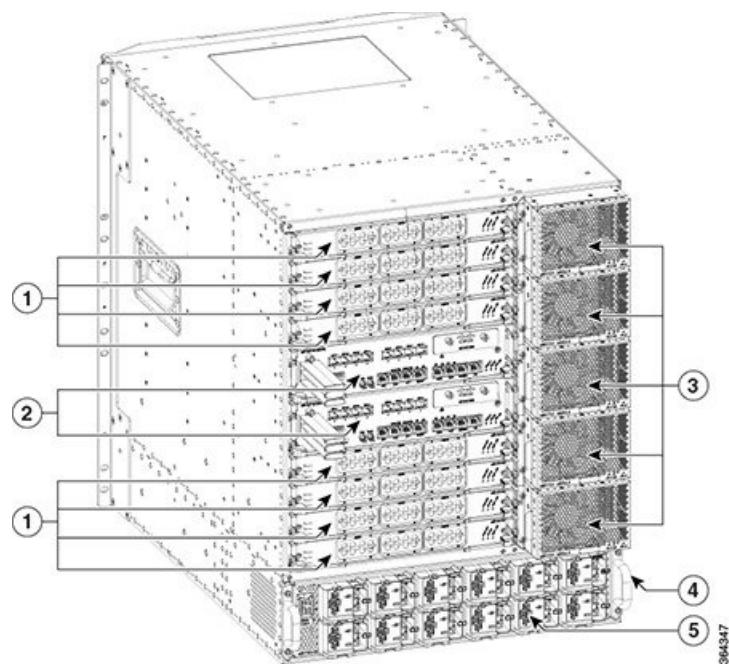

1	Line Card PIC	4	Lifting Handle
2	Supervisor PIC	5	DC FPEM
3	Fan Module		

The Cisco cBR-8 chassis supports:

- Two Supervisor Cards
- Two Supervisor PICs
- Eight Cisco cBR line cards
- Eight Cisco cBR RF PIC cards (seven when the chassis is configured in protect mode) or Eight Cisco cBR DPIC cards (if -R line cards are installed)
- One Cisco cBR RF PROT PIC card (if the chassis is configured in RF protect mode)
- Six DC Power Modules with redundant input feeds or six AC Power Modules
- One Cisco cBR DC FPEM or one Cisco cBR AC FPEM
- Five Fan Modules

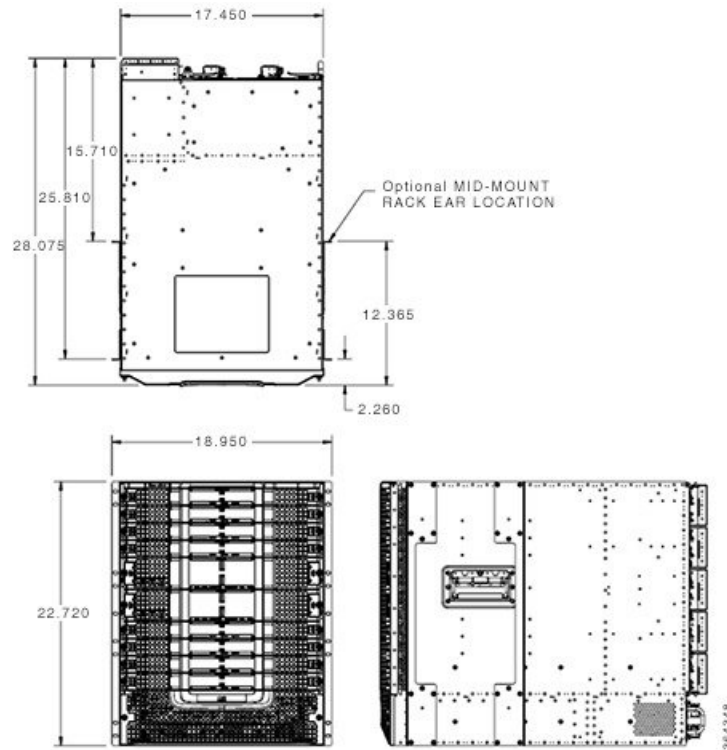
## Physical Description

**Table 1: Cisco cBR-8 Chassis Physical Description Summary**


Parameter	Description
Height	13RU (22.75 in./57.78 cm)
Width	17.45 in. (44.32 cm) without rack mounts 17.65 in. (44.83 cm) with rack mounts
Overall Depth	28.075 in. (71.3 cm)
Weight	429 lb (195 kg) maximum fully loaded
Airflow	Front-to-back

### Cisco cBR-8 Chassis Dimensions

The below image shows the basic dimensions of the Cisco cBR-8 chassis.

**Figure 4: Basic Dimension**

The below image shows the overall dimensions of the Cisco cBR-8 chassis with optional cable management and rear door cable protection.

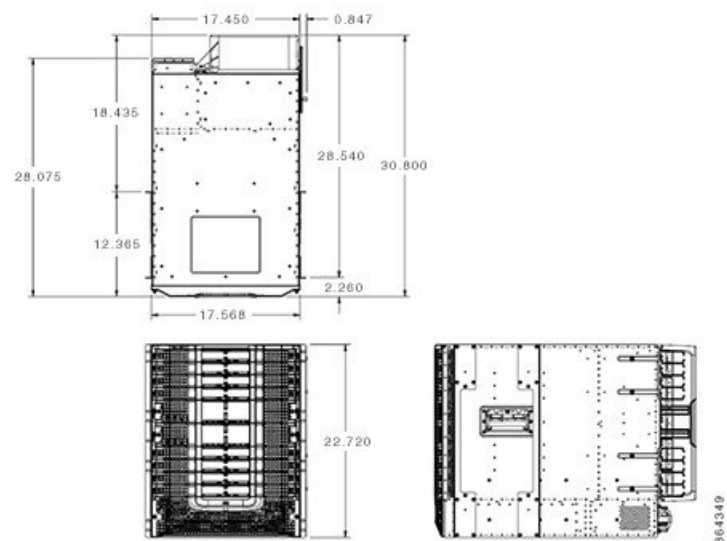**Figure 5: Overall Dimension**

## Cisco cBR-8 Chassis Features

### Digital Midplane

The Digital Midplane provides connectivity between various components in the chassis. It provides the interconnect between the supervisors and all the interface slots. This interconnect includes differential pairs used for ESI data plan links, Gigabit Ethernet/Ten Gigabit Ethernet control plane links, timing and single-ended signals used for status and control functions. It also has connections for status and control of PICs, the power shelf, and the fan modules.

### RF Midplane

The RF midplane interconnects all RF-capable slots to allow backup RF line cards to send and receive RF signals to and from an active RF line card PIC. It is designed to support a maximum of 24 RF ports on a PIC with all ports carrying signals with frequency content up to 1.2 GHz. It supports downstream, upstream, and a mixture of both.

### Rear Door (Optional)

The rear door provides protection to the PIC cables.

### Lifting Handles

The Cisco cBR-8 chassis has four handles available for lifting. It is recommended to remove all circuit cards before attempting to install the chassis in a rack, but at a minimum, the front Supervisors and line cards should be removed before lifting the chassis with the available handles.

The accessory kit that ships with the chassis includes rack mount rails. These can be pre-assembled in the rack to help slide the chassis into place. An optional front mounted lifting handle is also available to help with chassis installation.

### Rear Cable Connectivity

All permanent facility cabling is on the rear of the chassis. Connectors on the PICs provide connectivity to the front mounted Supervisors and line cards.

### Front Side LED and Temporary I/O Locations

The LEDs are situated at the lower middle area on all the front mounted cards. Temporary I/O connectivity ports are available on the left side of the Supervisor Card behind a removable door in the ejector handle.

## Slot Numbering—Physical and Logical

*Table 2: Physical Slot Numbering on the Cisco cBR-8 Router*

Component	Slot Numbering
Front and Rear Circuit Cards	<p>Identified by a two number system. The numbers are separated by a forward slash.</p> <ul style="list-style-type: none"> <li>The first number indicates the slot number (starting with 0 for the first slot at the top).</li> <li>The second number indicates the side of the chassis. That is, 0 is for front-mounted cards and 1 is for rear-mounted cards.</li> </ul> <p>However, on Cisco IOS-XE, the <b>show platform</b> command does not show the second number 0 for front-mounted cards.</p>
Supervisor Cards	Identified as SUP0 and SUP1.



Component	Slot Numbering
Power Supply Modules	Numbered from P0 to P5 and these map to the facility power outlet markings on the rear of the chassis.
Fan Modules	Numbered from P10 (the top fan module slot) to P14 (the bottom fan module slot).

**Figure 6: Slot Numbering—Front of the Chassis With AC Power Module**

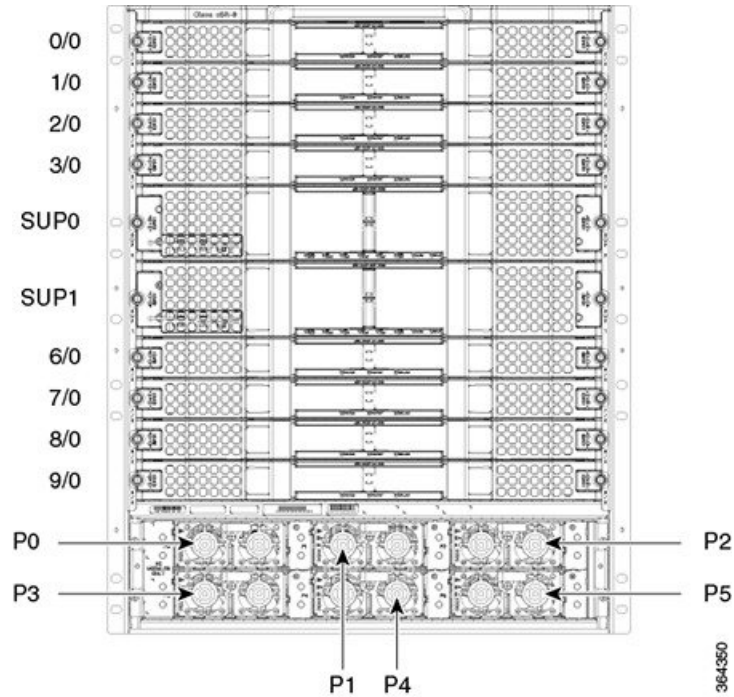


Figure 7: Slot Numbering—Front of the Chassis With DC Power Module

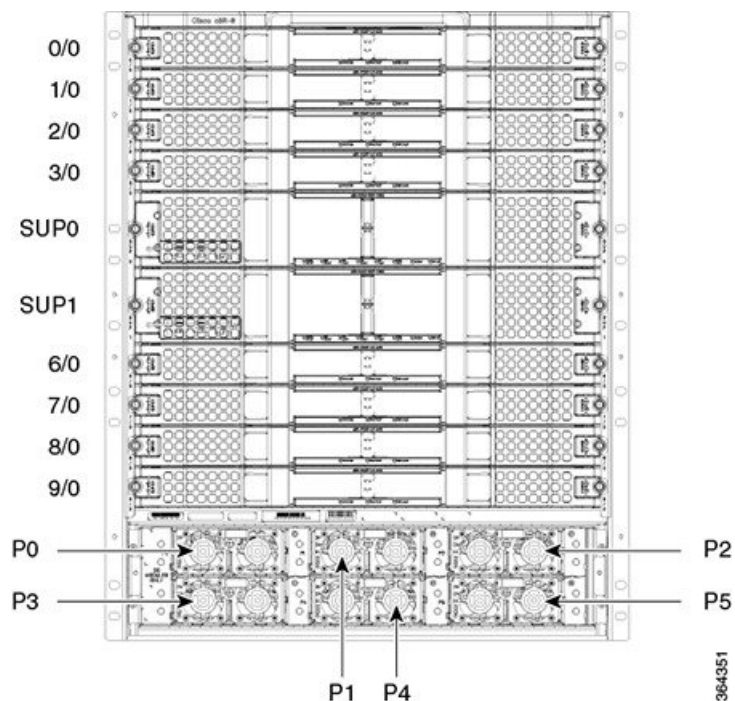


Figure 8: Slot Numbering—Rear of the Chassis With AC Power Module

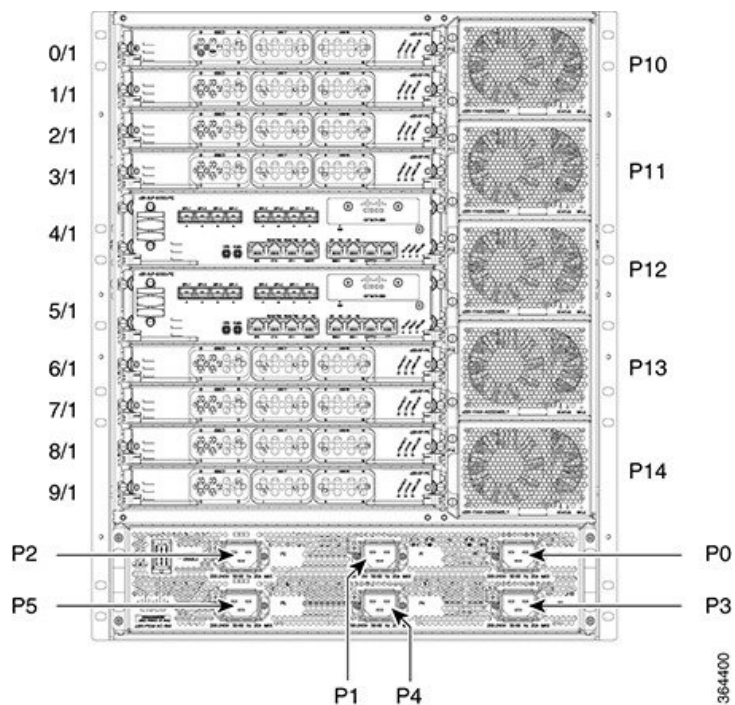


Figure 9: Slot Numbering—Rear of the Chassis With DC Power Module

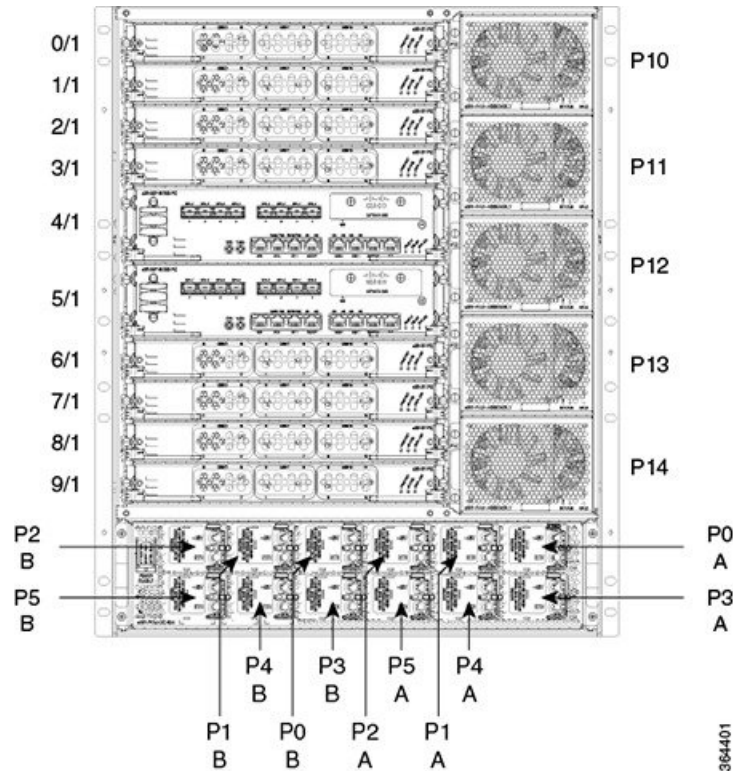


Table 3: Logical Slot Numbering on the Cisco cBR-8 Router

Variable	Component	Description	Valid Range/Values
<b>Release—Cisco IOS-XE Release 3.15.0S</b>			
<i>Slot</i>	Interface card	Slot where the interface card resides.	0 to 3 and 6 to 9
	Supervisor card	Slot where the Supervisor card resides.	4 or 5
<i>Subslot</i>	Interface card	Secondary slot where the interface card resides.	0
	Supervisor card	Secondary slot where the Supervisor card resides.	1
<i>Port</i>	Interface card (downstream)	Downstream controller port on the interface card.	0 to 7
	Interface card (upstream)	Upstream controller port on the interface card.	0 to 15
	Supervisor card	Controller port on the Supervisor card.	0 to 7 (For Ten Gigabit Ethernet ports)

Variable	Component	Description	Valid Range/Values
<i>cable-interface-index</i>	Interface card	MAC domain index of the interface card.	0 to 15
<i>logical-channel-index</i>	NA	NA	NA
<i>rf-channel</i>	Interface card (downstream)	RF channel number on the interface card.	0 to 159
	Interface card (upstream)	RF channel number on the interface card.	0 to 11
	Supervisor card	RF channel number on the Supervisor card.	NA
<i>wideband-channel</i>	Interface card	Wideband channel number on the interface card.	0 to 63
	Supervisor card	Wideband channel number on the Supervisor card.	NA

## Field Replaceable Units

**Table 4: Cisco cBR-8 Chassis Modules and their Function**

Hardware Module	Function Description
Supervisor (SUP)	The route and forwarding processor of the system and includes integrated backhaul capability.
Supervisor PIC	Provides the supervisor physical interface to the facility located on these cards.
Subscriber Side Interface Card (SSI Card)	Provides the service side functionality such as DOCSIS, Edge QAM, EPON, or other service blades.
SSI PIC	Provides the physical interface to the facility for the SSI Cards.
Power Modules (AC or DC)	<p>Provide power conversion, filtering, and conditioning from facility input power to the required -52V midplane power that is used within the chassis.</p> <p>There are specific AC and DC modules depending on the facility input voltage. The power modules provide their own cooling using internal fans.</p>

Hardware Module	Function Description
Facility Power Entry Module (FPEM) (AC/DC)	Provides the physical hookup interface and interconnection to the power modules for either the AC or DC input voltage. The digital communication from the power modules to the digital midplane; and the power interconnect from the power modules to the midplane Bus Bar. This module is field replaceable to allow the facility to change from AC to DC or DC to AC in the future without having to replace the chassis.
Power Cassette Module	Provides the physical support and keying for the power supply modules. It is keyed with a corresponding FPEM to determine AC or DC support.
Fan Module	Provides forced air cooling for the front and rear card slots.

**Table 5: Card Slot Pitch Definitions**

Slot Type	Quantity and Pitch
Supervisor Slots	2 in the front of chassis on a 2.75" pitch
Supervisor PIC Slots	2 in the rear of chassis on a 2.75" pitch
SSI Card Slots	8 in the front of chassis on a 1.48" pitch
SSI PIC Slots	8 in the rear of chassis on a 1.48" pitch
Power Cassette Module	6 power supply bays in the front of the chassis
Facility Power Entry Module (FPEM) (AC/DC)	1 in the bottom, rear of the chassis
Fan Module	5 in the rear of the chassis on a 3.5" pitch

**Table 6: Maximum Weight for Cards and Modules**

Module	Maximum Weight
Supervisor Slots	26 lbs.
Supervisor PIC Slots	6 lbs.
SSI Card Slots	19 lbs.
NSI/SSI Slots	19 lbs.
SSI PIC Slots	5 lbs.
NSI/SSI PIC Slots	5 lbs.
Power Cassette Module	6 lbs.

Module	Maximum Weight
Power Cassette (AC/DC)	17 lbs.
Facility Power Entry Module (FPEM) (AC/DC)	15 lbs.
Fan Module	4 lbs.
13RU Chassis Estimated Weight (with midplanes and Bus Bar)	85 lbs. <sup>1</sup>
13RU Loaded Chassis Estimated Weight (maximum)	429 lbs.

<sup>1</sup> 117 lbs. with Power Cassette Module and FPEM (recommended configuration during installation)

**Table 7: Card Slot Power Allocation**

Module	Maximum Power Allocated (Watts)
Supervisor Slots	930
Supervisor PIC Slots	120
SSI Card Slots	530
SSI PIC Slots	60
Fan Module	170
Bus Bar + Midplane Loss	150
cBR-8 Total Power Allocation (power to Bus Bar from FPEM)	7820
cBR-8 Facility Power Requirement	9000

**Table 8: Chassis System Module Overall Dimensional Envelopes**

Module	Envelope Size (width x height x depth)
Supervisor Card	17.24" x 2.75" x 19.99"
Supervisor PIC	11.80" x 2.75" x 7.82"
SSI Card	17.24" x 1.48" x 19.99"
SSI PIC	11.80" x 1.48" x 7.82"
Fan Module	5.16" x 3.50" x 8.39"
AC FPEM	17.45" x 3.85" x 10.08"
DC FPEM	17.45" x 3.85" x 10.08"
AC Power Supply Module	4.00" x 1.60" x 16.94"

Module	Envelope Size (width x height x depth)
DC Power Supply Module	4.00" x 1.60 x 16.94"
Power Cassette Module	17.3" x 3.7" X 16.9"

## Supervisor

### Cisco cBR-8 Converged Cable Access Router Supervisor 160G

The Supervisor is the processor of the Cisco cBR. It consists of a forward processor (FP) complex and route processor (RP) complex.

The FP complex performs data forwarding, baseline router packet operations including MAC classification, Layer 2 and the various Layer 3 forwarding, QoS classification, security ACLs, VPNs, policing, shaping, load balancing, egress packet buffering, queueing, and egress packet scheduling functions. The FP complex supports Network Address Translation (NAT), flexible pattern matching, and tunneling protocols.

The RP complex performs route processing, Cisco cBR chassis management, and runs the network operating system and its controls.

The Supervisor supports:

- Eight Ten Gigabit Ethernet backhaul interfaces.
- 1+1 active/standby redundancy.
- Chassis management of the Cisco cBR including activation and initialization of the other cards, selection and switch over of the active and standby cards, image management and distribution, logging facilities, distribution of user configuration information .
- DOCSIS Timing Interface (DTI) client and server ports.
- Online insertion and removal (OIR).

The Supervisor consists of the following field replaceable units (FRUs):

- Supervisor Card
- Supervisor physical interface card (PIC)


The Cisco cBR-8 supports:

- Two 160G Supervisor Cards
- Two 8x10G Supervisor PICs

#### Supervisor Card

The Supervisor Card is the route processor of the Cisco cBR and includes integrated backhaul capability. It is installed in the front of the Cisco cBR chassis. The plastic latch maintains the alignment of the spring-loaded ejector with the faceplate. The Supervisor Card has a tethered door to allow access to the ports on its faceplate.

Figure 10: Supervisor Card

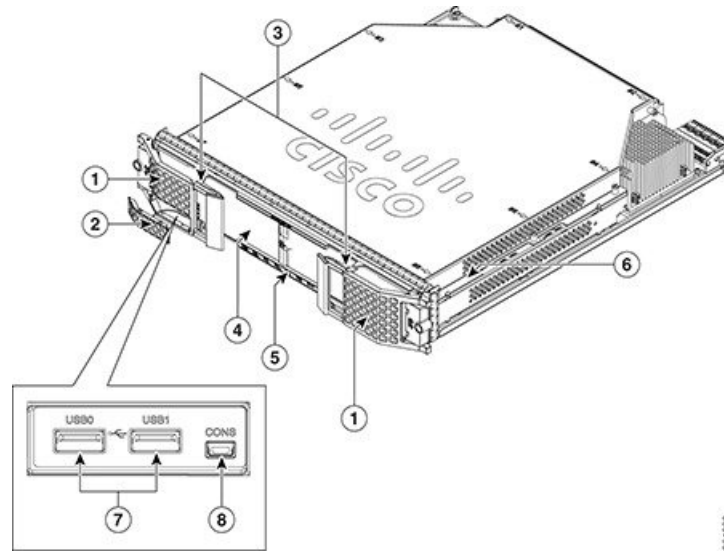

1	Spring-loaded ejector	5	LEDs
2	Tethered I/O door	6	Support rails
3	Plastic latch	7	USB ports
4	Removable air filter	8	Console port

Table 9: Physical Specifications of the Supervisor Card

Unit	Value
Depth	20 in (50.8 cm)
Width	17.2 in (43.68 cm)
Height	2.8 in (7.11 cm)
Maximum weight	26 lb (11.79 kg)

Table 10: Ports on the Supervisor Card

Port	Description
USB ports	The Supervisor Card has two type-A USB ports. These ports are used for connecting external memory sticks or flash drives to load configurations.
Console port	The Supervisor Card has one mini type-B USB console port. This port is an asynchronous EIA/TIA-232 serial port used to connect a terminal to the Supervisor Card for local administrative access.





**Note** The ports on the Supervisor Card are used for temporary connections. For all permanent connections, including the console connection, you must use the ports on the Supervisor PIC installed in the rear of the chassis.

The Supervisor Card has the following LEDs:

LED	Description
PWR STAT	Power status LED
RP STAT	RP status LED
RP ACT	RP active LED
FP STAT	FP status LED
FP ACT	FP active LED
INSI ACT	iNSI active LED
ALRM	Alarm LED
RPLC	Replace LED

The router supports the following Supervisor Cards:

- CBR-CCAP-SUP-60G—Supervisor Card with 60 Gbps forwarding capacity. It supports a maximum of four interface cards, working in 3+1 protection mode, on the Cisco cBR-8 router. It supports a maximum of 72268 unicast flows or 88268 modular quality of service (MQoS) flows. The maximum number of unicast and MQoS flows supported is 88268.



**Note** If you are using the CBR-CCAP-SUP-60G Supervisor Card in Cisco IOS-XE Release 3.15.0S, the output of the **show inventory** command displays the CBR-CCAP-SUP-160G PID instead of the CBR-CCAP-SUP-60G PID.

- CBR-CCAP-SUP-160G—Supervisor Card with 160 Gbps forwarding capacity. It supports a maximum of eight interface cards, working in N+1 protection mode, on the Cisco cBR-8 router.




**Important** Different Supervisor Cards cannot coexist on a Cisco cBR-8 router. We recommend that you install the Supervisor Cards with the same capacity in the chassis to ensure proper redundancy support.

### Supervisor PIC

The Supervisor PIC provides the physical interface to the Supervisor Card. It is installed in the rear of the Cisco cBR chassis.

Figure 11: Supervisor PIC

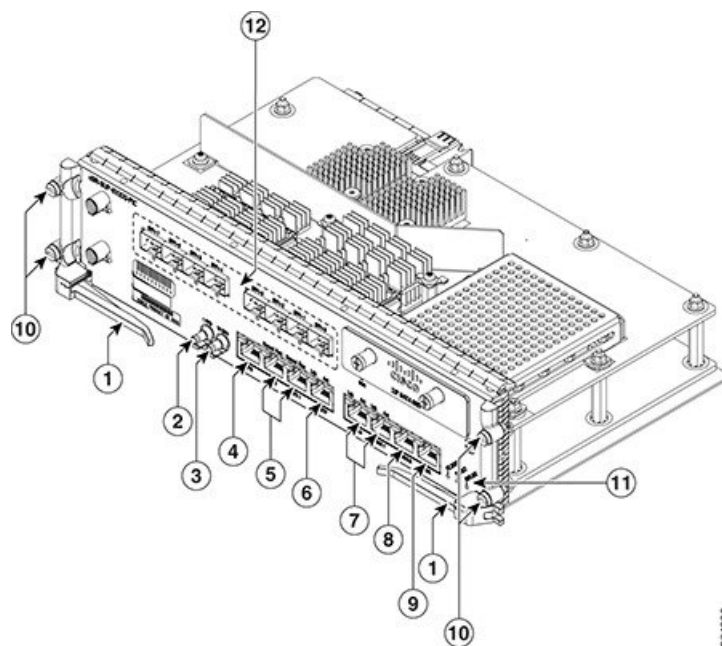

1	Ejector lever	7	NME ports
2	Timing port (1 PPS)	8	Console port
3	Timing port (10 MHz)	9	Auxiliary port
4	GPS port	10	Captive screws
5	DTI ports	11	LEDs
6	CM/DTP port	12	SFP+ ports

Table 11: Physical Specifications of the Supervisor PIC

Unit	Value
Depth	7.82 in (19.86 cm)
Width	11.8 in (29.97 cm)
Height	2.8 in (7.11 cm)
Maximum weight	6 lb (2.72 kg)

**Table 12: Ports on the Supervisor PIC**

Port	Description
SFP+ ports	The Supervisor PIC has eight Ten Gigabit Ethernet SFP (SFP+) ports. These ports are used to connect it to the switch or router. These ports provide backhaul connection to the WAN network.
Timing ports	The Supervisor PIC has two timing ports, 1 PPS and 10 MHz ports, which are reserved for future use.
GPS port	The Supervisor PIC has a GPS port, which is reserved for future use.
DTI ports	The Supervisor PIC has two DTI ports. These ports are used for connecting to DTI server as a reference clock source.
CM/DTP port	The Supervisor PIC has a CM/DTP port, which is reserved for future use.
NME ports	The Supervisor PIC has two NME ports. These ports are the Gigabit Ethernet management ports. One port is used for network management and is used to connect to a switch and the other port is reserved for future use.
Console port	The Supervisor PIC has one RJ-45 console port. This port is an asynchronous EIA/TIA-232 serial port used to connect a terminal to the Supervisor PIC for local administrative access.
Auxiliary port	The Supervisor PIC has one auxiliary port. This port is used to connect a terminal server to the Supervisor PIC for verifying the system status.

The Supervisor PIC has the following LEDs:

LED	Description
PIC_STAT	Supervisor PIC status LED
INSI_ACT	iNSI active LED
REPLACE	Replace LED
SFP+	SFP+ module and link status LED
DTI Normal	DTI normal mode status LED
DTI Fast	DTI fast mode status LED
NME Lnk	NME module link status LED

LED	Description
NME Act	NME module link active LED
SSD	SSD access status LED
CM/DTP Lnk	Reserved for future use
CM/DTP Act	Reserved for future use

## Cisco cBR-8 Converged Cable Access Router Supervisor 250G

The Cisco® cBR-8 Converged Cable Access Router Supervisor 250G perform the data forwarding and routing processing functions of carrier-class and high performance cBR-8 Converged Cable Access Router. Not only does the supervisor provide advanced routing capabilities, but it also monitors and manages other components in the Cisco® cBR-8 Converged Cable Access Router. The supervisor consists of two FRU (Field Replaceable Unit): Supervisor and Supervisor PIC (Physical Interface Card). Supervisor PIC card has all the physical interface ports and related PHY component on board.

As the management processor for the Cisco® cBR-8 Converged Cable Access Router, the supervisor also performs the following management functions: chassis management including activation and initialization of the other cards, selection/switchover of active vs. standby cards, image management and distribution, logging facilities, distribution of user configuration information, monitor and manage the power and temperature of system components such as line cards, power supplies, and fans, provide out-of-band system console and auxiliary ports, USB, and Ethernet ports for router configuration and maintenance etc. Supervisor works together with SUP PIC offering below main features:

- Provides up to 250Gbps Downstream and Upstream aggregated forwarding capacity
- Flexible data path interconnection between active and standby supervisors to support a total of 2x100G worth of active-active backhaul bandwidth
- Integrate full range of industry-leading Cisco IOS® Software features and services
- SSD memory (240G) for syslog/debug information/image/package storage
- Run with the modular Cisco IOS XE Software for the Cisco® cBR-8 Converged Cable Access Router
- Provide 1+1 redundant-supervisor support
- Two Integrated 1x100G NSI (Network Side Interface) backhaul interfaces on Supervisor PIC. The interface can support either QSFP28 or QSFP+ module
- Two RJ45 GE network management ports are hardware capable of supporting Synchronous Ethernet
- High Availability: 1+1 active/active NSI or iNSI interface redundancy, 1+1 DTI client (PIC) redundancy, 1+1 network timing redundancy (DOCSIS, PTP, Synchronous Ethernet)
- Offer field-replaceable and hot-swappable capabilities to help ensure minimal service disruption


The Cisco cBR-8 supports:

- Two 250G Supervisor Cards
- Two 2x100G Supervisor PICs

## Supervisor Card

The Supervisor Card is the route processor of the Cisco cBR and includes integrated backhaul capability. It is installed in the front of the Cisco cBR chassis. The plastic latch maintains the alignment of the spring-loaded ejector with the faceplate. The Supervisor Card has a tethered door to allow access to the ports on its faceplate.

**Figure 12: Supervisor Card**

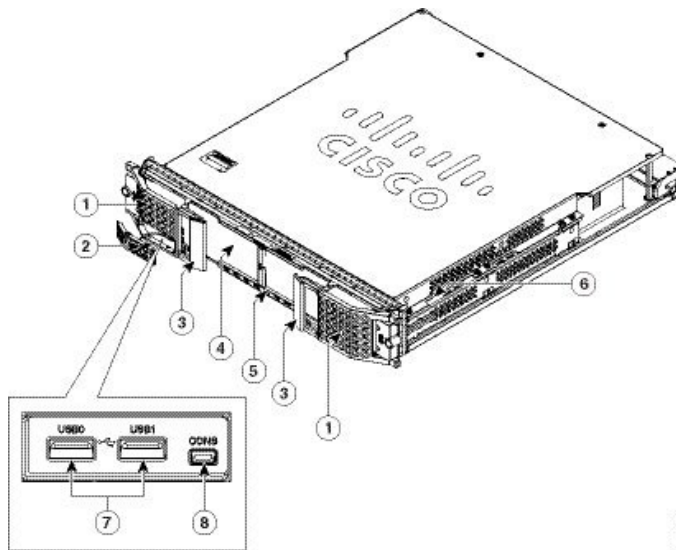

1	Spring-loaded ejector	5	LEDs
2	Tethered I/O door	6	Support rails
3	Plastic latch	7	USB ports
4	Removable air filter	8	Console port

**Table 13: Physical Specifications of the Supervisor Card**

Unit	Value
Depth	19.98 in (50.7 cm)
Width	16.27 in (41.3 cm)
Height	2.82 in (7.16 cm)
Maximum weight	26 lb (11.8 kg)

**Table 14: Ports on the Supervisor Card**

Port	Description
USB ports	The Supervisor Card has two type-A USB ports. These ports are used for connecting external memory sticks or flash drives to load configurations.

Port	Description
Console port	The Supervisor Card has one mini type-B USB console port. This port is an asynchronous EIA/TIA-232 serial port used to connect a terminal to the Supervisor Card for local administrative access.



**Note** The ports on the Supervisor Card are used for temporary connections. For all permanent connections, including the console connection, you must use the ports on the Supervisor PIC installed in the rear of the chassis.

The Supervisor Card has the following LEDs:

LED	Description
PWR STAT	Power status LED
RP STAT	RP status LED
RP ACT	RP active LED
FP STAT	FP status LED
FP ACT	FP active LED
INSI ACT	iNSI active LED
ALRM	Alarm LED
RPLC	Replace LED




**Important** Different Supervisor Cards cannot coexist on a Cisco cBR-8 router. We recommend that you install the Supervisor Cards with the same capacity in the chassis to ensure proper redundancy support.

### Supervisor PIC

The Supervisor PIC provides the physical interface to the Supervisor Card. It is installed in the rear of the Cisco cBR chassis.

Figure 13: Supervisor PIC

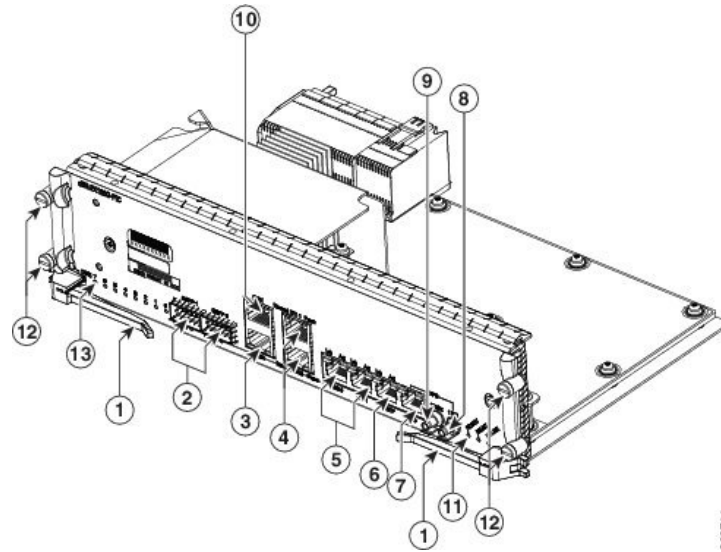

1	Ejector lever	8	Timing port (1 PPS)
2	QSFP ports	9	Timing port (10 MHz)
3	Auxiliary port	10	Console port
4	DTI ports	11	LEDs
5	NME ports	12	Captive screws
6	CM/DTP port	13	10G LED
7	TOD port		

Table 15: Physical Specifications of the Supervisor PIC

Unit	Value
Depth	8.1 in (20.6 cm)
Width	11.79 in (29.9 cm)
Height	2.82 in (7.16 cm)
Maximum weight	3.44 lb (1.56 kg)

Table 16: Ports on the Supervisor PIC

Port	Description
QSFP ports	The Supervisor PIC has two QSFP ports. These ports are used to connect it to the switch or router. These ports provide backhaul connection to the WAN network.
Timing ports	The Supervisor PIC has two timing ports, 1 PPS and 10 MHz ports, which are reserved for future use.
TOD port	The Supervisor PIC has a Time of Date (ToD) port.
DTI ports	The Supervisor PIC has two DTI ports. These ports are used for connecting to DTI server as a reference clock source.
CM/DTP port	The Supervisor PIC has a CM/DTP port, which is reserved for future use.
NME ports	The Supervisor PIC has two NME ports. These ports are the Gigabit Ethernet management ports. One port is used for network management and is used to connect to a switch and the other port is reserved for future use.
Console port	The Supervisor PIC has one RJ-45 console port. This port is an asynchronous EIA/TIA-232 serial port used to connect a terminal to the Supervisor PIC for local administrative access.
Auxiliary port	The Supervisor PIC has one auxiliary port. This port is used to connect a terminal server to the Supervisor PIC for verifying the system status.

The Supervisor PIC has the following LEDs:

LED	Description
PIC_STAT	Supervisor PIC status LED
INSI_ACT	iNSI active LED
REPLACE	Replace LED
SFP+	SFP+ module and link status LED
DTI Normal	DTI normal mode status LED
DTI Fast	DTI fast mode status LED
NME Lnk	NME module link status LED
NME Act	NME module link active LED



LED	Description
SSD	SSD access status LED
CM/DTP Lnk	Reserved for future use
CM/DTP Act	Reserved for future use

## Interface Cards

The Subscriber Side Interface (SSI) card (line card) provides the DOCSIS MAC/PHY or DOCSIS MAC function in the Cisco cBR router.

The front of the line card has spring-loaded ejectors with plastic latches, on both sides of the interface line card. The plastic latch maintains the spring-loaded ejector's alignment with the faceplate.

The line cards have perforated grill faceplate that allow air flow into the card. There is a removable filter in the front panel of the line card. This filter filters the air flowing into the chassis through the perforated grill faceplate.

All interface cards in the Cisco cBR-8 chassis are designed for High Availability (HA) with a N+1 redundancy scheme.

The Cisco cBR-8 supports the following interface cards:

- Interface Line Card (SSI Card, DOCSIS MAC or DOCSIS MAC/PHY line card)—Provides the service side functionality such as DOCSIS, Edge QAM, EPON, or other service blades.
- RF Through PIC or Digital Through PIC—Connects to the interface line card. This PIC provides the physical interface to the facility for the line card.
- RF Protect PIC or Digital Protect PIC—Provides connection of the redundant line card to the appropriate Through PIC.

### Interface Line Card Blank

Apart from the operational interface line cards, an interface line card blank (line card blank) is installed in any empty unused line card slot, to ensure proper airflow within the operational chassis.

### PIC Blank

Apart from the operational PICs, a PIC blank is installed in any empty unused PIC slot, to ensure proper airflow within the operational chassis.

### Protect Zone

To configure N+1 RF redundancy, the interface line card installed in the uppermost slot is configured as the Protect line card with the Protect PIC installed in the corresponding PIC slot. The working line cards and the Through PIC cards installed successively below the Protect line card and PIC card form a Protect Zone. The following are the restrictions for the Protect Zone:

- Each protect zone has one Protect PIC card at the top with a set of Through PIC cards installed successively below the protect line card.

- A PIC card blank should not be installed within a protect zone. It is not necessary to have a line card in every slot of a protect zone.
- If another line card is configured as a Protect line card, then it forms a separate Protect Zone with the successive working line cards below it.
- Every Protect line card must have an Protect PIC installed in the corresponding PIC slot in the rear of the chassis.

Refer to the [FRU list](#) and the [ordering information](#) for more information.

## DOCSIS MAC/PHY Cards


A DOCSIS MAC/PHY line card is paired with an RF Physical Interface Card (RF Through PIC or RF Protect PIC).

### RF Interface Line Cards

The Cisco cBR chassis supports the following RF Interface Line Cards:

- DOCSIS MAC/PHY SSI Card with two downstream D3.1 modules and one upstream D3.1 module installed. [PID: CBR-LC-8D31-16U31]
- DOCSIS MAC/PHY SSI Card with one downstream D3.1 modules and one upstream D3.1 module installed. [PID: CBR-LC-4D31-16U31]
- DOCSIS MAC/PHY SSI Card with two downstream D3.0 modules and one upstream D3.0 module installed. [PID: CBR-LC-8D30-16U30]

**Figure 14: RF Interface Line Card**

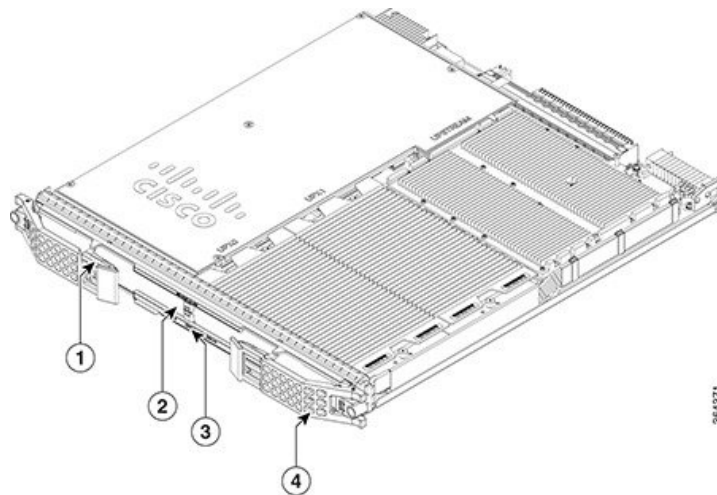

1	Plastic latch	3	LEDs
2	Removable Filter	4	Spring-loaded ejector

**Table 17: Physical Specifications of Interface Line Card**

Unit	Value
Depth	20 in (50.8 cm)
Width	17.2 in (43.7 cm)
Height	1.5 in (3.8 cm)
Maximum Weight	19 lbs (8.61 kg)

**Table 18: Ports in the Interface Line Card**

Ports	Description
Downstream ports	The SSI Card has 8 downstream ports. These ports support downstream DOCSIS and MPEG traffic on the downstream PHY modules.
Upstream DOCSIS ports	The SSI Card has 16 upstream DOCSIS ports. These ports support upstream DOCSIS traffic on the upstream PHY module.

The line card has the following LEDs:

LED	Description
STATUS	Status of the card.
PROTECT	Protect configuration status of the card.
REPLACE	Indicates if the card must be replaced.

### Downstream PHY Module

Each interface line card supports two downstream PHY modules. The Cisco cBR chassis supports the following downstream PHY module versions:

- Downstream D3.0 (supporting DOCSIS 3.0). [PID: CBR-D30-DS-MOD]



**Note** Cisco IOS XE Gibraltar 16.12.x and later releases do not support downstream D3.0 module. [PID: CBR-D30-DS-MOD]

- Downstream D3.1 (supporting DOCSIS 3.1). [PID: CBR-D31-DS-MOD]



**Note** The Downstream D3.1 module has a green label on it.

The following limitations are applicable to the downstream PHY modules:

- All interface line cards in the chassis must have the same downstream PHY module version; that is all D3.0 or D3.1 modules.
- In an interface line card, both the downstream PHY modules must be the same version; that is both D3.0 or both D3.1 modules.
- The downstream D3.1 modules are supported only with the Cisco IOS-XE Release 3.16.0S and later releases.
- If the downstream D3.1 modules are installed with the Cisco IOS-XE Release 3.15.0S, the downstream D3.1 modules will boot up, but not function properly.
- With the Cisco IOS-XE Release 3.16.0S, the downstream D3.1 module provides operational readiness for the implementation of DOCSIS 3.1 functions and features.

### Upstream PHY Module

Each interface line card supports one upstream PHY module. The Cisco cBR chassis supports the following upstream PHY module versions:

- Upstream D3.0 (supporting DOCSIS 3.0). [PID: CBR-D30-US-MOD]
- Upstream D3.1 (supporting DOCSIS 3.1). [PID: CBR-D31-US-MOD]




---

**Note** The Upstream D3.1 module has a green label on it.

---

The following limitations are applicable to the upstream PHY modules:

- All interface line cards in the chassis must have the same upstream PHY module version; that is all D3.0 or D3.1 modules.
- The upstream D3.1 module is supported only with the Cisco IOS-XE Release 3.18.0S and later releases.
- If the upstream D3.1 modules are installed with the Cisco IOS-XE Release 3.17.0S, the upstream D3.1 modules will boot up, but not function properly.
- With the Cisco IOS-XE Release 3.18.0S, the upstream D3.1 module provides operational readiness for the implementation of DOCSIS 3.1 functions and features.

### RF PICs

The RF PICs are installed into the rear of the Cisco cBR chassis.


The RF PICs support the PHY and RF interface connections for the interface line cards. The following are the two types of RF PICs used in the Cisco cBR chassis:

- RF Through PIC
- RF Protect PIC

### RF Through PIC

The RF Through PIC connects to the line cards on the digital and RF midplanes, and provides downstream and upstream physical connectivity. It connects to the DOCSIS MAC/PHY line card.

Figure 15: RF Through PIC

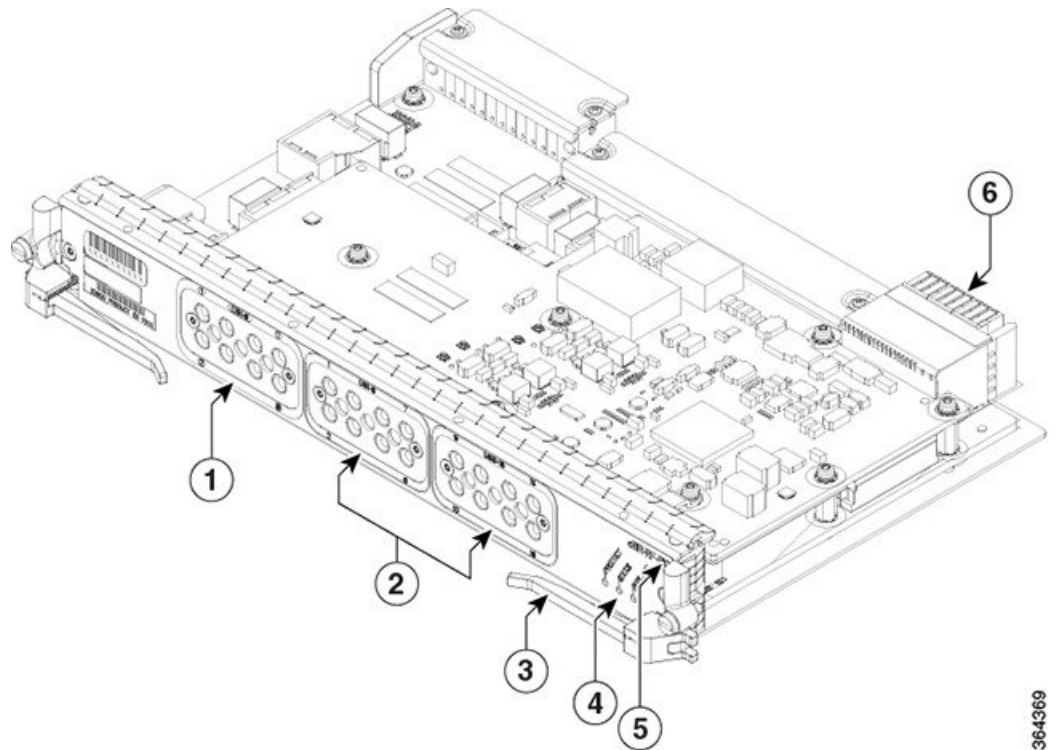

1	Downstream ports DS0 to DS7	4	LEDs
2	Upstream ports US0 to US7 and US8 to US15	5	Product Identifier (PID)
3	Ejector Lever		

Table 19: Physical Specifications of the RF PICs

Unit	Value
Depth	7.8 in (19.8 cm)
Width	11.8 in (30 cm)
Height	1.5 inch (3.8 cm)
Maximum Weight	5 lbs (2.26 kg)

The RF Through PIC has the following ports:

Ports	Description
DS0 to DS7	The RF Through PIC has eight 50-1200 MHz RF connector ports that provide downstream channel connectivity.

Ports	Description
US0 to US7 and US8 to US15	The RF Through PIC has sixteen 5-204 MHz RF connector ports that provide upstream channel connectivity.


The RF PICs have the following LEDs:

LED	Description
STATUS	Status of the card.
PROTECT	Protect configuration status of the card.
REPLACE	Indicates if the card must be replaced.

### RF Protect PIC

The RF Protect PIC provides redundancy support for the N+1 high availability features, to the RF Through PICs in the chassis. It has only the LEDs on its faceplate. It does not have the downstream and upstream ports.

**Figure 16: RF Protect PIC**

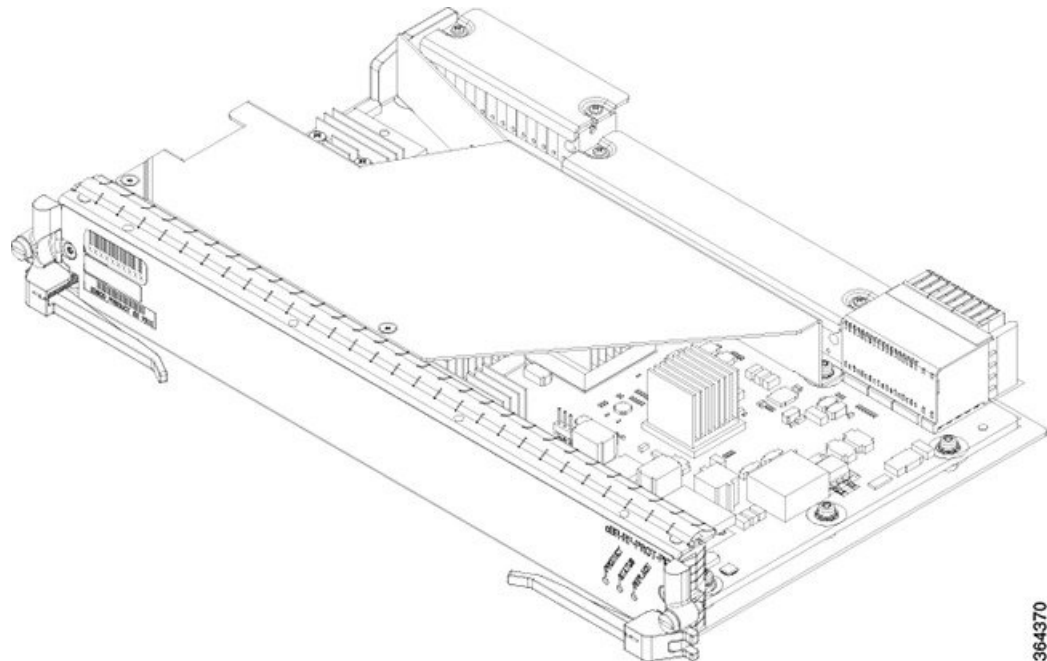

364370

## DOCSIS MAC Cards

A DOCSIS MAC line card is paired with an Digital Interface Card (DPIC).

### Digital Interface Line Cards

The Cisco cBR chassis supports the following Digital Interface Line Cards:

- DOCSIS MAC SSI Card (40Gbps). [PID: CBR-CCAP-LC-40G-R]

- DOCSIS MAC SSI Card (80Gbps). [PID: CBR-CCAP-LC-G2-R]

### Digital PICs

The Cisco Digital Physical Interface Card (DPIC) is used to connect a cBR-8 DOCSIS MAC Line card to an external Remote PHY Node Device (RPD) or Remote PHY Shelf product.

The DPIC is installed in the cBR-8 and connects to a RPD node/shelf via Metro Ethernet. It supports both downstream and upstream traffic.

The Cisco cBR chassis supports the following Digital PICs:

- cBR CCAP Digital Through PIC. [PID: cBR-DPIC-8X10G]
- cBR-8 2x100G Digital Physical Interface Card. [PID: cBR-DPIC-2X100G]

### cBR CCAP Digital Through PIC

**Table 20: Physical Specifications of the DPIC**

Unit	Dimensions
Width	10.96 in (27.8cm)
Height	1.43 in (3.6cm)
Depth	7.32 in (18.6cm) with handle
Weight	2.943lb (1.335kg)


The DPIC supports:

- Eight ten gigabit Ethernet SFP+ interfaces
- 80 gigabit non-blocking switching architecture with 40+40 protection scheme
- Cisco SFP-10G-SR-S/Cisco SFP-10G-LR-S/Cisco SFP-10G-ZR-S/Cisco SFP-10G-ER-S/SFP-10G-AOC3M= optic modules
- MACSec and 1588 TC

The faceplate of the Cisco DPIC has the following:

- Optic Cable Clip—Helps route and manage the optic cables.
- 8 x SFP+ ports—Used as 8 x 10GE lanes for DOCSIS traffic to the Cisco RPDs.
- 10GE Link Status LED—Indicates the status of the 10GE link.
- Status LED—Indicates the status of the Cisco DPIC.
- Replace LED—Indicates the Cisco DPIC must be replaced.

### cBR-8 2x100G Digital Physical Interface Card

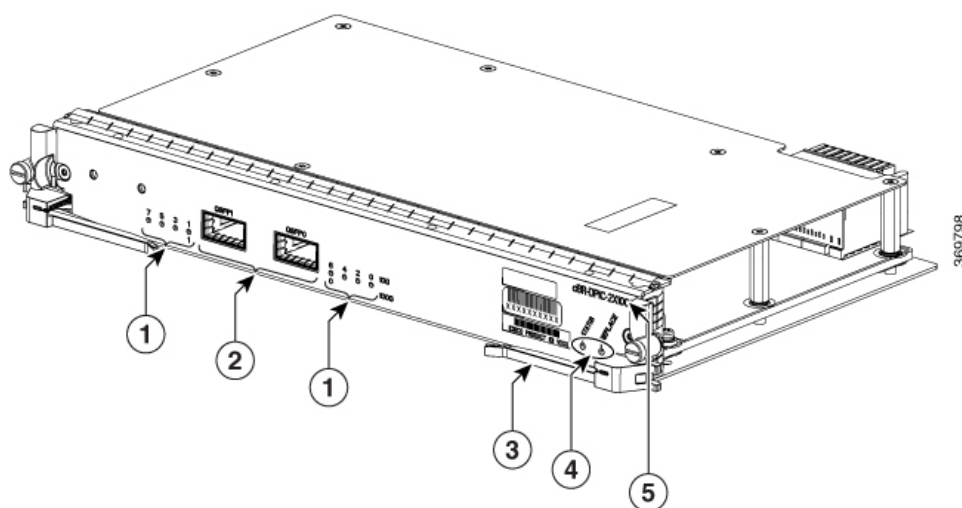

1	Link LEDs	4	LEDs
2	QSFP Ports	5	Product Identifier (PID)
3	Plastic latch		

**Table 21: Physical Specifications of the 2x100G DPIC**

Unit	Dimensions
Width	10.96 in (27.8cm)
Height	1.43 in (3.6cm)
Depth	7.32 in (18.6cm) with handle
Weight	2.943lb (1.335kg)

The 2x100G DPIC supports:

- Two hundred gigabit Ethernet QSFP interfaces
- 100GE and 10GE working modes
- At least two 4x10G interfaces via breakout cables
- 1x100G + 1x100G interfaces with link layer redundancy
- QSFP-100GE-LR/QSFP-100GE-SR/QSFP-100GE-SM-SR/QSFP-40G-LR (4x10G mode)/QSFP-40G-SR (4x10G mode)/QSFP-4X10G-AOCxM (4x10G mode) optic modules
- Backward compatible with SUP-60, SUP-160 and SUP-250

The faceplate of the 2x100G DPIC has the following:

- Optic Cable Clip—Helps route and manage the optic cables.
- 2x QSFP ports—Used as 1 x 100GE or 8 x 10GE interfaces.



- Link Status LED—Indicates the status of the link. QSFP0 port is mapped to LED 0,2,4,6 if it works in 10GE mode and mapped to LED 0 if works in 100GE mode. QSFP1 port is mapped to LED 1,3,5,7 if it works in 10GE mode and mapped to LED 1 if works in 100GE mode.
- Status LED—Indicates the status of the 2x100G DPIC.
- Replace LED—Indicates the 2x100G DPIC must be replaced.



**Note** If the QSFP-100G-SM-SR module is used in the DPIC 100G card, the cBR-8 router chassis ambient temperature must be limited to 50°C at sea level.

## Power System

The Cisco cBR chassis is powered using AC or DC power inputs. The power system consists of the following modules:

- Power Cassette Module
- AC or DC Facility Power Entry Modules (FPEM)
- AC or DC Power Modules

The Cisco cBR power system supports:

- Load sharing between the Power Modules
- N+1 redundancy for the DC power systems, and N+1 or 1+1 redundancy for the AC power systems
- Online Insertion and Removal (OIR)

The Cisco cBR-8 Converged Broadband Router (cBR-8) supports:

- One Power Cassette Module
- One FPEM
- Six Power Modules

### Redundancy

- For the DC-powered Cisco cBR with N+1 redundancy, the chassis must have at least five operational DC Power Modules to be functional.



**Note** The DC-powered Cisco cBR allows A and B inputs to each DC Power Module to support separate A and B facility feeds. However, only one feed is necessary to support full power operation.

- For the AC-powered Cisco cBR with N+1 redundancy, the chassis must have at least four operational AC Power Modules to be functional.


- For the AC-powered Cisco cBR with 1+1 redundancy, the chassis must have six operational AC Power Modules to be functional.

### Power Cassette Module

The Power Cassette Module provides the physical support and keying for the Power Modules. It is keyed with a corresponding FPDM to determine AC or DC support.


This module is installed in the front of the Cisco cBR chassis.

**Figure 17: AC Power Cassette Module**

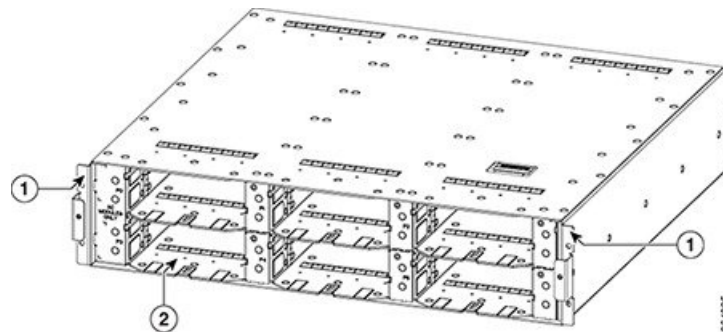

1	Mounting flange	2	AC Power Module bay
---	-----------------	---	---------------------

**Figure 18: DC Power Cassette Module**

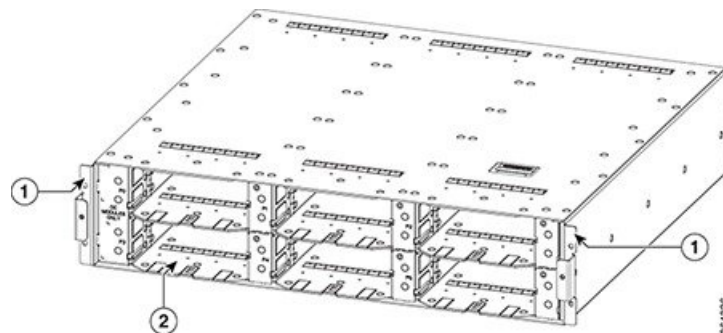

1	Mounting flange	2	DC Power Module bay
---	-----------------	---	---------------------

**Table 22: Physical Specifications of the Power Cassette Module**

Unit	Value
<b>AC Power Cassette Module</b>	
Depth	16.9 in (42.92 cm)
Width	17.3 in (43.94 cm)
Height	3.7 in (9.4 cm)
Maximum weight	17 lb (7.7 kg)

Unit	Value
<b>DC Power Cassette Module</b>	
Depth	16.9 in (42.92 cm)
Width	17.3 in (43.94 cm)
Height	3.7 in (9.4 cm)
Maximum weight	17 lb (7.7 kg)

The Power Cassette Module supports six Power Modules. The front Power Module slots are numbered from P0 to P5 on the Power Cassette Module and these designations map to the facility power outlet markings on the rear of the chassis.


### FPEM

The FPEM provides the following:

- Physical interface and interconnection to the Power Modules for either AC or DC input voltage.
- Digital communication from the Power Modules to the digital midplane.
- Power interconnection from the Power Modules to the midplane bus bar.

The FPEM is installed in the rear of the Cisco cBR chassis. It is field replaceable to allow the facility to change from AC to DC power, or vice versa, without replacing the chassis.


**Figure 19: AC FPEM**

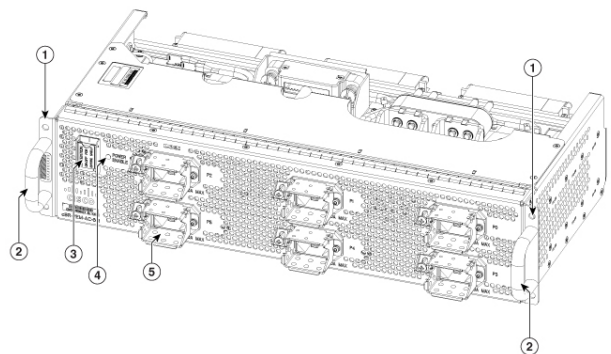

**Note** Starting from April, 2018, Cisco ships the cBR8 router with AC FPEM VER 02 with no AC PRESENT LEDs as shown in the figure. VER 01 of AC FPEM has P0 AC PRESENT through P5 AC PRESENT that indicates input AC power for the corresponding AC Power Module (also indicated on the front-side of the Power Module).

1	Mounting flange	4	Power Enable LED
2	Handle	5	AC power input connector

3	Power switch
---	--------------

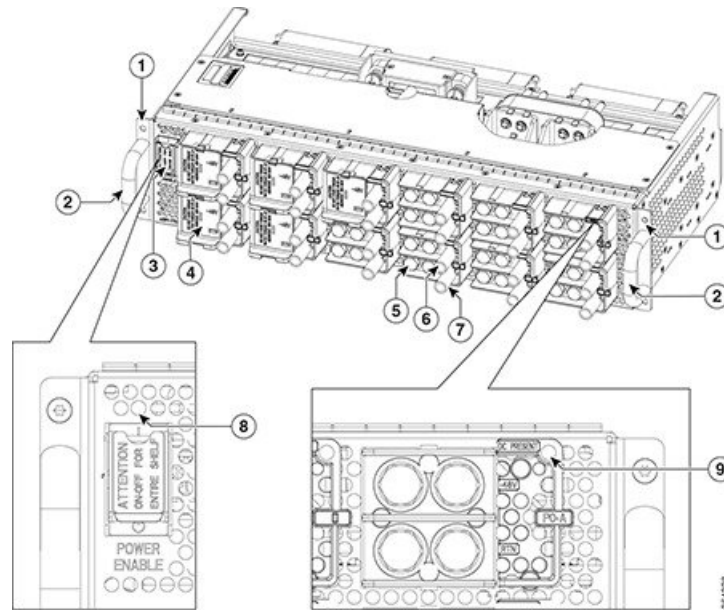**Figure 20: DC FPWM**

1	Mounting flange	6	Negative lead
2	Handle	7	Positive lead
3	Power switch	8	Power Enable LED
4	Terminal block cover	9	DC Present LED
5	Terminal bolt		—

**Table 23: Physical Specifications of the FPWM**

Unit	Value
<b>AC FPWM</b>	
Depth	10.08 in (25.6 cm)
Width	17.45 in (44.32 cm)
Height	3.85 in (9.78 cm)
Maximum weight	15 lb (6.8 kg)
<b>DC FPWM</b>	
Depth	10.08 in (25.6 cm)
Width	17.45 in (44.32 cm)

Unit	Value
Height	3.85 in (9.78 cm)
Maximum weight	15 lb (6.8 kg)

Both AC and DC FPEMs have a power switch to enable power to the entire Cisco cBR chassis.

The AC FPEM has the following LED:

- POWER ENABLE—Power status LED

The DC FPEM has the following LEDs:


- POWER ENABLE—Power status LED
- DC PRESENT—Input DC power status LED for each terminal block

### Power Module

The Power Modules provide the power conversion, filtering, and conditioning from facility input power to the required -52 V midplane power that is used within the chassis. Both AC and DC Power Modules are available depending on the facility input voltage. These modules have internal fans for cooling.


The Power Modules are installed in the front of the Cisco cBR chassis.

**Figure 21: AC Power Module**

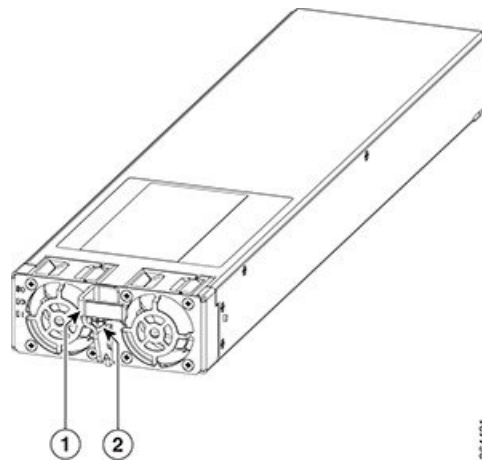

1	Handle	2	Screw
---	--------	---	-------

Figure 22: DC Power Module

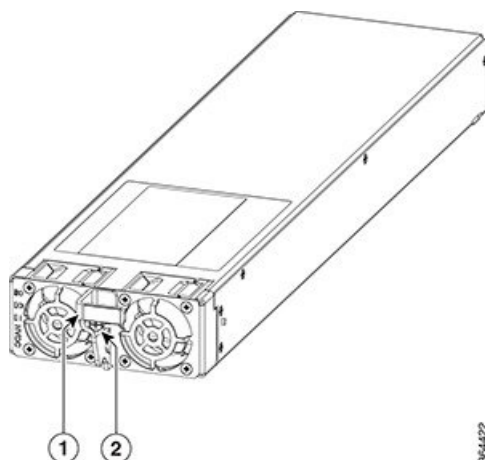

1	Handle	2	Screw
---	--------	---	-------

Table 24: Physical Specifications of the Power Module

Unit	Value
<b>AC Power Module</b>	
Depth	16.94 in (43.02 cm)
Width	4 in (10.16 cm)
Height	1.6 in (4.06 cm)
Maximum weight	6 lb (2.72 kg)
<b>DC Power Module</b>	
Depth	16.94 in (43.02 cm)
Width	4 in (10.16 cm)
Height	1.6 in (4.06 cm)
Maximum weight	6 lb (2.72 kg)


Both AC and DC Power Modules have the following LEDs:

- Input power LED—Power input status LED
- Output power LED—Power output status LED
- Fault LED—Fault status LED

# Fan Module

The Cisco cBR-8 router has multiple modular Fan Modules installed in the rear to supply cooling air and have five Fan Module bays in the rear of the chassis. The bays are numbered from P10 to P14.

**Figure 23: Fan Module**

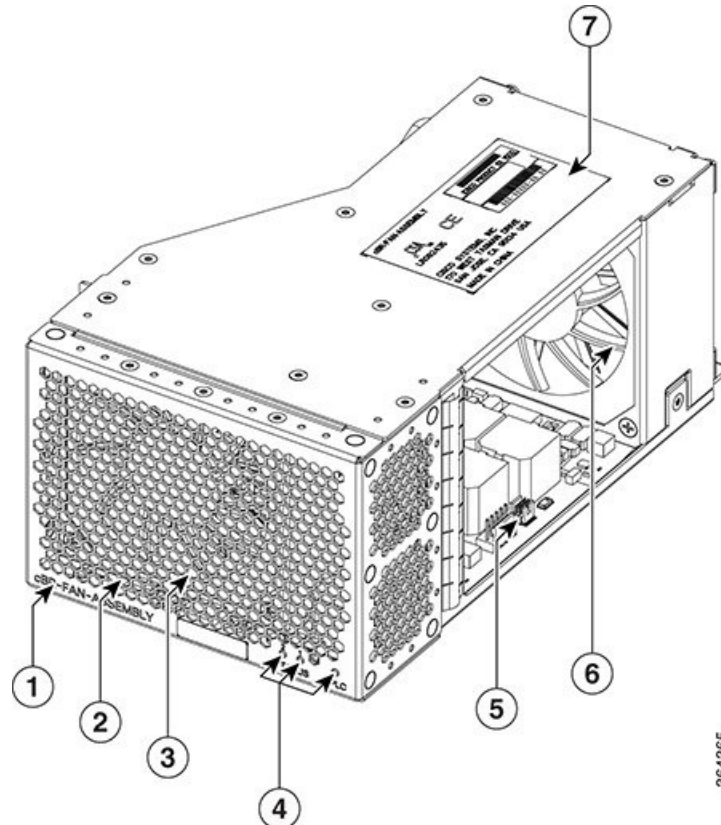

1	Product Identifier (PID)	5	Control Panel
2	Front Grille Panel	6	Rear Fan
3	Front Fan	7	PID label
4	LEDs		—

Each Fan Module has two fans and a control board. The fans in each Fan Module are synchronized and operate at variable speeds as set by the Supervisor. Fan speeds are determined based on ambient temperature and pressure. When the chassis boots up, the operating speed of the fans is set to the default number of revolutions per minute (RPM) in unsupervised mode. The multi Fan Module cooling architecture permits only one fan failure at any time in any given Fan Module during normal operational conditions. All the remaining fans are capable of changing to full speed operation to compensate for the failed fan or module.

Each fan bay has one hinged rear door and one sliding side door which close when a Fan Module is removed for replacement. This prevents re-circulation of air which could lead to the system overheating. The multi cooling architecture permits only one fan failure at any time in any given during normal operational conditions.

All the remaining fans are capable of changing to full speed operation to compensate for the failed fan or module.


**Warning**

Ensure that all Fan Module bays have functioning Fan Modules. If a Fan Module is removed, replace it with a functioning Fan Module within one minute of the removal in order to avoid critical thermal alarms relating to overheating of individual components.

**Table 25: Physical Specifications of the Fan Module**

Unit	Value
Depth	8.40 in (21.34 cm)
Width	5.20 in (13.20 cm)
Height	3.50 in (8.89 cm)
Weight	4 lbs (1.81 kg)

The faceplate of the Fan Module has the following LEDs:

LED	Description
STATUS 1	Status of the rear fan that faces inside the chassis.
STATUS 2	Status of the front fan that faces outside the chassis.
RPLC	Failure and replacement status of the Fan Module.

## Cooling System of the Cisco cBR Chassis

The Fan Modules in the Cisco cBR chassis are controlled by the Supervisor Card. Until the Supervisor Card boots up, the fans spin at default speed of 11000 RPM. After Supervisor Card boot-up, the Supervisor Card controls the fan speeds, based on the temperature of the air entering the chassis and the barometric pressure reported by the sensors in the Fan Modules.

### Failure Responses and Fan Speed Variations

The fan module will change speed based on the following conditions:

- When communication with the Supervisor Card is lost, both the fans in the Fan Module are set the 11,000 RPM default speed mode until communication is established. If the fans were running above 11,000 RPM default when communication was lost, the fans continue to operate at the elevated speeds until they are power cycled.
- If a fan is considered to have failed if it operates at +/- 1000rpm from the set point. All fans are elevated in speed based on facility air inlet temperature to the Supervisor Card as safety measure, by a temperature sensor on the Supervisor Card. The front panel LED of the Fan Module indicates an amber color LED. If there is an indication of a fan failure the Supervisor Card sets all the fan modules to a higher RPM value based on the inlet temperature on the Supervisor Card. The Supervisor Card sets the following values:



1. 13,000RPM (194CFM) for  $T \leq 30C$
2. 14,500RPM (218 CFM) for  $30 < T \leq 40C$
3. 16,000RPM (239 CFM) for  $T > 40C$

If there are more than 2 fan failures, the speed of the remaining fans automatically default to 16,000 RPM.

- A fan operating at speeds between 301 and 999 RPM from the set point, is considered a minor fan alarm. The fan speeds are not elevated in case of a minor alarm. The Fan Module amber LED is illuminated.
- When the chassis is booted and a fan is missing or removed the Supervisor Card sets all the other operational fans to 16,000 RPM. The chassis will not boot with a missing Fan Module. When a working Fan Module is replaced and all the other Fan Modules are working correctly the Supervisor Card will return all the fans to their normal operational speed. When a Fan Module is initially removed the Supervisor Card sets all the remaining fans to run at 13,000 RPM for 10 seconds, 14,500 RPM for 30 seconds, ramping to 15,000RPM for the next 30 seconds and then ramping to 16,000RPM until all the Fan Modules are again shown present.



---

**Note** Variations in speeds occur to regulate the internal component temperatures. Such speed variations are normal, in the absence of any alarms. For more details, see [Monitoring the Fan Modules](#).

---

## Air Filter

The air filter is a field replaceable unit on the Supervisor and RF line cards. It removes dust in the air that is drawn into the router by the cooling fans. We recommend that you examine the air filter at least once a month or more often if required. Do not clean and re-use air filters. They must be replaced when they are clogged or worn out.



---

**Note** You can remove and install an air filter when the Cisco cBR router is powered on and working.

---

## Cisco IOS-XE Software

The Cisco cBR Series Converged Broadband Router (Cisco cBR) runs the Cisco IOS-XE software, which is stored on the Type II PCMCIA flash memory disks stored in the two PCMCIA slots in the primary route processor module. A PCMCIA flash memory disk in either slot can store a Cisco software image or configuration file. In addition to the flash memory disks, each route processor module contains onboard flash memory that is used to store a boot loader. The loader executes following a system reset to reload and execute the Cisco IOS-XE software on the flash memory disks.

The route processor module also stores the system configuration in the onboard flash memory. The configuration information read from the flash memory is buffered in operational memory following initialization, and is written to the flash memory device when the configuration is saved. Each line card also contains onboard flash memory that is used to store a boot loader, similar in function to that used on the route processor module. However, the line card loader executes following a system reset, line card reset, or line card insertion to reload and execute any code that must run on the line card. Software images may also be stored on an external TFTP

server. If the Cisco cBR is so configured, it then downloads the proper image from the TFTP server and executes it.

## NEBS Level 3 Compliance

The Cisco cBR is designed to meet Network Equipment Building System (NEBS) Level 3 compliance.

## How and What to Order

### Ordering Information

*Table 26: Ordering Information for Cisco cBR-8 Router*

Product Description	Part Number
<b>Cisco cBR-8 Converged Cable Access Chassis</b>	
cBR-8 CCAP Chassis	CBR-8-CCAP-CHASS
AC Power Module	CBR-AC-PS
AC FPEM	CBR-PEM-AC-6M
AC Power Cassette Module	CBR-AC-PWR-TRAY
DC Power Module	CBR-DC-PS
DC FPEM	CBR-PEM-DC-6M
DC Power Cassette Module	CBR-DC-PWR-TRAY
Power Module Blanks (for empty Power Module bays)	CBR-PS-BLANK
Fan Module	CBR-FAN-ASSEMBLY
Chassis Installation Handle (optional)	CBR-CHASSI-HANDLE=

*Table 27: Ordering Information for Cisco cBR-8 Router Supervisor*

Product Description	Part Number
<b>Cisco cBR-8 Supervisor Modules</b>	
Supervisor for cBR series -250G	CBR-SUP-250G
Supervisor for cBR series -250G, SPARE	CBR-SUP-250G=
Supervisor with 200G forwarding capability as well as a robust and powerful control plane complex. It ships with 48 GB of memory.	CBR-CCAP-SUP-160G

Product Description	Part Number
Supervisor with 60G forwarding capability. It does not have the DC board. It ships with 48 GB of memory.	CBR-CCAP-SUP-60G
Supervisor 250 PIC, 2x100GE, 10GE with breakout cables	CBR-2X100G-PIC
Supervisor 250 PIC, 2x100GE, 10GE with breakout cables, SPARE	CBR-2X100G-PIC=
The Supervisor PIC includes WAN backhaul connectivity options.	CBR-SUP-8X10G-PIC
Bundle PID for the 8x10G Supervisor PIC.	CBR-8X10G-PIC-BUN
SFP+	SFP-10G-SR SFP-10G-LR SFP-10G-ER SFP-10G-ZR SFP-10G-LRM SFP-10G-AOC3M=
100GBASE SR4 QSFP Transceiver, MPO, 100m over OM4 MMF	QSFP-100G-SR4-S
100GBASE LR4 QSFP Transceiver, LC, 10km over SMF	QSFP-100G-LR4-S
100GBASE QSFP Transceiver, 40 km reach over SMF, Duplex LC	QSFP-100G-ER4L-S
40GBASE-SR4 QSFP Transceiver Module with MPO Connector	QSFP-40G-SR4
QSFP 4x10G Transceiver Module, SM MPO, 10KM, Enterprise-Class	QSFP-4X10G-LR-S
100GBASE CWDM4 Lite QSFP Transceiver, 2km over SMF, 10-60C	QSFP-100G-SM-SR
Cisco 40GBase-AOC QSFP to 4 SFP+ Active Optical breakout Cable, 5-meter	QSFP-4X10G-AOC5M
Blank for an empty Supervisor slot	CBR-SUP-BLANK
Blank for an empty Supervisor PIC slot	CBR-SUP-PIC-BLANK
Air filter for the Supervisor	CBR-SUP-FILTER=

Table 28: Ordering Information for Cisco cBR-8 Router Interface and Modules

Product Description	Part Number
<b>Cisco cBR-8 CCAP line cards</b>	
The cBR CCAP line card includes two downstream DOCSIS 3.0 modules as well as one upstream DOCSIS 3.0 Module. The line card can be upgraded to DOCSIS 3.1 on both downstream and upstream.	CBR-LC-8D30-16U30
The cBR CCAP line card with one Downstream D3.1 module and one Upstream D3.0 module.	CBR-LC-4D31-16U30
The cBR CCAP line card with two Downstream D3.1 modules and one Upstream D3.0 module	CBR-LC-8D31-16U30
The cBR CCAP line card with one Downstream D3.1 module and one Upstream D3.1 module.	CBR-LC-4D31-16U31
The cBR CCAP line card with two Downstream D3.1 modules and one Upstream D3.1 module.	CBR-LC-8D31-16U31
The cBR CCAP line card with no Downstream or Upstream modules.	CBR-CCAP-LC-40G-R
The cBR CCAP second generation Remote PHY Line Card.	CBR-CCAP-LC-G2-R
cBR CCAP RF Through PIC (Connectivity to the RF Plant)	CBR-RF-PIC
cBR CCAP Protect PIC (for N+1 redundancy)	CBR-RF-PROT-PIC
cBR CCAP Digital Through PIC	cBR-DPIC-8X10G
cBR-8 2x100G Digital Physical Interface Card	cBR-DPIC-2X100G
cBR RF cable bundle (3 meters)	CBR-CABLE-8X16
Blank for an empty line card slot	CBR-LC-BLANK
Blank for an empty line card PIC slot	CBR-LC-PIC-BLANK
Downstream D3.0 module	CBR-D30-DS-MOD
Downstream D3.1 module	CBR-D31-DS-MOD
Upstream D3.0 module	CBR-D30-US-MOD
Upstream D3.1 module	CBR-D31-US-MOD
Air filter for the cBR CCAP line card	CBR-LC-FILTER=

**Table 29: Ordering Information for Cisco Remote PHY Device**

Product Description	URL
Cisco 1x2 RPD	<a href="https://www.cisco.com/c/en/us/products/collateral/video/cbr-series-converged-broadband-routers/datasheet-c78-739789.html">https://www.cisco.com/c/en/us/products/collateral/video/cbr-series-converged-broadband-routers/datasheet-c78-739789.html</a>
Cisco GS7000 1218-MHz 4-Port Fiber Deep Node	<a href="https://www.cisco.com/c/en/us/products/collateral/video/cbr-series-converged-broadband-routers/datasheet-c78-737261.html">https://www.cisco.com/c/en/us/products/collateral/video/cbr-series-converged-broadband-routers/datasheet-c78-737261.html</a>
Cisco Smart PHY 300 and 600 Shelves	<a href="https://www.cisco.com/c/en/us/products/collateral/video/cbr-series-converged-broadband-routers/datasheet-c78-739789.html">https://www.cisco.com/c/en/us/products/collateral/video/cbr-series-converged-broadband-routers/datasheet-c78-739789.html</a>
Cisco Remote PHY Shelf 7200	<a href="https://www.cisco.com/c/en/us/products/collateral/video/cbr-series-converged-broadband-routers/datasheet-c78-741697.html">https://www.cisco.com/c/en/us/products/collateral/video/cbr-series-converged-broadband-routers/datasheet-c78-741697.html</a>

## License Information

**Table 30: License Information**

Product Description	Part Number
<b>Software Licenses For Cisco cBR-8 Supervisor Modules</b>	
10G WAN license	CBR-SUP-10G-LIC
100G WAN License	CBR-SUP-100G-LIC
<b>Software Licenses For Cisco cBR-8 RF Line Cards</b>	
DOCSIS 3.0 Downstream License	CBR-D30-DS-LIC
DOCSIS 3.0 Upstream License	CBR-D30-US-LIC
Line Card Redundancy Feature License	CBR-LCRED-LIC
DOCSIS 3.1 Upstream Exclusive License	CBR-D31-US-LIC
<b>Software Licenses for Cisco cBR-8 Video</b>	
VOD/SDV Downstream Video QAM License	CBR-VIDEO-LIC
VOD/SDV Replicated QAM License	CBR-VIDEO-RPL-LIC
VOD PowerKEY QAM Encryption License	CBR-VODPKY-LIC
VOD PME QAM Encryption License	CBR-VODPME-LIC

## How to Order

To place an order, visit the [Cisco Ordering Home Page](#).

