

# VIDEO DOOR PHONE

OOBVDPS1



# **Quick Start Guideline**

 
Please read it carefully before using the product, and keep this handy



## **Packing List**

After opening the package, please make sure the doorbell (hereinafter referred to as the Equipment") is in good condition. Make sure parts below is included.







Chime

# **Appearance Introduction**





IR LED The ambient light is not enough, this can increase picture

brightness

**Light sensor** Used to collect environmental light status, when ambient light

drops down to 2 Lux, the IR LED will turn on automatically.

MIC Audio Capture


**Button** Doorbell button

**Lens** Video image capture

Indicator Light Blinking blue light: Configuration status;

Red light ON: Failed to connect to WiFi;

Blue light ON: Connect to phone successfully; Red and blue flash: Connect to WiFi successfully

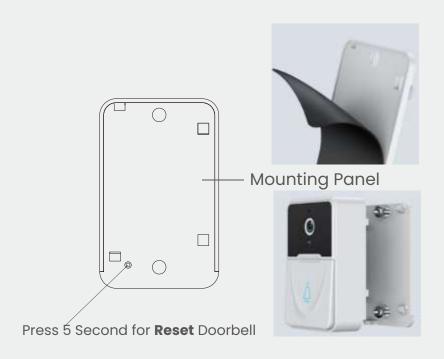





**Button** To reset the device, long press this button for 5 seconds

**Battery** Build in li-ion battery

**USB Interface** Micro-USB-port-charging

**Mounting Port** Use this port to mount the camera to bracket

**Reset** To restart the device

## **Setup Device**

Thank you for choosing our products! Please follow below instruction to setup and use your doorbell device.

#### 1. Downloading and installing the APP

Open App Store (for iOS) or Google Play Store (for Android) on your device, search app or scan QR code as following to download the right App for your device.







#### 2. Setting up the APP

Before you begin;

- > Make sure the APP is installed to your device
- Make sure that your device is connected to a 2.4GHz Wi-Fi networks, 5GHz network is NOT compatible.

#### **User Register**

New user register it according to guide steps, already registered user just login it

#### 3. Add the device


Before add, turn on the bluetooth on the mobile setting. Open the app and tap **"Add device"** 

Select device: Smart Doorbell Camera, and it will show the WiFi network setting. the name of the WiFi network will automatically be filled in, enter the WiFi password and tap "Next step" and confirm.







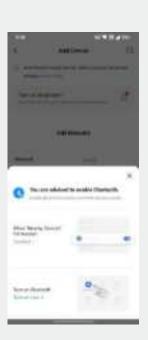













Follow the app instruction, press and hold the ring button for 5-10 seconds, with a voice notification "Reset successfully", the device will reset to default setting automatically. Please confirm you heard it and choose next step, the app will searching the device and add it



#### Pairing with Chime (Optional)

 

 

Press and hold Volume button for 5 seconds until the LED indicator lights up, Wi-Fi enters into pairing status. Then press the button on the Wi-Fi video doorbell within 5 seconds, pairing is completed once LED indicator on the Chime is flashing. When above procedure is finished, pairing is quit automatically.



# www.oobsmarthome.com

OOB SMARTHOME INDIA PVT. LTD.

Nr. Domino's Pizza, Gangotri Circle, Nikol B-408, Shantiniketan Business Center, Ahmedabad - 382350, Gujarat, INDIA.

M:+919081878789 | E: reach@oobsmarthome.com























Recognized & Trusted By





