


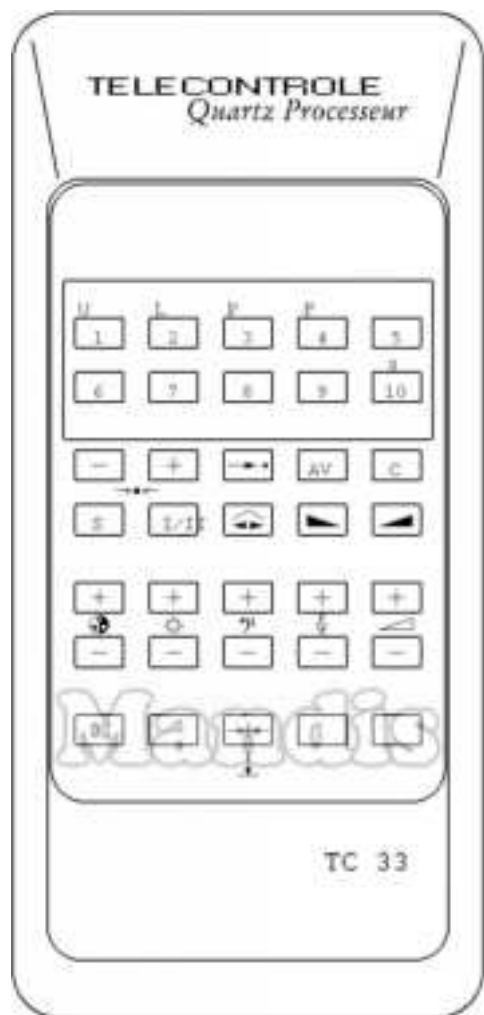

Original	Recharge	Original	Recharge
 1 / U	 1	 ◀ ▶	 Stop / Hold
 2 / L	 2	 ▶	 Play / Slow
 3 / P	 3	 ▲	 Pause / Step / Freeze
 4 / F	 4	 +	 >> / Preset +
 5	 5	 +	 >> / Tune+
 6	 6	 +	 Right
 7	 7	 +	 Up
 8	 8	 +	 Vol +
 9	 9	 -	 I << / Preset -
 0 10	 Guide / EPG / - / -	 -	 << / Tune-
 → ←	 CH- / Page-	 -	 Left
 +	 CH+ / Page+	 -	 Down
 →	 Smart / List	 -	 Vol -
 AV	 AV / Input / RDS	 Mute	 Mute / Dimmer
 C	 Yellow / YouTube / Repeat	 Power	 Power
 S	 Sound / Title		
 I/I	 Audio / Lang I/I		

