



Visual Index

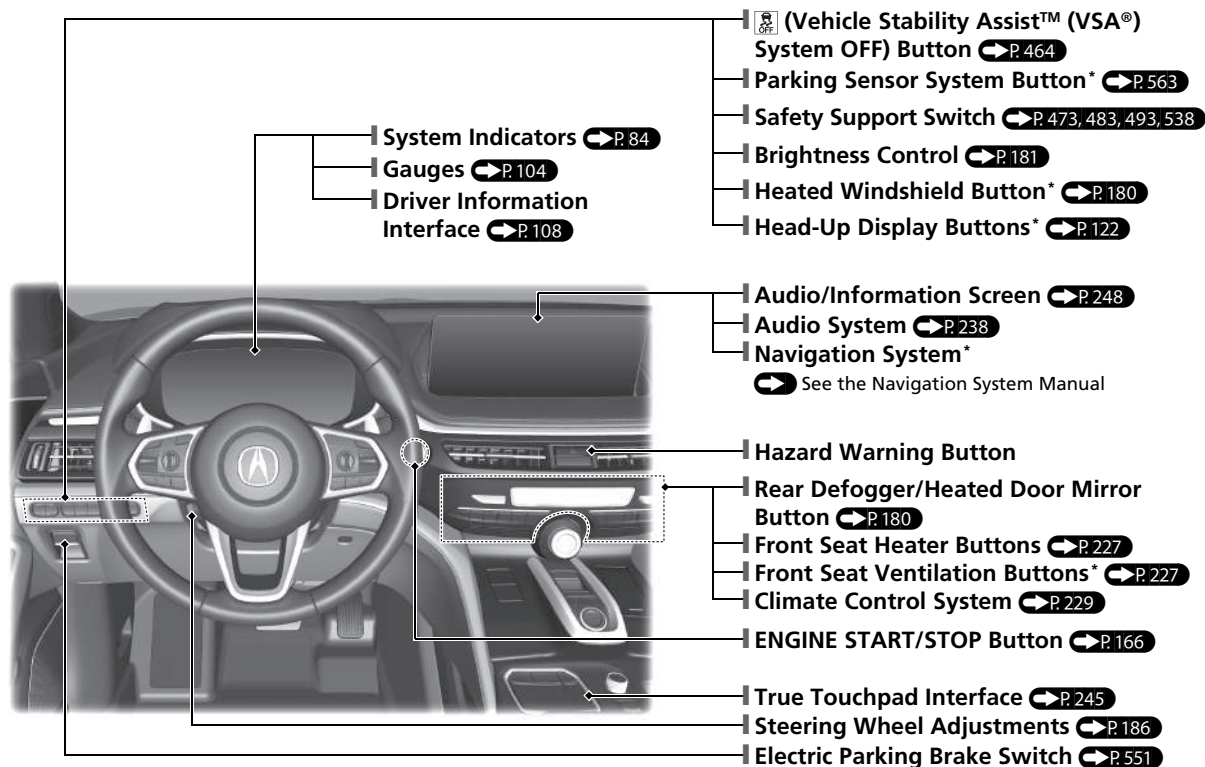

Visual Index

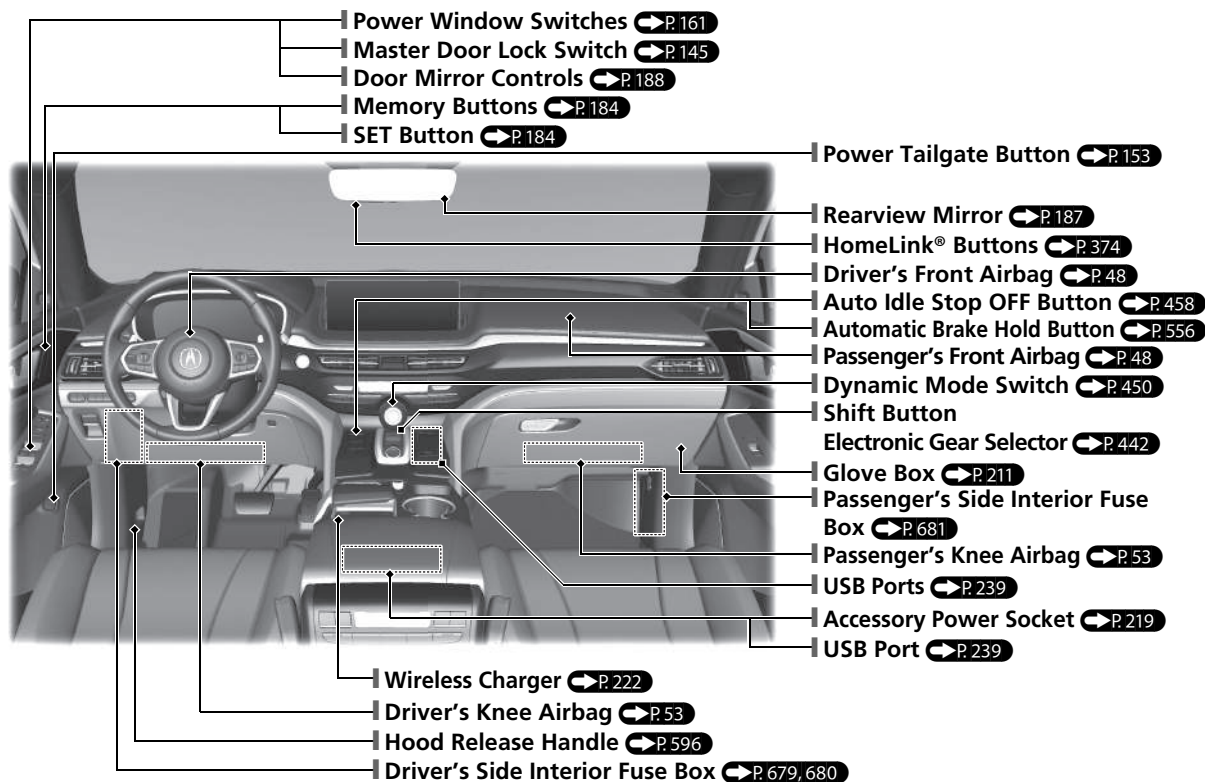


Instrument Panel P. 83

Indicators P. 84 / Driver Information Interface P. 108 / Gauges P. 104 /

Head-Up Display* P. 122

- Different gauges will display based on the Integrated Dynamics System mode. **Selecting the Dynamic Mode**  P. 451
- You can change to your preferred Integrated Dynamics System Mode gauge modes in **INDIVIDUAL** Mode.
Customizing the INDIVIDUAL Settings  P. 455
- You can change the gauge layout. **Gauge Layout**  P. 114

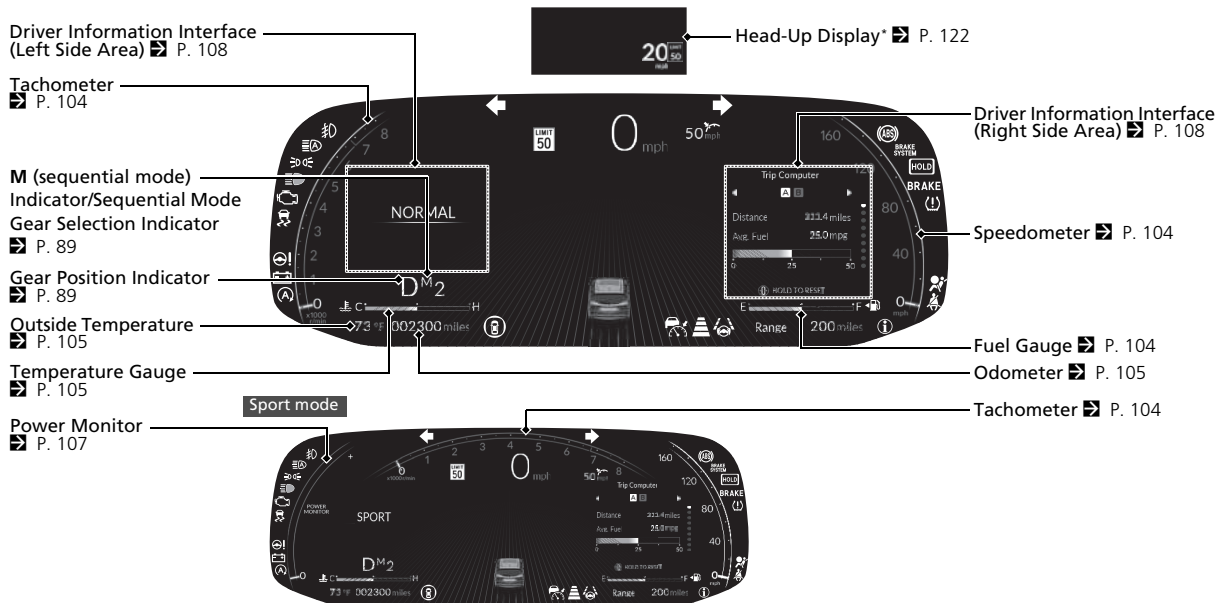

* Not available on all models