

BAMBA

IoniCare 6000 RockStar Fire

IoniCare 6000 RockStar Ice

Secador de pelo / Hair dryer



cecotec

Manual de instrucciones

Instruction manual

Manuel d'instructions

Bedienungsanleitung

Manuale di istruzioni

Manual de instruções

Instructiehandleiding


Instrukcja obsługi

INDEX

04	1. Parts and components	04
07	2. Safety instructions	13
09	3. Before use	15
09	4. Operation	15
10	5. Cleaning and maintenance	15
11	6. Troubleshooting	16
11	7. Technical specifications	16
12	8. Disposal of old electrical appliances	17
12	9. Technical support service and warranty	17

1. PIEZAS Y COMPONENTES

Parts and components/Pièces et composants/Ersatzteile und Komponenten/
Parti e componenti/Peças e componentes/ Onderdelen en componenten /Części i komponenty

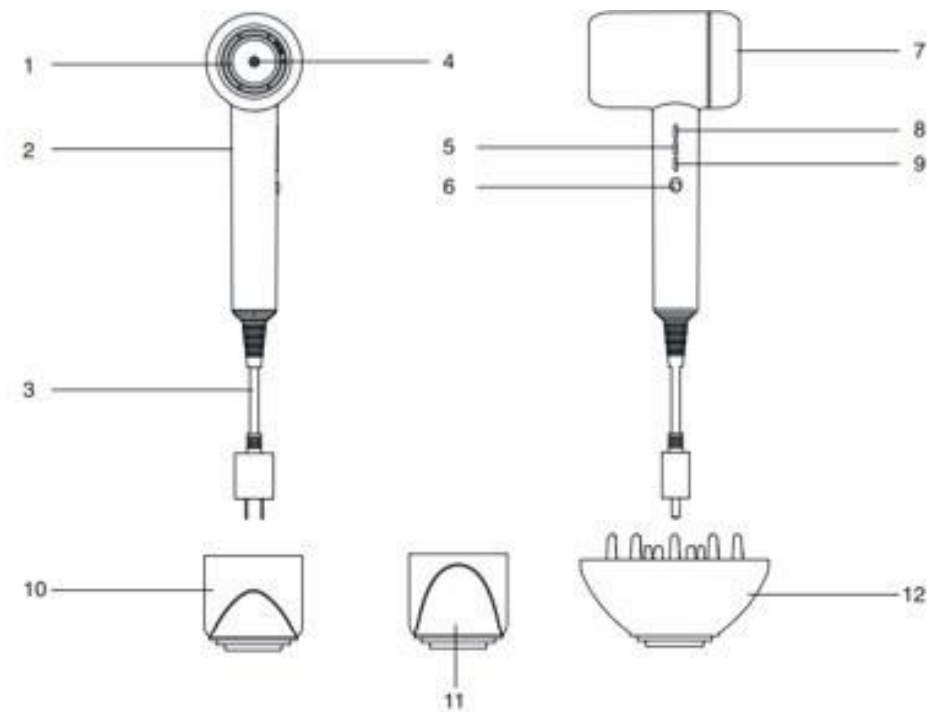

EN

1. Air outlet
2. Handle
3. Power Cord
4. Ion outlet
5. Temperature selection button
6. On/off button
7. Air inlet
8. Speed selection button
9. Cold air/ExtremeProtect button
10. Quick dry nozzle
11. Hair-styling nozzle
12. Diffuser

2. SAFETY INSTRUCTIONS

1. Make sure that the mains voltage matches the voltage stated on the rating label of the appliance and that the wall outlet is grounded.
2. This device is indented for household use only. Do not use for industrial or commercial purposes.
3. Do not immerse the cord, plug, or any non-removable part of the appliance in water or any other liquid, nor expose the electrical connections to water. Make sure your hands are dry before handling the plug or switching on the appliance.
4. Check the power cord regularly for visible damage. If the cord is damaged, it must be replaced by the official Technical Support Service of Cecotec in order to avoid any type of danger.
5. Ensure that the air inlets and outlets are not blocked. If they are blocked, the device will activate the overheat protection system.
6. Turn off and unplug the device from the power supply immediately after use. If used in a bathroom, make sure to unplug it always to avoid it from getting wet.
7. Do not use the appliance near water and never expose it to water or other liquids.



8. Do not use the diffuser with maximum temperature for long periods of time.
9. Do not introduce metallic objects through the back grid or air inlets to avoid electric shocks.
10. Do not wind the cord around the device.
11. Do not allow the appliance to come into contact with your face, neck or scalp.
12. Do not leave the appliance on any surface while it is operating.

13. Do not use the appliance to dry wigs or fake hair.
14. The appliance is not intended to be used by children under the age of 8. It can be used by children over the age of 8, as long as they are given continuous supervision.
15. This appliance can be used by children aged 8 and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, as long as they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
16. Supervise young children to make sure that they do not play with the appliance. Close supervision is necessary when the appliance is being used by or near children.

Warning: If the product suffers overheating, it will automatically turn off. In this case, unplug it from the power supply and allow it to cool down for a few minutes. Before turning it back on, make sure there are no fluffs, hair or other objects blocking the grid or air inlet.

3. BEFORE USE

- Take the product out of the box.
- Remove all packaging materials. Keep the original box.
- Make sure all the components are included and in good conditions, otherwise, contact immediately the official Technical Support Service of Cecotec.
- Keep a distance of at least 10 cm between hair and air inlet, to avoid hair from entangling into the hair dryer.

4. OPERATION

- This hair dryer releases ions, which protect hair, skin and seal cuticles for a total care of your hair during use.
 - This product is equipped with 360° spinning magnetic nozzles. Install these when the device is off and has fully cooled down.
 - This product is also equipped with an ExtremeProtect function which enables automatic temperature oscillation.
1. Place the on/off button (6) in the off position, plug the power cord into a socket then press the on/off button (6) to switch the device on.
 2. This device has 3 different speed modes and 3 different temperature modes.
 3. Press the speed control button (8) once to select the low operation speed, press again to select the medium operation speed and 3 times to select the high operation speed. The fan LED on the device will light up accordingly.
 4. Press the temperature control button (5) once to select the low operation temperature. Press the temperature control button again to select the medium operation temperature. Press the temperature control button 3 times to select the high operation temperature. The temperature indicator LED on the device will light up accordingly.
 5. Press the (♥)(9) button once to activate the cold air function. Press the (♥)(9) button twice to select the oscillating warm-cold air function. Press the (♥)(9) again to switch off the ExtremeProtect function. The LED indicator on the device will light up/switch off accordingly.
 6. Keep a distance of at least 10 cm between hair and air outlet to avoid tangling or risk of burning.
 7. After using, switch the hairdryer to the off position and unplug the power cord.

5. CLEANING AND MAINTENANCE

- Disconnect the appliance from the power supply and allow it to cool down before cleaning.
- Use a soft, cotton cloth to clean the product's inlets and outlets.
- Do not use sharp tools near the inlets and outlets of the product to avoid damage.
- Do not immerse the appliance in water or other liquid.
- Do not use abrasive scouring pads, powders or cleaners.
- Do not immerse the appliance in water and do not expose it to water while cleaning it.

6. TROUBLESHOOTING

FAILURES	POSSIBLE CAUSES	SOLUTIONS
The appliance is not working	Power cable not plugged in tightly	Check cable is plugged in tightly
	No power coming from socket	Check socket power output
	On button not in correct position	Switch to correct position
Device suddenly powers off	Overheating protection system activated	Switch off and unplug power cord. Try again when appliance has cooled down
	Blocked inlet by fluff, hair, etc. Activates overheating protection system	Switch off and unplug power cord. Clean inlet and re-use when cool
Mode 1 not working	Button pressed too quickly; machine protection activated	Switch off and unplug power cord. Clean inlet and re-use when cool
Small volume of air	Blocked outlet by fluff, hair, etc	Clean outlet

7. TECHNICAL SPECIFICATIONS

Product: Bamba IoniCare 6000 Rockstar Fire/Ice

Product reference: 04226/04227

Power: 1800 W

Voltage: 220 – 240V ~ 50/60 Hz

MADE IN CHINA | DESIGNED IN SPAIN

8. DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), specifies that old household electrical appliances must not be disposed of with the normal unsorted municipal waste. Old appliances must be collected separately, in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation to dispose of the appliance correctly. If the product has a built-in battery or uses batteries, they should be removed from the appliance and disposed of appropriately.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

9. TECHNICAL SUPPORT SERVICE AND WARRANTY

This product is under warranty for 2 years from the date of purchase, as long as the proof of purchase is submitted, the product is in perfect physical condition, and it has been given proper use, as explained in this instruction manual.

The warranty will not cover the following situations:

- The product has been used for purposes other than those intended for it, misused, beaten, exposed to moisture, immersed in liquid or corrosive substances, as well as any other fault attributable to the customer.
- The product has been disassembled, modified, or repaired by persons, not authorised by the official Technical Support Service of Cecotec.
- Faults deriving from the normal wear and tear of its parts, due to use.

The warranty service covers every manufacturing defects of your appliance for 2 years, based on current legislation, except consumable parts. In the event of misuse, the warranty will not apply.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact Cecotec Technical Support Service at **+34 96 321 07 28**.

www.cecotec.es

Grupo Cecotec Innovaciones S. L.
C/de la Pinadeta s/n, 46930
Quart de Poblet, Valencia, Spain