


WiFi Thermostat 561

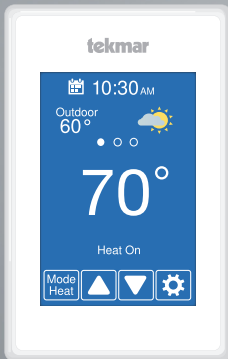

Home Screen

After 60 seconds of inactivity, the thermostat home screen displays only the time and the temperature.

Go to schedule

Swipe to view:

- Weather
- Outdoor temperature
- Floor temperature
- Heat To setting

Change operating mode

Current time

Current temperature

Equipment operation (Heat On)

Go to settings

Mode

Heat

Off

Save

Cancel

Touch ▲ or ▼ to adjust temperature

Temperature Adjustment

Heat To

70

Hold Until 5:00 PM

Save to Schedule

'Save to schedule' applies the new temperature to the current schedule event.

MENU SELECTION

AWAY

SCHEDULE

DISPLAY

TIME

WIFI

SETUP

WIFI: Connected

User Settings

Away

Use the Away setting to save energy when the building is unoccupied

Operates normally
Operates using the Away temperature selected in the Setup menu

Home / Away

☒

At Home

☐

Away

✓

Save

i

Info

- Selecting the Away setting on a thermostat or the mobile app will affect all devices linked to that location through the app.
- The Away temperature can be adjusted in the Setup / Temps menu.

Schedule

Current group of program days.

Schedule

Mon Tue Wed Thu Fri

Wake 6:00 AM 70°

Leave 8:00 AM 65°

Return 6:00 PM 70°

Sleep 10:00 PM 65°

Early Start On

Schedule On

Set to On to follow the schedule. Set to Off to use the same temperature all of the time.

✓

New Schedule

i

Creates a new schedule.

Schedule Setup

Mon Tue Wed Thu Fri

Wake

☒ On

☐ Skip

Select skip if you don't want a temperature change.

Set schedule start time

6:00 AM

Set heating temperature

Heat to 70°

✓

▲

▼

i

Select °F or °C

Brightness when touching the display

Choose the background color

DISPLAY 1/2

Temperature Units: °F

Energy Use: Monthly

Brightness - Active: 80%

Brightness - Inactive: 50%

Theme: Light

Language: English

←

▲

▼

Energy use. See below.

Brightness after 60 second timeout of no use

Select English, French or Spanish

10 second count down to allow the screen to be cleaned with a moist cloth.

Select if the outdoor temperature is shown when inactive

DISPLAY OPTIONS 2/2

Clean Screen: Off

Inactive Time Display: On

Inactive Outdoor Display: Off

←

▲

▼

Energy Use

Daily Usage

Today	0 hrs
Yesterday	0 hrs
Tue	0 hrs
Mon	0 hrs
Sun	0 hrs
Sat	0 hrs
Fri	0 hrs

✓

Monthly Usage

i

View each day's run time for heating.

Toggle between Daily and Monthly Usage.

TIME & DATE

Aug252016

130PM

▲▲▲

▼▼▼

✓

OPTIONS

i

When connected to the Internet, the time can be set automatically.

The time and date can be manually set by highlighting a field and then using the ▲ or ▼ buttons.

Time options are:

- 12 hour or 24 hour time format
- Automatic or manual time setting
- Time zone
- Daylight savings time

NOTICE

Incorrectly setting the time and date manually may prevent the thermostat from communicating to the mobile app. Automatic time source is recommended when using an Internet connection.

NOTICE

Before using the WiFi features of this product, you must accept the Terms of Use, as amended from time to time and available at [Watts.com/terms-of-use](https://www.watts.com/terms-of-use). If you do not accept these terms, this product can still be used without WiFi features.

The thermostat includes a step by step tutorial to setup the WiFi connection.

Tutorial

Before first using wi-fi features of this product, you must accept the Terms of Use available at <https://www.watts.com/terms-of-use> by pressing AGREE below.
If you do not accept these terms. this product can still be used without wi-fi features.

DISAGREE

AGREE

Step 1

Agree to Terms of Use

WIFI

☐ Off

☒ On

NEXT

Step 2

Turn on WiFi

NETWORK SSID

Select a network from the list:

Your House

←

CONNECT

Step 3

Enter wireless network name. It must support WPA2 security encryption.

Enter Password

A

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P

Q

R

S

T

U

V

W

X

Y

Z

Shift

A/1

Del

←

CONNECT

Step 4

Enter WiFi password.

ZIP/Postal

1

2

3

4

5

6

7

8

9

0

-

/

:

;

(

)

\$

&

@

"

.

,

?

!

'

\

Shift

A/1

Del

OK

Step 5

Enter ZIP or postal code. This determines your location for weather information.

Time Source

☒ Automatic

☐ Manual

NEXT

Step 6

Select if the time is set automatically from the Internet or manually.

6 of 12


Watts® Home App

To view and adjust the WiFi Thermostat using a mobile phone or tablet, download the Watts Home mobile app from the Apple® iTunes® Store or from the Google Play® Store.


Add Thermostat to App



Step 1
Create a new account. Then login using your username and password.

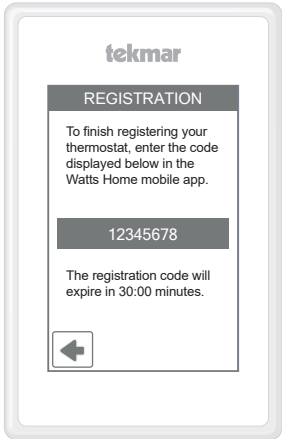


Step 2
On the thermostat, go to WiFi menu and press Register Device.

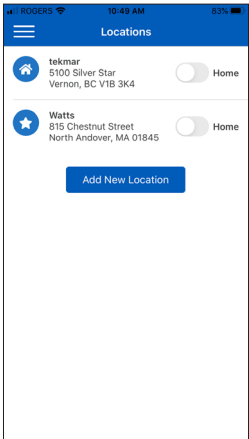


Step 3
Swipe left (Apple) or long hold (Android) to edit the Location name.



Step 4
Press the Location name and Add New Device.

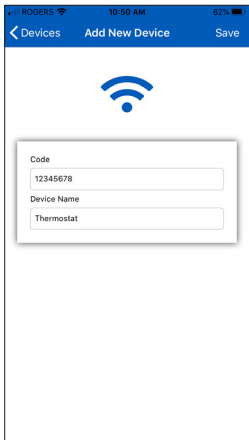


Step 5
Enter the 8 digit code from the thermostat into the mobile app. Then enter the thermostat's room name.

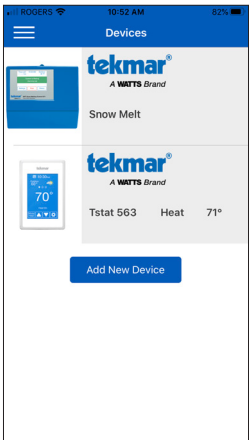

The thermostat is now listed on the Devices page.


Using the App

Settings

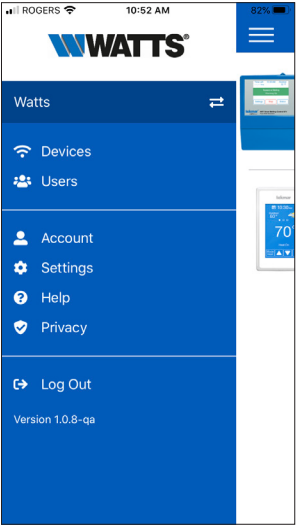

Press  for settings


Locations

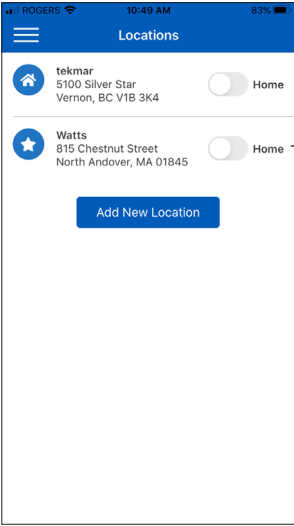

Toggle to  **Away** to save energy when you are away for a day or more


Swipe left or long hold to edit or remove location

Devices

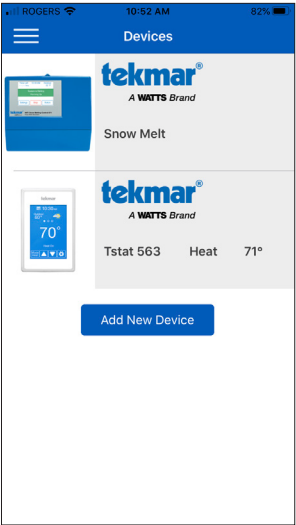

Swipe left or long hold to edit or remove device

Thermostat

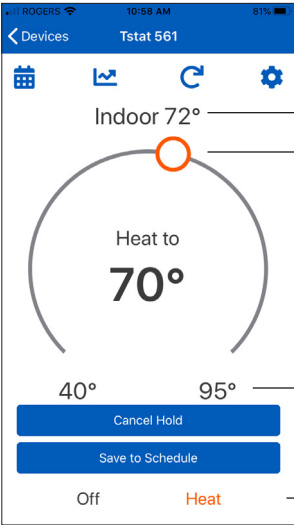

-  Edit schedule
-  Energy use
-  Refresh
-  Thermostat settings

Settings

The screenshot shows the 'Settings' app with a blue header bar containing a hamburger menu icon, 'User Settings', and a 'Save' button. The status bar at the top shows 'ROGERS', signal strength, '10:55 AM', and '81%' battery. The 'NOTIFICATIONS' section has three toggle switches for 'Push', 'Email', and 'Text', all of which are turned on. Below this is a 'Phone Number' field with the value '1555 555 5555' and a blue 'x' icon to its right. The 'PREFERENCES' section includes a 'Language' dropdown set to 'English', a 'Temperature Scale' dropdown set to 'Fahrenheit', and a 'Measurement Scale' dropdown set to 'Imperial'.

Change the notification and unit settings for your account

My Account

The screenshot shows the 'My Account' app with a blue header bar containing a hamburger menu icon and 'Account'. The status bar at the top shows 'ROGERS', signal strength, '10:54 AM', and '81%' battery. Below the header is a blue user icon. A text block states: 'The following information is managed outside of the Watts Home application. Please click the 'Update' button below to make changes in the system of record.' Below this is a white box containing two input fields: 'user name' and 'user@email.com', each with a corresponding icon (person and envelope). A blue 'Update' button is at the bottom of this box.

Update your user name

Invite Users

The screenshot shows the 'Invite Users' app with a blue header bar containing a back arrow, 'Users', and 'Invite User'. The status bar at the top shows 'ROGERS', signal strength, '10:55 AM', and '81%' battery. Below the header is a blue icon representing three people. A white box contains two input fields: 'name@email.com' with an envelope icon and 'Plumber' with a person icon. A blue 'Send Invite' button is at the bottom of this box.

Invite other users to access all the devices at a location

Page left intentionally blank

Need help? Go to our website or contact us.

tekmarControls.com | tekmar.customerservice@wattswater.com | 1-800-438-3903



A WATTS Brand

Tel: 1-800-438-3903 • Fax: (250) 984-0815
tekmarControls.com