



ATLAS 11.6" FHD CELERON L600 LAPTOP

KAL11L600PA


SAFETY & WARNINGS

- This product is suitable for use in non-tropical areas below 2,000 metres.
- Ensure the notebook is not dropped or strongly impacted.
- Do not use the appliance for long periods in any environment where the air is too cold or too hot ($>45^{\circ}\text{C}$), too humid or too dusty. Do not expose it to direct sunlight.
- Avoid using the unit in strong magnetic or static environments as much as possible.
- If any water or other liquid splashes onto the notebook, close it immediately, remove it from power and do not use it until it is completely dry.
- Do not clean the notebook with any chemical detergents or other liquids to avoid causing damage to the product. If cleaning is necessary, clean it with a dry, soft cloth or paper towel.
- Backup your important material regularly to avoid accidental data loss.
- Do not attempt to modify or disassemble the notebook.
- Replacing the battery with the incorrect type may cause an explosion. Make sure to use original batteries only.

COMPONENTS



 Atlas 11.6" FHD Celeron L600 Laptop

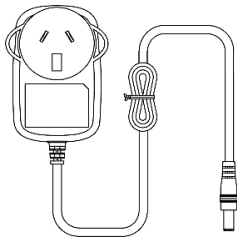

Power Adapter



User Guide



Warranty Card

OVERVIEW



1. Camera

This built-in camera can be used to take photos, record video, or for use in video chats.

2. Display

High-definition LCD display panel.

3. Microphones

The built-in twin microphones can be used to record voice memos and for use in calls.

4. Indicator lights

Indicators for **power on/off**, **caps lock on** and **digital key lock on** notices.

5. Power button

Press to turn the laptop on. You can also use this button to enter sleep mode and to wake it from sleep mode. If the laptop is unresponsive, holding down the power button for an extended period will shut down the device.

6. Keyboard

QWERTY keyboard with Windows key and function options. Hold the 'Fn' key while pressing function buttons (for example, **Fn + F5** to mute audio playback).

7. Trackpad

The touchpad allows for onscreen navigation and use of gestures. Think of this as your computer's built-in mouse.

8. Left/right trackpad buttons

Much like the left and right buttons on a traditional mouse, the trackpad features the same functionality.



9. SSD expansion slot

Slot for expandable storage. This laptop fits an M.2 2280 SSD (22mm x 80mm) and is not compatible with other sizes.

10. Speakers

Two built-in speakers allowing for stereo audio output.

11. Charge indicator light

Lights up red when the charger is in use.

12. Power input port

DC charging base for 12V/2A power supply (adapter supplied). Do not use with any other power supply or charger.

13. USB 3.0 input

Input for flash drives, additional keyboard and mouse, and any other devices with USB 3.0 connectivity. This input also supports USB 2.0 and below.

14. Mini HDMI output

Supports a mini HDMI cable (not supplied) for linking with a TV or external monitor.

15. microSD card slot

Card reader slot with microSD format support, ideal for important photographs.

16. 3.5mm audio out

Line audio out port for use with headphones, amplifier, external speakers of any other audio device via an AUX cable (not included).

17. USB 2.0 input

Input for flash drives, additional keyboard and mouse, and any other devices with USB 2.0 connectivity. This input is not compatible with USB 3.0 or above.

GETTING STARTED



1. Connecting the power supply

- a. Plug the power adapter into a suitable power outlet.
- b. Insert adapter into the laptop's power input port. The indicator light will show if power is being received.

When connected, the laptop will automatically begin to charge.

Ensure the battery has been charged for at least 3 hours before using without a power supply for the first time.

2a



2b



2. Power on the laptop

- a. Lift to open the display panel.
- b. Press the power button.


 
 
 

USING WINDOWS 10

1. Windows 10 start screen

On the start screen, you may see icons on the desktop that serve as shortcuts to some applications. You can easily open them by simply clicking on them. You may need to log onto a Microsoft account before some programs will run with full compatibility.


You can also click on the Windows icon in the lower-left corner to bring up the Start Menu.




	User icon. Allows you to change account settings, lock the notebook or sign out.
	Opens the Documents folder within 'This PC'.
	Opens the Pictures folder within 'This PC'.
	Opens the Windows Settings app. Allows you to change various aspects of the computer including apps, linked devices, time & language and account information.
	Allows you to Sleep, Shut down or Restart the computer.

2. Start Menu interface

 
Apps already installed on the computer can be accessed via the Start Menu. Some icons will automatically be added to the right-side section for easier access.

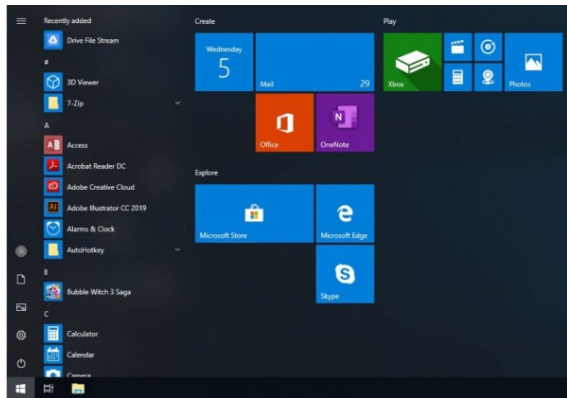

 More applications can be added to the computer via the Microsoft Store.

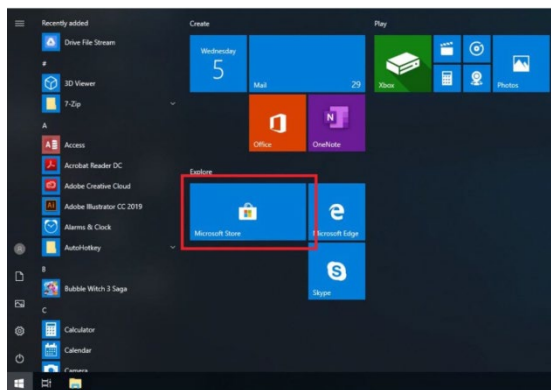


 Apps can be uninstalled by right-clicking on the icon in the Start Menu and selecting "Uninstall".

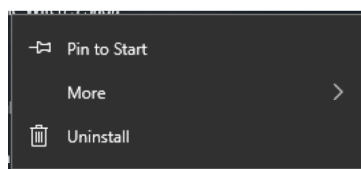



3. Notification Menu

 The notification menu is accessible via the icon in the lower-right corner of the task bar. It will show notifications such as updates, emails received and calendar reminders, and allows for quick access to settings like Wi-Fi, Bluetooth, brightness, etc.

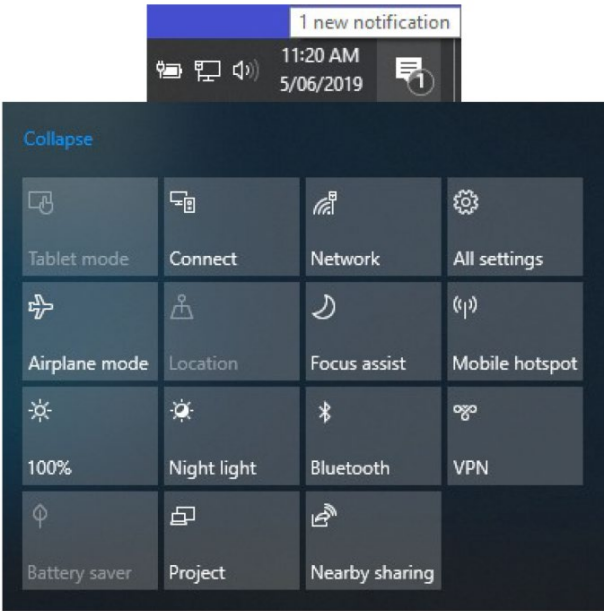


4. Multitasking

  Drag windows to the left or right sides of the screen and let go when you can see an outline of the window around half of the screen. You can then select another open window to fill the free space on the other half of the screen.

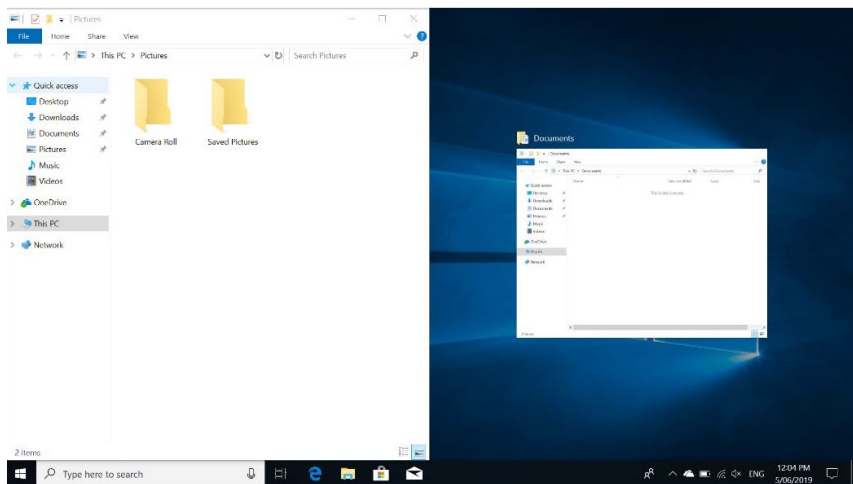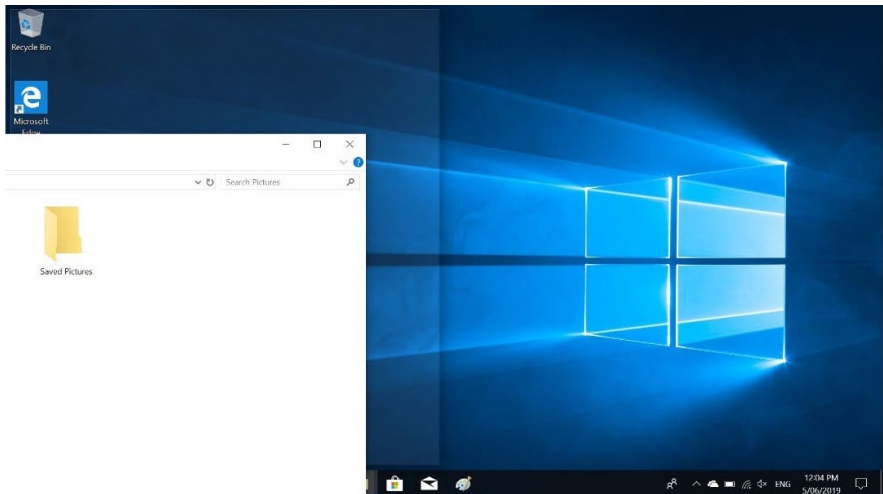

5. Sleep, Restart and Power Off

 Select the Windows icon in the lower-left corner, then click on the power icon, then select Sleep, Shut down or Restart.

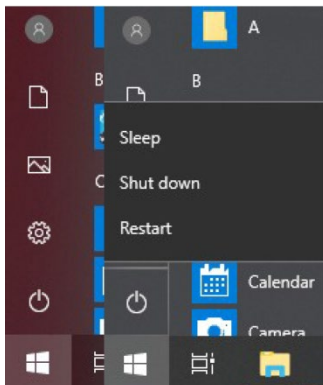

BASIC TROUBLESHOOTING

My laptop is not turning on/is not charging

- Leave the unit on charge for at least an hour before attempting to turn the unit on.
- The battery may have naturally depleted and may take some time to recharge. If in storage for extended periods of time, it is recommended to periodically charge the unit to keep the battery capacity high, as batteries naturally deteriorate and eventually completely die over time.
- Make note if any lights turn on, or if any internal components like fans turn on.
- Inspect the unit, charging port and power cord for any physical damage. If you notice any damage to the power cord, please do not use it and contact **help.kogan.com**

Wi-Fi connection is not working

- Restart your modem/router, or both if you have separate units.
- Reconnect any range extenders that may be in use.
- Restart the device that is having issues.
- Try moving the device closer to the source.
- If you cannot connect at all, double check that all passwords are correct.
- If you can connect but are getting weak or slow data, try disconnecting the device from the network manually and reconnect.

Screen gets dark when unplugged

- This will be occurring due to your power plan settings.
- You can set your power plan settings through the Control Panel.

I have forgotten my password

- There are several options to reset a Microsoft password.
- Use a password reset disc via USB.
- Reset Microsoft account password online with another device.
- Reset Windows back to the factory default. Please note, this will delete all personal files and settings.

For further information and the most up-to-date product guides for this laptop, please head online to help.kogan.com

SPECIFICATIONS

Audio

Speaker2 x 1W

Connectivity

BluetoothYes
Bluetooth Version4.2
Wi-FiYes
Wi-Fi Protocols2.4G, 5G

Dimensions

Dimensions299.20 x 200.20 x 23.60mm
Weight1.07KGS

Display

Screen Size11.6"
Screen Resolution1920 x 1080

Features

Built-In WebcamYes

Inputs/ Outputs

Headphone JackYes
Mini HDMI1 x 1.4a
USB 2.01
USB 3.01
microSDYes | Max. 256GB

Performance

CPUIntel® Celeron® Processor N3350
CPU Speed1.1 - 2.4GHz
GPUIntel® HD Graphics 500
Operating SystemWindows 10 Pro
System Memory (RAM)4GB

Power

Battery Capacity4000mAh
Battery TypeLithium-ion Polymer battery

Storage

SSD SlotM.2 2280 SATA
Storage Capacity64GB
Storage TypeeMMC

NOTES

[illegible]

NOTES

[illegible]

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com