

This Getting Started Guide and the full length EQUINOX® User Manual are available to download online.



EQUINOX

700 | 900

Get these languages and more:

DE Deutsch

FR français

KR 한국어

RU русский

ES Español

JP 日本語

PT Português

ZH 中文


GETTING STARTED GUIDE



QUICK START

1

TURN
ON

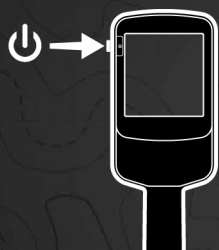

2

SELECT
SEARCH MODE



3

NOISE
CANCEL



4

GO
DETECTING



SEARCH MODES

* EQUINOX 900 Only

PARK

Great for high-trash recreational areas, including most general detecting.



General and
Coins

Fine
Jewellery

FIELD

Ideal for detecting in historical fields for the widest range of target sizes.



Coins and
Artefacts

Fine Coins and
Artefacts

BEACH

For all salty conditions — dry sand, wet sand, surf and underwater.



Wet and
Dry Sand

Underwater
and Surf

GOLD*


For gold nugget prospecting in mineralised gold field locations.



Normal
Ground

Difficult
Ground

ASSEMBLY

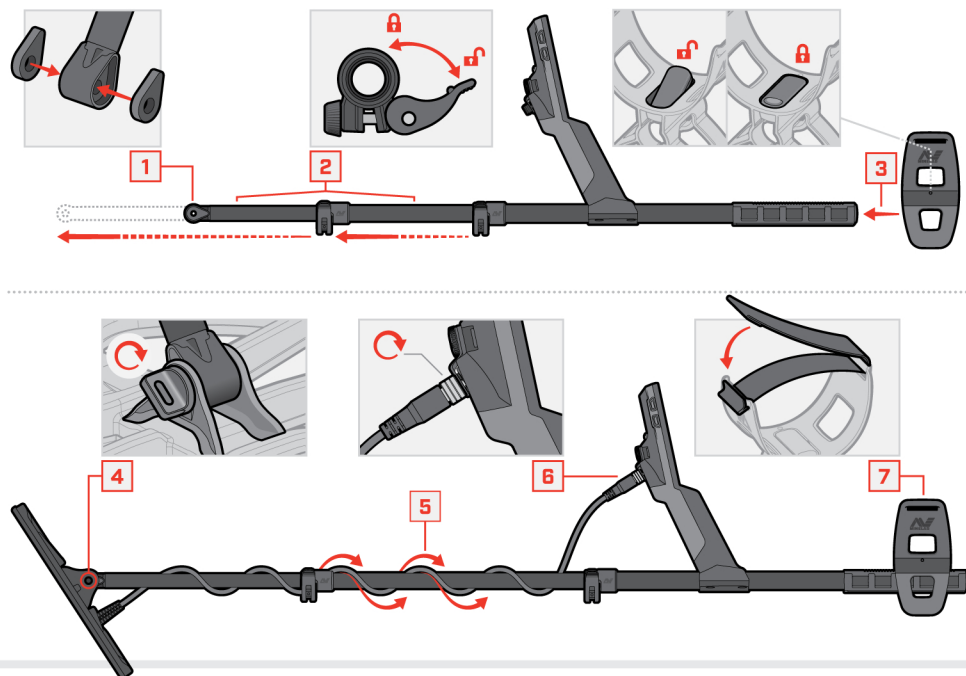

TIGHTEN CAMLOCKS

Tighten the Camlocks if they slip or become loose.



 
Open



Tighten gently in increments




Close



Check and repeat if needed

CHARGING

5-6 HOURS

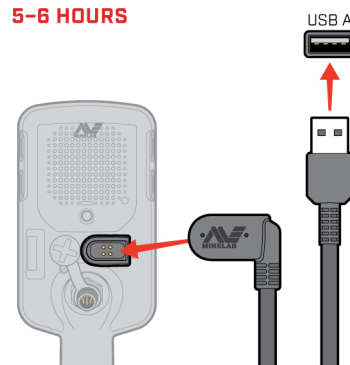

⚠ Charge your detector with a good-quality USB charger that has a minimum charging capacity of 2 A @ 5V.

Risk of USB charger failure if a low quality charger is used.

Look for the following marks on USB chargers:



3 HOURS



CONTROLS & DISPLAY



* EQUINOX 900 Only