

Model:BT668

ORIGBELIE

User Manual

External CD DVD Drive

V1.0

Shenzhen Top-Teck Technology Co.,Ltd
Email:ORIGBELIE@outlook.com
Address:B2003, Building 1, Fenghui Garden,
No.9 Nanhuan Road,Shijia Community, Matian Street,
Guangming District, Shenzhen,
Guangdong, 518000, China



Specifications

Brand	ORIGBELIE
Model Number	BT668
Power Supply	DC 5V
Weight	0.76lb
Length of Cable	24.5cm/9.4inch
Size	143*154*18mm/5.6*6.1*0.7in

Widely Compatible

Laptop/Desktop Computer
CD: CD-ROM, CD±R/RW
DVD: DVD ROM, DVD RAM, DVD±R/RW
Windows XP/7/8/10, Mac OS, Linux

Not Compatible

Blu-ray Disks/Chromebooks/Cell phone / TV / Cars /
Projectors / Tablets / PS4

-03-

How to Use

- Step 1:** Connect an external drive to your laptop via a USB cable.
- Step 2:** Set the area identification mechanism of the external drive is consistent with the area code attached to the disk [The region code attached to the DVD disc is marked on the disc. Discs without codes can be played on any player in any country].
- Step 3:** Press the eject button on the external drive.
- Step 4:** Place the disc in the tray label-side up, and close the tray by pushing it.

Note

1. Please connect the device through the original data cable [extension cable is not recommended].
2. When the CD is being read or burned, please cancel the "sleep mode" of the computer; otherwise the data on the CD will be lost or damaged.
3. The front USB port of the desktop computer host may be unavailable, it is recommended to use the back USB port.


-04-

Thank you for purchasing the ORIGBELIE BT668 External CD DVD Drive. Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact our support team with your product model and Amazon order number.

Package Contents

- External CD DVD Drive *1 USB A to Micro USB Cable * 1
Drawstring Bag *1 User Manual *1

Product Diagram

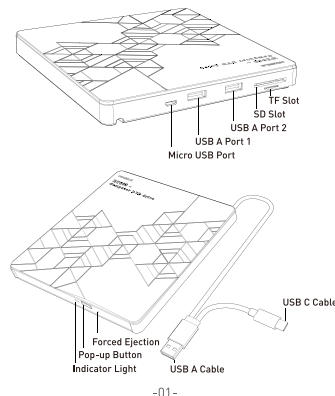

-01-

Attention

- 1.It's better to use the external power adapter to increase the power if your devices don't have enough power to support the external drive.
- 2.Make sure your computer has a driver before using the external drive.(VLC media player or other player software.)
3. The SD card slot and TF card slot cannot be used at the same time.
- 4.The portable CD/DVD burner cannot play blu-ray disc or game disc that over 8.5 GB.
5. The ORIGBELIE DVD drive only allows 4 changes of region code. Once the limit is reached, it cannot be changed.

Tips: About DVD Region Code

- 1.A disc purchased in one country may not be playable on a player purchased in another country. The region code attached to the DVD disc is marked on the disc. [Discs without codes can be played on any player in any country.]
- 2.So you need to set the region code of the extended CD drive to be consistent with the CD to play the CD.

-05-

Feature

Burner & Reader

Support burn and read discs (blu-ray is not supported).

Plug & Play

No need to download additional drivers.

USB 3.0 CD Drive

The USB 3.0 technology offers a maximum data transfer rate of 5Gbps, Music transfer only takes a few seconds.

Extra USB-C Connector

Comes with an additional USB C connector, compatible with the latest laptops that no built in USB A interface.

Extra 2 USB Port & SD/TF Card Slot

The drive has 2 USB Port and SD/TF Card Slot, so it can be used as a laptop hub.

-02-

Warranty & Customer Support Customer Support

For questions, support, or warranty claims, contact us at the address below with Amazon order number and product model number.

ORIGBELIE@outlook.com

* Please note, ORIGBELIE can only provide after sales service for items purchased directly from ORIGBELIE. If you have purchased from a different seller, please contact them directly for service or warranty issues.

Warranty Card

Thank you for purchasing ORIGBELIE products

Through rigorous quality testing, all our products are 100% guarantee satisfaction provided. For more information, please consult our Amazon stores: www.amazon.com/shops/ORIGBELIE

Guarantee:

- 1.Customers buy ORIGBELIE products will get superior after-sale service.
- 2.You can return back for replacement within 30 days if there is any quality issues without man-made destroy or maintain, keep the packaging integrity.
- 3.Enjoy one year of free maintenance.
- 4.Guarantee excluding:
 - ① Man-made destroy, working in an informal working environment.
 - ② Without the guarantee card or effective invoice of purchase.
 - ③ Exceeds the warranty period.

-06-