 
 




| Original                                                                                          | Replacement                                                                                                  | Original                                                                                                  | Replacement                                                                                                 |
|---------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
|  Power           |  Power                      |  TAPE Deck 1/2         |  Shift + 1               |
|  Sleep           |  Sleep / Timer              |  AUX                   |  Shift + 7               |
|  Timer Fader     |  Shift + Sleep / Timer      |  TAPE REW              |  Zoom / Size             |
|  Program         |  Shift + TV/Radio / Program |  TAPE FF               |  Audio / Lang I/II       |
|  1               |  1                          |  TAPE Stop             |  Stop / Hold             |
|  2               |  2                          |  TAPE Play / Rev. Play |  Setup / OPT /           |
|  3               |  3                          |  TAPE Play / Rev. Play |  Shift + Play /          |
|  4               |  4                          |  TUNER Tune-           |  CH- / Page-             |
|  5               |  5                          |  TUNER Tune+           |  CH+ / Page+             |
|  6               |  6                          |  TUNER FM              |  TV/Radio /              |
|  ≥10           |  Guide / EPG / -/-        |  TUNER               |  Shift + 6             |
|  7             |  7                        |  TUNER               |  Shift + 9             |
|  8             |  8                        |  CD I<<              |  Shift + I<< / Preset- |
|  9             |  9                        |  CD I<<              |  I<< / Preset-         |
|  0             |  0                        |  CD >>I              |  Shift + >>I / Preset+ |
|  TAPE Rev Mode |  Shift + 5                |  CD >>I              |  Shift + >>I / Preset+ |
|  TAPE C-Reset  |  Text / Goto              |  CD Stop/Clear       |  Pause / Step / Freeze |



