

# AIR PURIFIER

## USER MANUAL



High Clean Air  
Delivery Rate



3-Stage Filtration  
System



Low Noise Level



 
Child Lock



Optional Light



ECO Mode

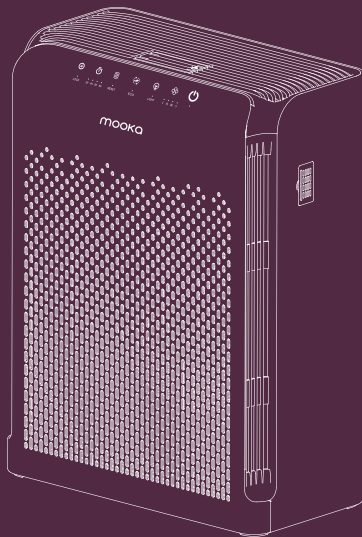

# READ AND SAVE THESE INSTRUCTIONS

---

## CUSTOMER SERVICE

Our customer service team is standing by to assist you if you have any questions or concerns.

Unplug or disconnect the appliance from the power supply before servicing.

**WARNING:**

To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Fan With Any Solid-State Speed Control Device.

**WARNING:**

To Reduce The Risk Of Fire, Electric Shock Or Injury To Persons, Do Not Use Replacement Parts That Have Not Been Recommended By The Manufacturer (e.g. Parts Made At Home Using A 3D Printer)



[www.mookashops.com](http://www.mookashops.com)



[support@mookashops.com](mailto:support@mookashops.com)



1-855-666-9955

**CONTENT**

**IMPORTANT SAFEGUARDS**

Warning ----- 2

Attention ----- 4

**PRODUCT TECHNICAL FEATURES**

Purification Technologies ----- 6

Air Purification Process ----- 6

**PRODUCT OVERVIEW**

Appearance Diagram ----- 7

Control Panel Diagram ----- 8

**OPERATING INSTRUCTIONS**

Placement ----- 9

Filter Replacement----- 9

Power Connection ----- 9

Filter Removal----- 10

Filter Installation----- 10

Aroma Function ----- 11

Power Settings ----- 12

**CONTENT**

**INSTRUCTIONS FOR USE**

Child Lock ----- 13

Fan Speed ----- 14

Time ----- 15

Filter Replacement Indicator ----- 16

Ambient Light ----- 16

ECO Mode ----- 17

**TROUBLESHOOTING**

Troubleshooting ----- 18

**TECHNICAL SPECIFICATIONS**

Unit Specifications ----- 19

Filter Specifications ----- 19



## IMPORTANT SAFEGUARDS 1

In order to prevent harm or damage happened to users or others, be sure to comply with the requirement as below:

### READ AND SAVE THESE INSTRUCTIONS



#### WARNING

It reminds that misusing or mishandling may cause death.



#### ATTENTION

It reminds that misusing or mishandling may cause hurt.



FORBID



FORCE

## 2 IMPORTANT SAFEGUARDS



### WARNING



Please supervise your children and prevent them from touching or using machine.



AVOID WET

Do not connect or disconnect the power with wet hands. It may cause electrical shocking.



NO DISASSEMBLE

Do not disassemble, repair or reconstruct.  
It may cause fire or damage.  
Please contact our customer support for replacement



FORBID

Do not use over-limit sockets or wiring connectors.  
Please use the rated voltage.  
It may cause a fire.



AVOID WET

Avoid any water on the surface of the unit.  
It may cause short circuit or electrical shocking.

## IMPORTANT SAFEGUARDS 3



### DISCONNECT

Before cleaning or performing maintenance, always disconnect the appliance from the power supply. Otherwise, the unit may suddenly start operating, which could result in electric shock or injury.



### POWERFORBID

Do not insert any metal objects into the unit.  
It may cause hurt or electric shocking.



### FORBID

Do not repair it when the cord or plug is damaged. It may cause short circuit, electric shocking or fire. Please contact our customer support for replacement.



Dust on the plug can weaken insulation and potentially cause a fire. Unplug the device and clean the plug with a dry cloth. If the device will not be used for an extended period, remove the plug from the socket.

## 4 IMPORTANT SAFEGUARDS



 
### ATTENTION




Do not use in a room with a gas stove, as the machine is not a ventilator and may cause injury.



Do not place the unit near fires. It may cause fire.

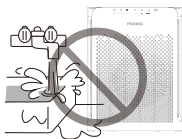

 Do not use in humid or high-temperature environments such as bathrooms. Otherwise, it may cause electric leakage, electric shock, or fire.

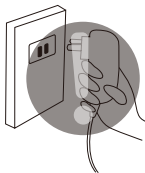


Please hold the plug instead of the cord when unplugging the device. Otherwise, it may cause a short circuit, damage to the cord, electric shock, or fire.

## IMPORTANT SAFEGUARDS 5



 Keep away from alcohol, organic impregnant. It may cause cracking, short circuit, electric shock, injury or fire.

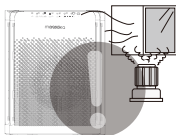

Please ventilate timely when used with fire in the room.

Unplug the device immediately if any of the following conditions occur:

- Switches not working
- Overheating of the power cord or plug
- Unusual smells, noises, or vibrations
- Any other signs of malfunction

If the power cord is damaged, contact the customer service.  
Do not attempt to repair it yourself.

Before servicing, ensure the appliance is unplugged or disconnected from the power supply.

WARNING: Do not use this fan with solid-state speed control devices to avoid fire or electric shock risks.


WARNING: Use only manufacturer-recommended replacement parts. Homemade parts, including 3D-printed components, are not safe and may cause fire, electric shock, or injury.

## 6 PRODUCT TECHNICAL FEATURES
 
### Purification Technologies


The multi-functional filter includes a pre-filter, HEPA layer, and activated carbon layer for comprehensive air purification.

### Air Purification Process

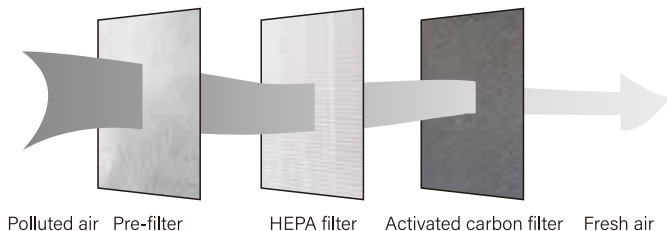


## PRODUCT OVERVIEW 7
 
### Appearance Diagram

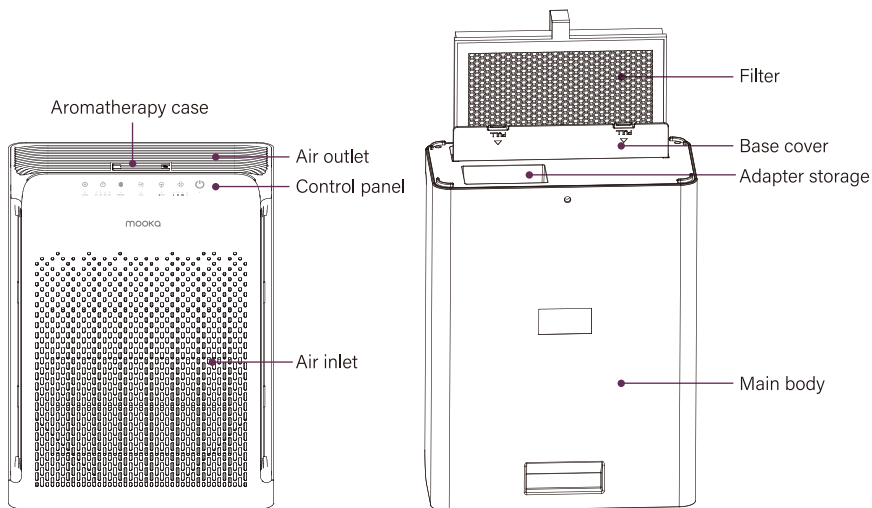

## 8 PARTS TO INTRODUCE
 
### Control Panel Diagram

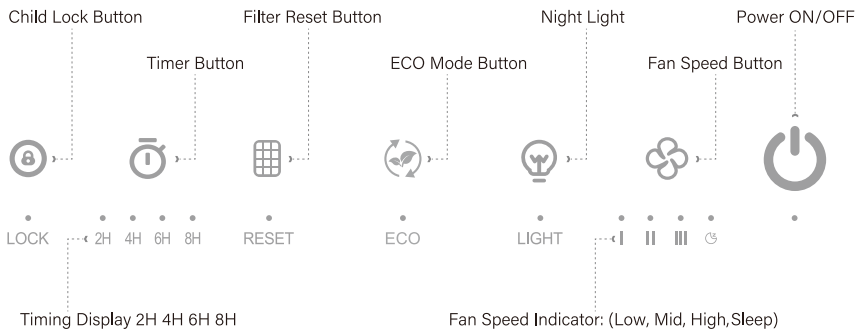



## OPERATING INSTRUCTIONS 9

### Placement

- ◆ Ensure the appliance is placed at least 30cm away from walls or furniture. Avoid placing it under objects that may block the airflow.
- ◆ Avoid placing the appliance near heat sources.

### Filter Replacement

 
- ◆ Replace the filter and reset the indicator.

After 1440 hours of operation, the filter replacement indicator will light up. Replace the filter with a new one, then press and hold the reset button for 3 seconds to reset the filter's lifetime counter. The indicator will turn off.

### Power Connection

- ◆ DC Voltage: 100-240V 50/60Hz

Before connecting the appliance, ensure the voltage indicated on the device matches the local power supply. Do not connect to an incorrect voltage.

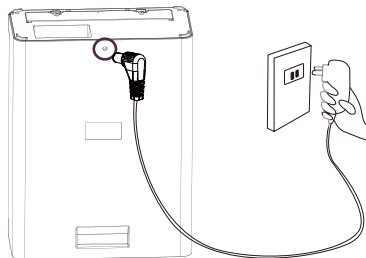

Machine socket

Adapter


## 10 OPERATING INSTRUCTIONS
 
### Filter Removal

Turn off and unplug the appliance, then turn it upside down.  
Open the bottom cover and remove the filter.

### Filter Installation


Remove the protective film from the new filter before installation.  
Close the bottom cover securely after installing the filter.

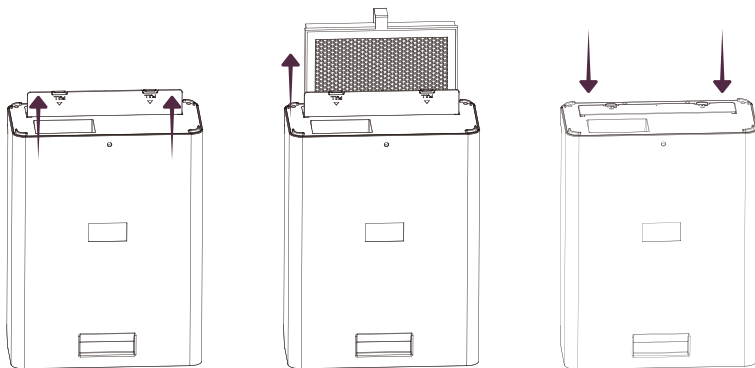

## OPERATING INSTRUCTIONS 11

### Aroma Function

 - ◆ The aroma tray on the top air outlet includes a replaceable aroma pad. Add a few drops of essential oil (not included) to create a fresh and relaxing atmosphere.

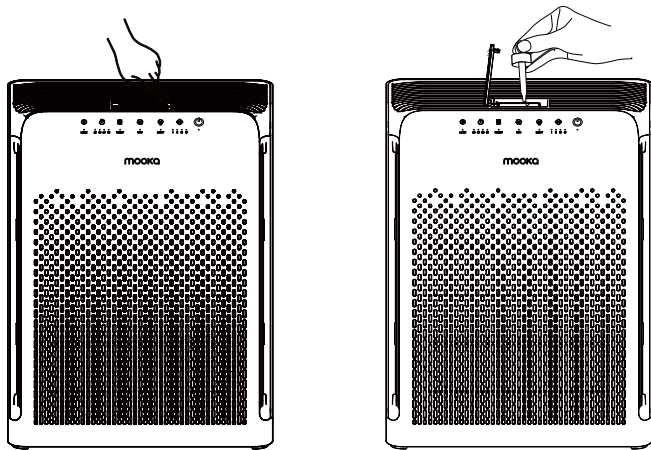

## 12 OPERATING INSTRUCTIONS

### Power Settings

- ◆ When powered on, all display lights will activate for a self-check. After the self-check, the lights will turn off, and the machine will enter standby mode.  
In standby mode, touch the top power switch to turn on the device. The fan will start at low speed by default, and the night light will turn on. Touch the switch again to turn off the device and return to standby mode.



•  
LOCK



•   •   •   •  
2H   4H   6H   8H



•  
RESET



•  
ECO



•  
LIGHT



•   •   •   •  
I   II   III   ⌚



•

Standby Mode



•  
LOCK



•   •   •   •  
2H   4H   6H   8H



•  
RESET



•  
ECO



•  
LIGHT



•   •   •   •  
I   II   III   ⌚



•

Self-check State

## INSTRUCTIONS FOR USE 13

### Child Lock

- ◆ Press and hold the LOCK button for 3 seconds to enable child lock. The child lock light will turn on, and all buttons will be locked. Hold the LOCK button again for 3 seconds to disable child lock and restore normal button functions.



LOCK



2H 4H 6H 8H



RESET



ECO



LIGHT



I II III ⌂



Child Lock On



LOCK



2H 4H 6H 8H



RESET



ECO



LIGHT



I II III ⌂

 


Child Lock Off

# 14 INSTRUCTIONS FOR USE

## Fan Speed




◆ In sleep mode, the indicator light is half-lighted.

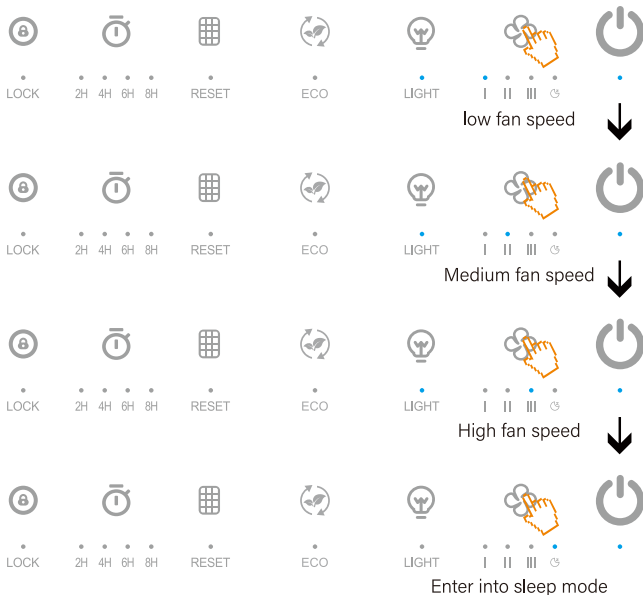

# INSTRUCTIONS FOR USE 15

## Timer

   
- ◆ Touch the timer button to set the timer.

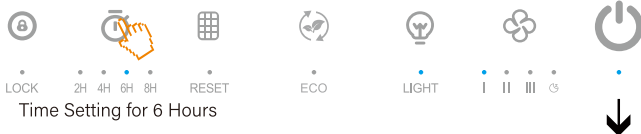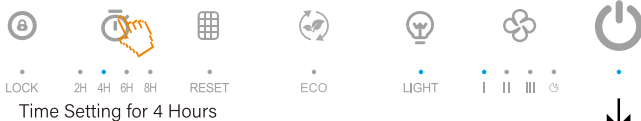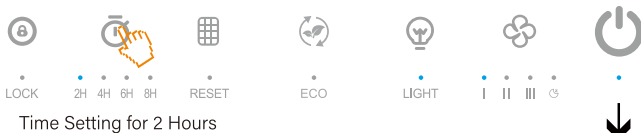

## 16 INSTRUCTIONS FOR USE

### Filter Replacement Indicator

 
- ◆ The filter replacement indicator light will illuminate after 1440 hours of use. Remove the new filter's plastic bag and install it properly. Hold the filter reminder button for 3 seconds to reset it.




The indicator light is on

### Ambient Light

 - ◆ Press this button to control the ambient light. The optimal night light creates a calming, multi-sensory effect for relaxation.



Lights on

 

Lights off



# INSTRUCTIONS FOR USE 17

## ECO Mode

- ◆ Tap the button to turn the ECO mode on/off. The unit will operate at low speed. And it will run for 30 min, stops automatically, waits for 30 min and then runs again automatically, following this regular cycle. It'll be more energy efficient in ECO mode.

**Reminder:** When ECO mode is activated, the night light will automatically turn off to save energy. You can manually turn it back on if needed.



ECO mode on



# 18 TROUBLESHOOTING

## TROUBLESHOOTING

Problem	Checking methods	Possible solution
No Power Adapter	<ul style="list-style-type: none"> <li>Please check the bottom of the device for a small space containing the adapter.</li> </ul>	➡ If the adapter is not included in the package, do not return it, Contact customer service for support.
Do not work	<ul style="list-style-type: none"> <li>Please check if the plug is unplugged</li> </ul>	➡ Please ensure the plug is properly connected.
Odor can not be removed	<ul style="list-style-type: none"> <li>Is there a strong odor in the room? (Note: Run the purifier continuously.)</li> </ul>	➡ It is recommended to ventilate the room before operating the machine.
	<ul style="list-style-type: none"> <li>Has the filter reached the end of its lifespan?</li> </ul>	➡ Please replace the old-filter with a new one.
High noise	<ul style="list-style-type: none"> <li>Is the filter's PE bag still on?</li> </ul>	➡ Please take out filter and tear off PE bag
	<ul style="list-style-type: none"> <li>Has the filter reached the end of its lifespan?</li> </ul>	➡ Please replace the old-filter with a new one.
This air purifier stops suddenly during operation	<ul style="list-style-type: none"> <li>In ECO mode, it will run for 30 min, stops automatically, waits for 30 min and then runs again automatically, following this regular cycle.</li> </ul>	➡ This is normal. It'll be more energy efficient.
	<ul style="list-style-type: none"> <li>If a timer is set, the machine will automatically stop when the timer expires.</li> </ul>	➡ This is normal.
	<ul style="list-style-type: none"> <li>Can't turn it on again</li> </ul>	➡ Please contact our customer service for support

NOTE: If the issue persists after following the above steps, please contact our customer service for support.

## TECHNICAL SPECIFICATIONS 19

### UNIT SPECIFICATIONS

Model No.:	M200L
Power supply:	DC 100V-240V 50/60Hz
Net Weight:	3,2KG
Noise level (dB):	15-50dB
Power consumption (W):	24W
Dimensions (wxdxh):	305x154x398 (mm)

### FILTER SPECIFICATIONS

Size:	244x39x323 (mm)
Life time:	1440H

# mooka

*Beyond Elegance*



[www.mookashops.com](http://www.mookashops.com)



[support@mookashops.com](mailto:support@mookashops.com)



1-855-666-9955



Made in China