 


# USER GUIDE

Please read this instruction thoroughly before using this product and keep it for future reference.

# FUNCTION OVERVIEW

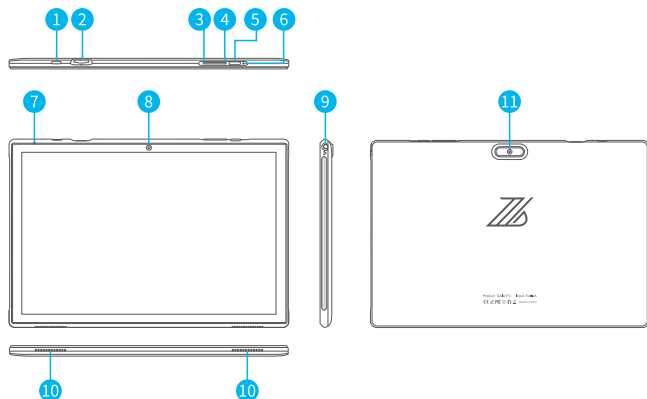

- |                     |                        |                   |
|---------------------|------------------------|-------------------|
| 1. USB-C Port       | 5. Power On/Off        | 9. Headphone Jack |
| 2. Memory Card Slot | 6. Reset               | 10. Speakers      |
| 3. Volume +         | 7. Microphone          | 11. Rear Camera   |
| 4. Volume -         | 8. Front-facing Camera |                   |

\* Google, Android, Google Play and other marks are trademarks of Google LLC.

## GETTING STARTED

### Power On/Off

- \* Press and hold the power button for 2-3s to turn on your tablet. Select your language and set up your tablet following the start guide.
- \* Press and hold the power button for 2s, then release it. It will show **Power off**, **Restart** and **Screenshot** on the screen. Tap **Power off** to turn off the tablet.
- \* Press and hold the power button for 7-8s to do a forced reboot when it's frozen.

## Battery

- \* A rechargeable Li-ion battery is installed in the tablet.
- \* DO NOT attempt to replace the tablet battery by yourself because you may damage the battery, which might cause overheating, fire or injury.
- \* DO NOT dispose of tablet in a fire.
- \* DO NOT expose the tablet battery to any heat source, direct sunlight or high temperature.
- \* Only use the **ORIGINAL** power adapter provided by us to charge the tablet battery.
- \* We suggest you drain the battery completely once a month if only use your tablet occasionally.
- \* The Li-ion battery in your tablet should be serviced or recycled by an authorized service provider, and must be recycled or disposed of separately from household waste.
- \* Dispose of battery according to your local environmental laws and regulations.

## Sleep Mode

Simply press the power button once to switch the tablet to the **Sleep Mode** when the tablet is **ON**; press again to wake it up.

Tip:

 
Go to **Settings > Display > Screen timeout** to set the time of entering the **Sleep Mode**.

## Screenshot

- \* Press and hold the **Volume-** button and the **Power On/Off** button together to capture a picture.
- \* Press and hold the power button for 2s, then release it. It will show **Power off**, **Restart** and **Screenshot** on the screen. Tap **Screenshot** to capture a screenshot.


# HOME SCREEN

## Icons on the Bottom Menu

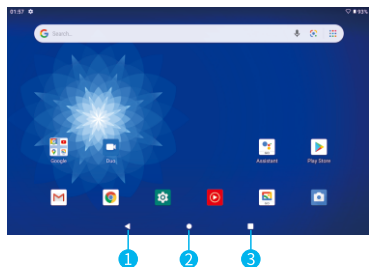

1. Back
2. Home Screen
3. Recent Activities

## Home Settings, Widgets and Wallpapers

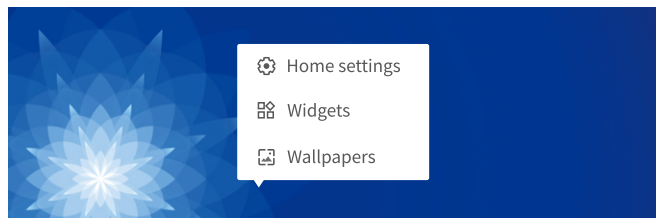 



Tap and hold the empty section of a Home screen, **Home settings**, **Widgets** and **Wallpapers** will be displayed.






- \* Tap **Home Settings** to enable/disable **Add icon to Home screen**. This is applicable to the new Apps installed from **Play Store**. Tap **Home Screen loop** to allow continuous Home Screens swiping/sliding; tap **Pull down action** to select the action when you swipe downward on the Home Screen, and more.
- \* Tap **Widgets**, touch and hold any application (e.g. Clock), then slide and add it to a Home screen. Remove it by sliding it to **X Remove**.
- \* Tap **Wallpapers** to change the current wallpaper of the tablet from the default wallpapers or your photos.

# SETTING BASICS
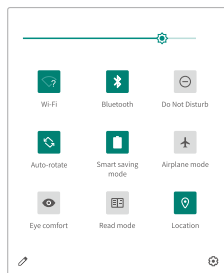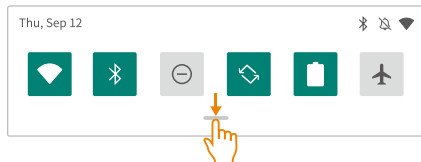  
## Quick Settings

Swipe down from the top of the screen to access **Quick Settings**.




-  : **Wifi**. Tap to connect/disconnect to a wireless network
-  : **Bluetooth**. Enable/disable the Bluetooth of the tablet
-  : **Do Not Disturb**. Block sound after enabling this function
-  : **Auto-rotate**. Turn on/off the **Auto-rotate** of the screen
-  : **Smart saving mode**. Tap to choose the power setting you prefer to save the battery time

 : **Airplane Mode**. Turn on/off all the network connectivity


 : **Eye comfort**. Enable/disable the eye protection mode


 : **Read mode**. The screen will be black and white after enabling this option

 : **Location**. Enable/disable location access

Tap the  icon to change the options in the **Quick Settings**. Long press each icon to enter the interface of its detailed settings.

## More Settings

 Swipe down from the top of the screen, then tap the  icon to enter the detailed setting interface. Or, tap the **Settings** App on the Home screen to enter.

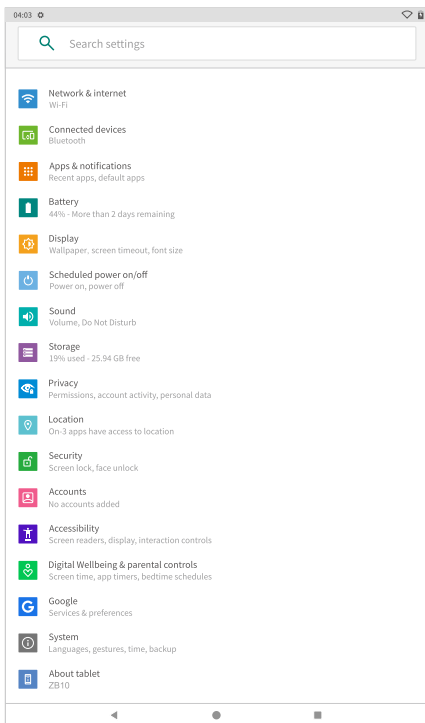

## Network & internet

- \* Connect to any working Wifi
- \* Enable/disable the **Airplane Mode**
- \* Add VPN connections
- and more

## Connected devices

- \* Turn on/off Bluetooth
- \* Pair with Bluetooth devices and check the paired devices
- \* Check the received files from other devices via bluetooth connection
- \* Add and check printers
- \* Check the connection status of the cast devices and more

## Apps & notifications

- \* Check the Apps recently opened
- \* Check all the Apps on the tablet
- \* Set the App permissions
- \* Uninstall the third-party Apps
- \* Adjust App notification settings
- \* Clear the cache of the Apps
- \* Set default apps
- \* Check the screen time for Apps and more

## Battery

- \* Display or hide the remaining power as a percentage
- \* Enable/disable **Battery percentage** and **Battery Manager**
- \* Set **Power saving optimization**
- \* Manage the battery optimization for apps
- \* Check the time for **Last full charge** and **Screen usage since full charge**

## Display

- \* Adjust the screen brightness
- \* Turn on/off **Eye comfort**
- \* Change the wallpaper
- \* Enable/disable the **Dark theme**
- \* Adjust the time of entering the sleep mode
- \* Turn on/off the auto-rotation of the screen
- \* Adjust the font size and display size

- \* Set a screen saver and more

## Scheduled power on/off

- \* Set the time and days of the week for the tablet to automatically turn on/off

## Sound

- \* Set sound level for **Media, Alarm** and **Notification**
- \* Enable/disable **Do Not Disturb** to mute sound and stop vibration
- \* Set default notification sound and alarm sound
- \* Enable/disable **Screen locking sounds, Charging sounds** and **Touch sounds**

## Storage

- \* View and manage your storage space

## Privacy

- \* Set app permissions
- \* Set to show/hide the password when input a password
- \* Set the **Lock screen** preferences
- \* Add an account and autofill service from google and more

## Location

- \* Turn on/off the location services for specific Apps
- \* Set apps that have access to location
- \* Enable/disable **Wifi and Bluetooth scanning** and more

## Security

- \* Check the security status
- \* Set screen lock pattern, e.g. Password, PIN, Swipe etc.
- \* Enable Face unlock to unlock screen by your face
- \* Choose a **Smart Lock** to keep the device unlocked if you preset a lock pattern
- \* Allow the admin apps to **Find My Device** and lock or erase a lost device and more



## Accounts

- \* Add and manage the user accounts on your tablet

## Accessibility

- \* For vision and hearing impaired users, manage settings for **SCREEN READERS**, **DISPLAY**, **INTERACTION CONTROLS**, **AUDIO & ON-SCREEN TEXT** and **EXPERIMENTAL**


## Digital Wellbeing & parental controls

- \* Check your app usage based on **Screen time**, **Notifications received**, or **Times opened** from **Dashboard**
- \* Manage the related notification settings to reduce interruptions
- \* **Set up Parental controls** to help your kids balance their screen time and more

## Google

- \* Set the preferences for Google™ related services

## System

- \* Set Language  
Tap **Languages & input > Languages > +Add a language** to add your language. After adding, hold and slide the  to the top to change the language
- \* Set the date and time
- \* Turn on/off the **Back up to Google Drive**
- \* Restore factory setting  
Tap **Reset options > Erase all data (factory reset)** to restore the factory setting
- \* Check and update the tablet's system

## About tablet

 
 
- \* Check the detailed information about the tablet

# NETWORK CONNECTION

## Wifi Connection

Go to network settings from the **Settings** App or by long pressing the Wifi icon in **Quick Settings**.

1. Tap **Network & internet** and turn on the **Wifi**. All the Wifi connections available will be listed.
2. Select your Wifi and input the correct password.

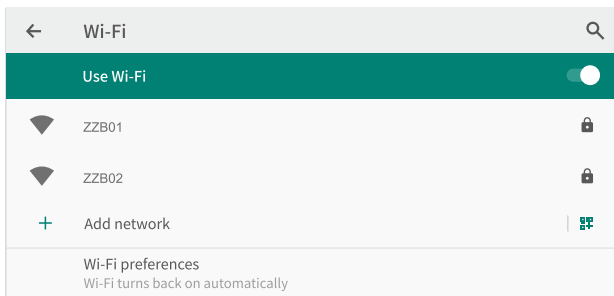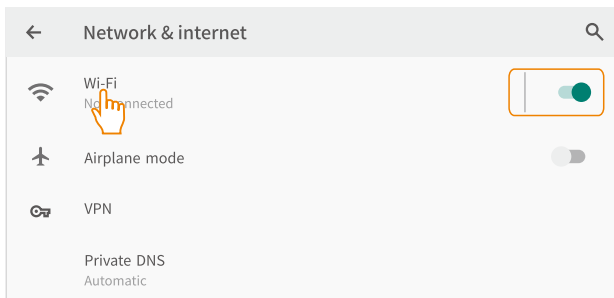

## Bluetooth Pairing

Launch the App **Settings** and go to **Connected devices**, or long press the Bluetooth icon in **Quick Settings**.

1. Tap **+Pair new device** to enter the scanning interface. Devices available will be displayed after a few seconds.
2. Tap the desired device to get a pairing code and click **PAIR** on both devices. The automatic connection is applied to some devices.

## APP MANAGEMENT

### App Download and Installation

1. Tap and open **Play Store** on the Home screen.
2. Log into your google account, search and download the App you need.

### App Management

#### Move the App

Tap and hold the App, then slide it to a desired screen.

#### Remove the App from the Home screen

Touch and hold the App, then slide to **X Remove** to remove it from your Home screen.

#### Uninstall the App

Touch and hold the App, then slide to the  **Uninstall** to uninstall the App.

#### Clear the Cache of the App

1. Go to **Settings > Apps & notifications**.
2. Select an App > **Storage & cache > CLEAR CACHE** to clear the cache.

# INTERNET NAVIGATION

Please make sure the tablet is connected to a working Wifi network before navigating the Internet.

You may use the pre-installed Chrome browser or use another browser downloaded from Play Store.

## MULTIMEDIA

 
### Connecting to a Computer

 
 
1. Connect your tablet to the computer with a USB cable.
2. **Media device(MTP)** is the default setting. Go to your computer and find your tablet ZB10 to transfer files between your tablet and computer.

Tips:

Go to **Quick Settings**, tap **Android System · USB file transfer turned on > Tap for more options > USB computer connection** to select the option preferred.


- \* Select **Charge Only** to charge your tablet.
- \* Select **Camera(PTP)** to transfer photos between the devices.
- \* Select **MIDI** to play MIDI instruments on the tablet.

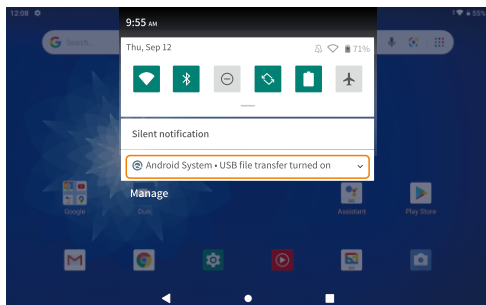

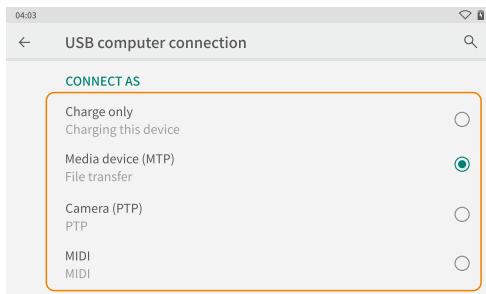
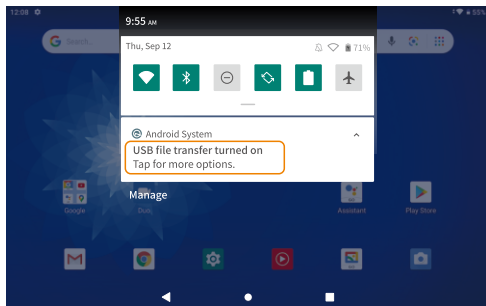


## Connecting to an External Device

 1. Install a memory card (up to 128GB) into the memory card slot when the tablet is off.

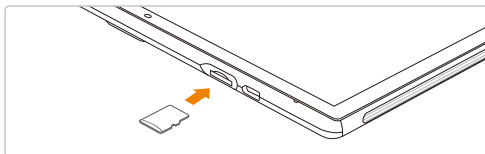

  2. Turn on the tablet, then go to **Quick Settings** and tap to set up.
3. Set the memory card as a portable storage by selecting **Portable storage**. Enter memory card storage to move files between the card and tablet.

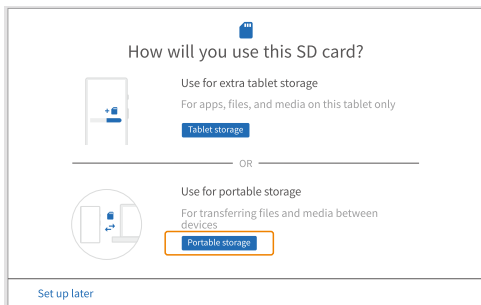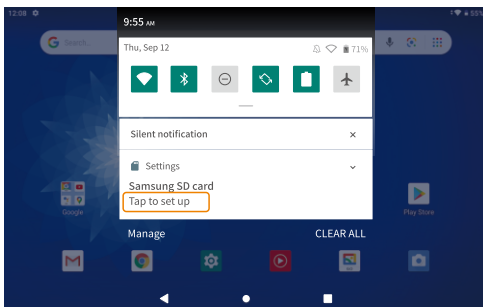

# TROUBLESHOOTING

## Q1. The tablet doesn't power on.

- \* Reboot your tablet after charging for more than 30 minutes.
- \* Press the power button to check if the tablet is in the **Sleep Mode**.
- \* Press and hold the power button for 7-8s to reboot it.

## Q2. The tablet doesn't charge.

- \* Make sure the USB cable is properly plugged into the charging port.
- \* Try another compatible USB cable and adapter.

## Q3. Error message occurs during the operation.

- \* Uninstall the App with the error message, then download and install again.
- \* Insert the pin into the Reset Hole to power off the tablet, then power on the tablet to try again

## Q4. The tablet cannot be detected by the computer.

- \* Make sure the tablet is powered on.
- \* Try another USB cable.
- \* Try another USB port on the computer.
- \* Instead of **Charge only**, choose **Media device(MTP)** or **Camera(PTP)** when connecting the tablet to the computer.

## Q5. The tablet cannot connect to the Wifi.

- \* Make sure the **Wifi** in your tablet is **ON**.
- \* Make sure you input the correct password when connecting the Wifi.
- \* Restart the router.
- \* Make sure there is no filter setting or device connection limitation in the setting of the router.
- \* Forget the current Wifi, reset the router and connect the Wifi again.

## Q6. The storage space of the tablet is not enough.

- \* Delete the Apps you don't use.
- \* Clear the cache of the Apps regularly.
- \* Install a memory card to expand the storage.

**Q7. The tablet comes with scratches on the screen.**

\* Check if the scratches are on the film. If yes, please remove the film.

**Q8. The screen is unresponsive.**

\* Check if the screen is dusty or greasy. If yes, please gently wipe the screen with a cloth to clean it.

**Q9. The font size is too small to read.**

\* Please go to **Settings > Display > Advanced > Font Size** to adjust the text size.

**Q10. How to use your voice to search a fact?**

\* Tap the microphone icon on Google Search bar, tell the tablet what you want to know and it will show you the search results.

## FCC Caution

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

SAR tests are conducted using standard operating positions accepted by the FCC with the tablet transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the Tablet while operating can be well below the maximum value. Before a new model Tablet is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, tests for each Tablet are performed in positions and locations as required by the FCC. For body worn operation, this model Tablet has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 5mm from the body. Non-compliance with the above restrictions may result in violation of RF exposure guidelines.



**Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## ISED Requirements

This device complies with Innovation, Science, and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: Ce dispositif est conforme aux normes RSS exemptées de licence De l'innovation, de la science et du développement économique de canad. L'opération est soumise aux deux conditions suivantes :

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil nedit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device has been tested and compliance with SAR limits, users can obtain Canadian information on RF exposure and compliance.

Le présent appareil est conforme Après examen de ce matériel aux conformité aux limites DAS et/ou aux limites d'intensité de champ RF, les utilisateurs peuvent sur l'exposition aux radiofréquences et la conformité and compliance d'acquérir les informations correspondantes.

## Caution

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.

DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS



The symbol indicates DC voltage



RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.

This product can be used across EU member states.

The device complies with RF specifications when the device used at 5mm from your body.

EU Compliance Statement: Shenzhen VanTop Technology & Innovation Co., Ltd. hereby declares that this device is in compliance with the essential requirements and other relevant provisions of the Directive 2014/53/EU.

A copy of the EU Declaration of Conformity is available online at <https://doc.vantop.com/>.

## Notes:



1. High Sound Pressure
2. Hearing Damage Risk
3. Do not listen at high volume levels for long periods.

### **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement.  
The device can be used in portable exposure condition without restriction.

## ISED Statement

English: This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The digital apparatus complies with Canadian CAN ICES-3 (B)/NMB-3(B).

French: Cet appareil contient des émetteurs/récepteurs exempts de licence qui sont conformes aux RSS exemptés de licence d'Innovation, Sciences et Développement économique Canada.

L'exploitation est soumise aux deux conditions suivantes :

- (1) Cet appareil ne doit pas provoquer d'interférences.
- (2) Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.

l'appareil numérique du ciem conforme canadien peut - 3 (b) / nmb - 3 (b).

This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 2.5 du cnr - 102 et conformité avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs rf et la conformité.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment.

Cet équipement est conforme aux limites d'exposition aux rayonnements du Canada établies pour un environnement non contrôlé.

## RF Exposure Statement

The device has been evaluated to meet general RF exposure requirement. This equipment should be installed and operated with minimum distance 0mm between the radiator & your body.

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. Cet équipement doit être installé et utilisé avec une distance minimale de 0 mm entre le radiateur et votre corps.