Fingerprint Lock USER MANUAL(V1.1)




Your finger is the key


Tip


• If the model you purchased is FL-U3&FL-U3BT please press the button to wake up the lock, and then press the fingerprint to unlock or enter.

Set Administrator Account For The First Time

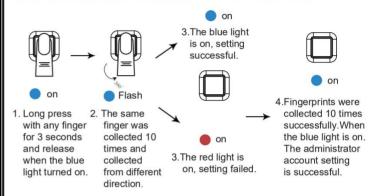

Second To Tenth User Fingerprint Entry

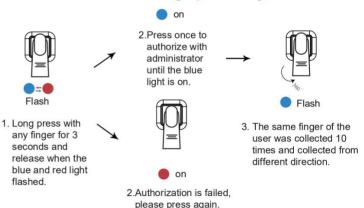

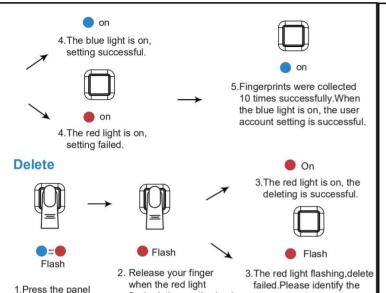

Tip: All products can delete fingerprints by the administrator, Bluetooth lock can also use APP to restore factory Settings.

to delete with the

flashed, then authorized

administrator's fingerprint.

correct administrator

fingerprint or start over

Remarks

for 6 to 10 seconds.

- · The default first fingerprint is the administrator's account.
- The second to the tenth fingerprint is the user account, which needs the administrator's confirmation.
- When collecting fingerprints, one user collects as many fingerprints as possible.
- Please charge if the green light flashes when you touched the sensor. If the model you purchased is FL-U9 series fingerprint lock, the red light flashes. Please charge in time.
- The Bluetooth lock product only collects fingerprints 5 times.

Specification

| 1277 | |
|-----------------------------|---------------|
| USB type-C input | DC5V/200mA |
| Battery | 3.7V≥100mAH |
| Fingerprint collecting time | ≤0.5S |
| Fingerprint matching time | ≤1S |
| Working tempreture | -20 °C ~55 °C |
| Working humidity | 40%RH ~90%RH |
| False reject rate | <1% |
| False accept rate | <0.002% |
| Memory capacity | 10 sets |