

## Cleaning Always unplug the Instant Warmer before cleaning.

CAUTION: The Instant Warmer contains electronics. Exposing the electronics to water can cause permanent damage not covered by the warranty.

Before each use, hand wash Water Container, Lid and Dispensing Spout with warm, soapy water, rinse and dry thoroughly.

Please take note of the following:

- Do not immerse the Instant Warmer in water or other liquid.
- Hand-Wash Only. Not Dishwasher-Safe. Using a dishwasher will damage the electronics inside.
- If mineral scale forms on the heating plate you can do the following to remove it:
  - Carefully pour all water out of the water tank and wipe with a clean cloth.
  - Pour ½ bottle of Baby Brezza Descaler, or 4 oz of distilled vinegar on the heating plate and let sit for 30 minutes.
  - Then wipe the heating plate & rinse with purified water twice, carefully pouring out each time.
- Note: If the Instant Warmer is accidentally immersed and water gets inside, wipe with a clean dry cloth and allow it to dry completely before next use.
- Base should be wiped with damp cloth only.
- Never use abrasive pads to clean the Instant Warmer parts.

Baby Brezza  
descaler can be  
purchased at  
[babybrezza.com](http://babybrezza.com)



## Please visit [babybrezza.com](http://babybrezza.com)

If you are experiencing problems with your Baby Brezza appliance, please call our Customer Service department at 1-888-396-6552 before returning the product so that we can offer you our best service customized to your particular situation.

## Limited 1-Year Warranty

The limited warranty is valid only on products bought through authorized resellers and used in the United States and Canada. Buying through an unauthorized reseller or using this product outside of the United States and Canada automatically voids this warranty.

This warranty is available to consumers only. You are a consumer if you own a Baby Brezza appliance that was purchased at retail for personal, family or household use. Except as otherwise required under applicable state law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Baby Brezza appliance will be free of defects in material or workmanship under normal home use for one year from the date of original purchase. Customer will be required to present original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture. If your Baby Brezza appliance should prove to be defective within the warranty period, we will repair it or, if we consider it necessary, replace it.

To obtain warranty services, please call Customer Service at 1-888-396-6552 or email [customerservice@babybrezza.com](mailto:customerservice@babybrezza.com) ; or write to:

Baby Brezza, 250 Passaic Street, Newark, NJ 07104 Attn: Customer Service.

# babybrezza®

## instant warmer™



## Instructions

For set-up, use and cleaning

## ACTIVATE YOUR WARRANTY

[babybrezza.com/register](http://babybrezza.com/register)

**Benefits:** Faster customer support,  
extended customer service hours & more



Scan here

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock do not immerse cord, plug or appliance in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
5. Unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact Baby Brezza Customer Service using the contact information on the back cover for assistance.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electric shock or injury.
8. Use on level surface and be sure there is no debris under the unit and the rubber pads are touching the surface.
9. Household use only. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near hot gas or electric burner, or in a heated oven.
12. Extreme caution must be used when moving an appliance containing hot liquids.
13. Do not use appliance for other than intended use.
14. This appliance has a polarized plug (one blade wider than the other). To reduce risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
15. Except cleaning, any other servicing should be performed by an authorized service representative.
16. Make sure machine is turned off before unplugging.
17. A short power-supply cord is provided to reduce risks of becoming entangled in or tripping over a longer cord. Extension cords are available and may be used if care is exercised in their use.
18. If using the machine with an extension cord, make sure the cord is the proper electrical rating for the machine. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it does not drape over counter top or tabletop where it can be pulled on by children or tripped over unintentionally.


## SAVE THESE INSTRUCTIONS

**ALWAYS** use boiled, cooled water or bottled water suitable for infant formula preparation.

<b>TECHNICAL DATA</b>	Model: BRZ0057, BRZ0071, BRZ0109	Current: 1.4 A
Supply voltage: 120V ~ 60Hz	Heater Power: 160W	

## Instant Warmer Parts

Get to know your  
Baby Brezza Instant Warmer

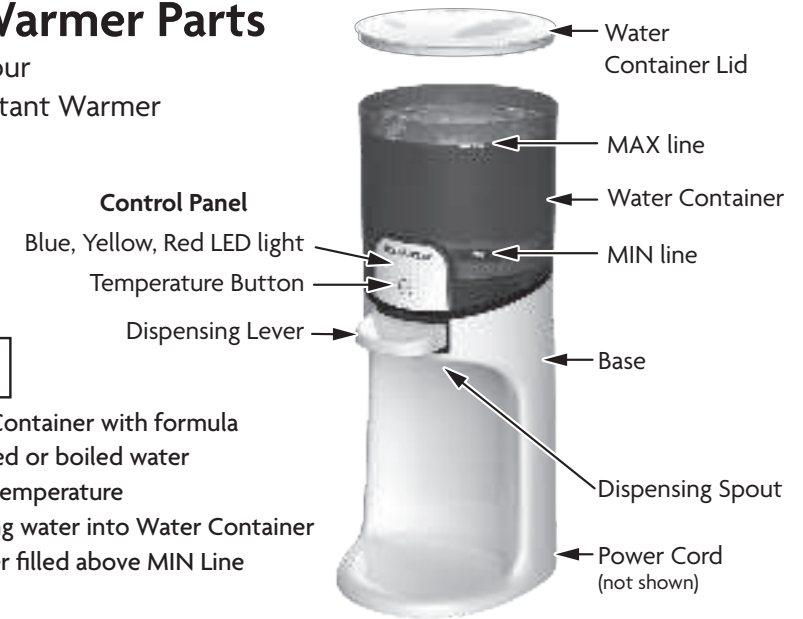

### ⚠ WARNING:

- Never fill Water Container with formula
- Always use distilled or boiled water cooled to room temperature
- Never pour boiling water into Water Container
- Always keep water filled above MIN Line

## How to Use

- ① Hand Wash Water Container & Lid before first use. See cleaning instructions on page 3.
- ② Plug in power cord to turn on the Instant Warmer.  
When plugged in, the Blue LED will turn on (Heater off - room temperature mode).
- ③ Fill Water Container with as much water as you plan to use for the day. We recommend refreshing the water every 24-48 hours and rinsing the Water Container every time it's refilled.
- ④ Touch the **temp** button to choose your desired temperature.
  - Blue LED = heater off, room temperature
  - Yellow LED = body temperature\*
  - Red LED = warmer than body temperature\*

The LED will flash while water is warming.  
The LED will remain solid when water is warmed to selected temperature.  
You can leave the Instant Warmer plugged in and set to your desired temperature so warm water is always ready.  
*\* Warming time may take 10-20 minutes depending on starting temperature of water poured into water container.*
- ⑤ Place bottle under Dispensing Spout and press Dispensing Lever to dispense water. Release lever to stop dispensing.
- ⑥ Add formula powder to bottle. Always follow formula manufacturer's mixing ratio and preparation instructions.