

Electric cooker

Product ID. 70RYD



Scan for Support



Distributed by
GARVEE.com

support@garvee.com

Electric Chafing Dish with Transparent Lid

User Manual

1. Parts Overview



1. 1x Transparent Lid
2. Food Pan
SKU: PIS_00P9MEWA: 1 PCS
SKU: PIS_00P94893: 2 PCS
SKU: PIS_00P92WYF: 3 PCS
3. 1x Electric Water Pan
4. 1x Temperature Display
5. 1x Temperature Button
6. 1x Heat Indicator Light
7. 1x Power Jack
8. 1x Power Cable

2. Technical Specifications

Description	Electric chafing dish with Transparent lid
Material	Stainless Steel
Temperature Control	86°F-165°F
Power Connection	120V, 400W
Product Size	23" x 14" x 14"

3. Operating Steps

- (1) Clean the device thoroughly before using for the first time. Before cleaning make sure the device has been disconnected from power socket and cooled down.
- (2) Pour hot water to quickly raise the temperature.
- (3) Connect the device to a power socket.
- (4) Adjust the temperature button (86°F-197.6°F). During heating process, the red indicator lights up. It lights off once the set temperature has been reached. If the temperature in the water container drops by around 59°F, the indicator lamp comes back on and the water is heated back up to the set temperature.
- (5) Place the food pan with cooked foods and place them in the water container.

4. Cleaning Steps

- (1) Before beginning with cleaning works make sure the device has been disconnected from power socket (pull the power plug) and has cooled down.
- (2) Do not use any acid agents and make sure no water ingresses the device.
- (3) Wipe off thoroughly with a mild cleaning agent and a soft, dry cloth.
- (4) After the cleaning procedure, please wipe dry.

5. Safety instructions

- (1) Only use the appliance for the intended purpose it was designed for as described in this manual.
- (2) The manufacturer is not liable for any damage caused by incorrect manipulation or inappropriate use.
- (3) Keep the appliance and electrical plug away from water or liquids. In the event the appliance falls into water, immediately remove the power plug from the socket. Do not use the appliance until it has been checked by a certified technician. Failure to follow these instructions will cause life threatening risks.
- (4) Never attempt to dismantle the housing of the appliance by yourself.
- (5) Do not touch the plug with wet or damp hands.

DANGER OF ELECTRIC SHOCK!

- Do not attempt to repair the appliance by yourself, repairs are only to be conducted by qualified personnel.

Never use a damaged appliance! When it's damaged, disconnect the appliance from the socket and contact the retailer.

WARNING! Do not immerse the electrical parts of the appliance in water or other liquids.

- Never hold the appliance under running water.
- Regularly check the power plug and cable for any damage. When damaged it must be replaced by a service agent or similarly qualified person in order to avoid danger or injury.
- Make sure the cord does not come in contact with sharp or hot objects and keep it away from open fire. Never pull the power cord to unplug it from the socket, always pull the plug instead.
- Make sure that the power cord and/or extension cord do not cause a trip hazard.
- Never leave the appliance unattended during use.

WARNING!

As long as the plug is in the socket the appliance is connected to the power source:

- Turn off the appliance before unplugging it from the socket.
- Connect the power plug to an easily accessible electrical socket so that in case of emergency the appliance can be unplugged immediately.
- Never carry the appliance by the cord.
- Do not use any extra devices that are not supplied together with the appliance.
- Only connect the appliance to an electrical outlet with the voltage and frequency mentioned on the appliance label.
- Never use accessories other than those recommended by the manufacturer.

Failure to do so could pose a safety risk to the user and could damage the appliance. Only use original parts and accessories.

- This appliance should not be operated by persons with reduced physical, sensory or mental capabilities, or persons that have a lack of experience and knowledge.

- This appliance should, under any circumstances, not be used by children.
- Keep the appliance and its power cord out of reach of children.
- ALWAYS switch off the appliance and unplug from power socket before cleaning, maintenance or storage.

5. Special Safety Regulations

CAUTION! Never use the appliance without water.

- This chafing dish only intended to be used for keeping food warm.
- Do not use this appliance for:
 - Cooking Foods;
 - Boiling water;
 - Heating or cooking fluids containing sugar, acid, leach or alcohol;
 - Filling or heating inflammable, noxious, volatilizing or similar fluids or materials.

CAUTION! Hot surface. Risk of burns! Some components such as the lid of the appliance become very hot during operation. To avoid injury, do not touch these surfaces with bare hands.

Warning! Hot steam may escape when serving food, be very careful when removing the lid.

6. Discarding and Environment

When decommissioning the appliance, the product must not be disposed of with other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point. Failure to follow this rule may be penalized in accordance with applicable regulations on waste disposal. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local waste collection company. The manufacturers and importers do not take responsibility for recycling, treatment and ecological disposal, either directly or through a public system.