



DJI RC Motion 3

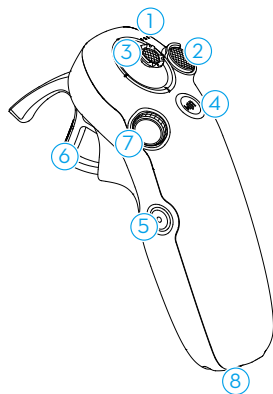

1. Battery Level LEDs
2. Lock Button
3. Joystick
4. Mode Button
5. Shutter/Record Button

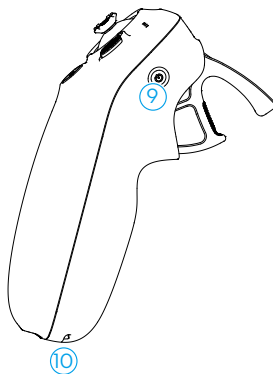

6. Accelerator
7. Dial
8. USB-C Port
9. Power Button
10. Lanyard Hole