



Affordable. Reliable. Home Improvement.

BEHIND SPREADER

MODEL:TC2032B

VEVOR

Affordable. Reliable. Home Improvement.

BEHIND SPREADER

MODEL:TC2032B



This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

SAFETY INSTRUCTIONS

WARNING:

Read this material before using this product. Failure to do so can result in serious injury.

Assembly precautions








1. Assemble only according to these instructions. Improper assembly can create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
3. Keep the assembly area clean and well-lit.
4. Keep bystanders out of the area during assembly.
5. Do not assemble if tired or when under the influence of alcohol, drugs or medication.
6. The product capabilities apply to properly and completely assembled products only.
7. Assemble on a flat, level, hard and smooth surface capable of safely supporting the Behind Spreader.
8. For additional information regarding the parts listed in the following pages, please refer to the Assembly Diagram of this manual. Unwrap and separate all parts in a clean work area.


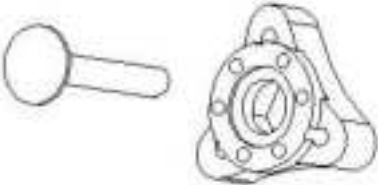






Use precautions


1. DO NOT SIT OR STAND ON THIS ITEM.
2. This product is not a toy. Do not allow children to play with or near this item.
3. Do not exceed specified weight capacities.
4. Use as intended only.
5. Inspect before every use; do not use if parts are loose or damaged.

SAVE THIS MANUAL

PARTS LIST

A	 <p>Handle x1</p>	B	 <p>Square tube x2</p>
C	 <p>Wheel x2</p>	D	 <p>Shaft x1</p>
E	 <p>Support frame x1</p>	F	 <p>mixing shaft x1</p>
G	 <p>Hopper x1</p>		

a	 <p>Plastic knob+screw ×4</p>	b	 <p>Plastic knob+screw ×4</p>
c	 <p>Large washer ×6</p>	d	 <p>Pin ×2</p>
e	 <p>Screw M4*30 ×2</p>	f	 <p>Sleeve ×2</p>
g	 <p>R-shape pin ×1</p>	h	 <p>Plastic parts ×2</p>

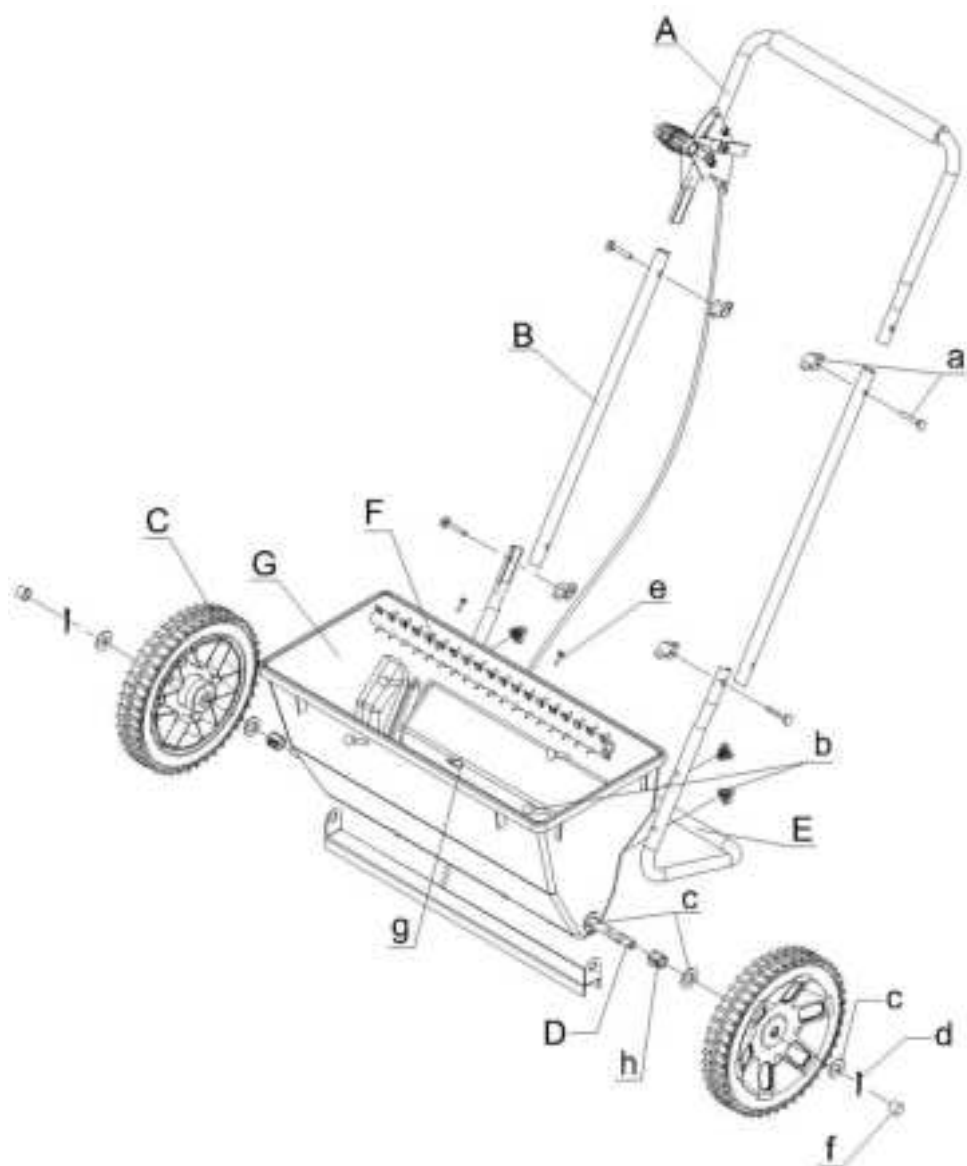

ASSEMBLY STEP



c Large washer x6




h Plastic part x2



f Sleeve x2




d Pin x2

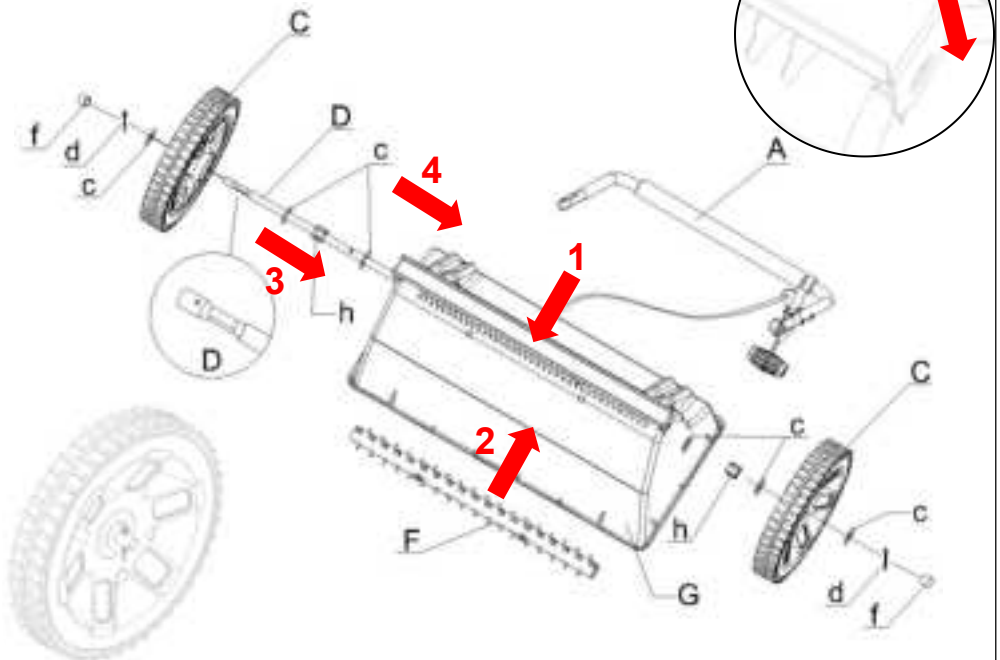


1. Step 1: Align the holes on both sides of the stainless - steel part of the handle (A) perfectly with the corresponding holes on the hopper (G).
2. Step 2: Place the mixing shaft (F) inside the hopper (G).
3. Step 3: Pass the shaft (D) through the hole in the stainless - steel part, the hole in the hopper (G), and the mixing shaft (F) in sequence, and make sure it goes all the way through.
4. Step 4: Install the large washer (c), plastic part (h), large washer (c), wheel (C), large washer (c), and sleeve (f) on the shaft (D) in order. Finally, use the pin (d) to firmly secure all the components.



E Support frame x1

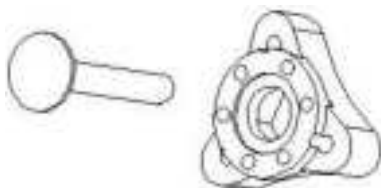

b Plastic knob+screw x4

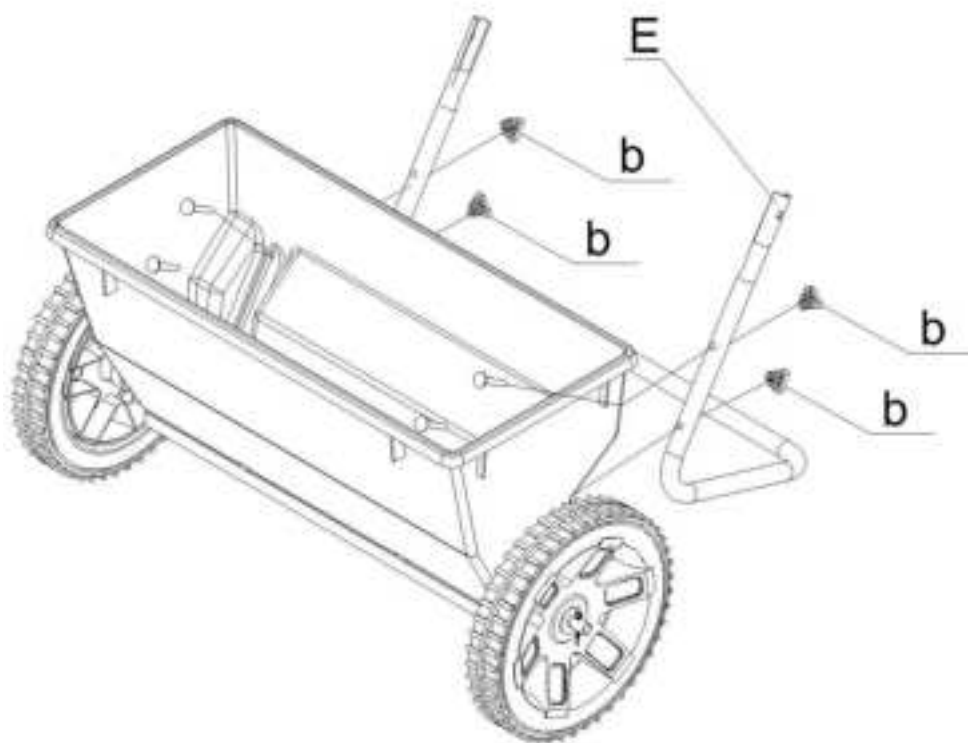


Fix the support frame (E) to the hopper (G) using plastic knobs+screws (b x 4).




B Square tube x1




a Plastic knob+screw x4

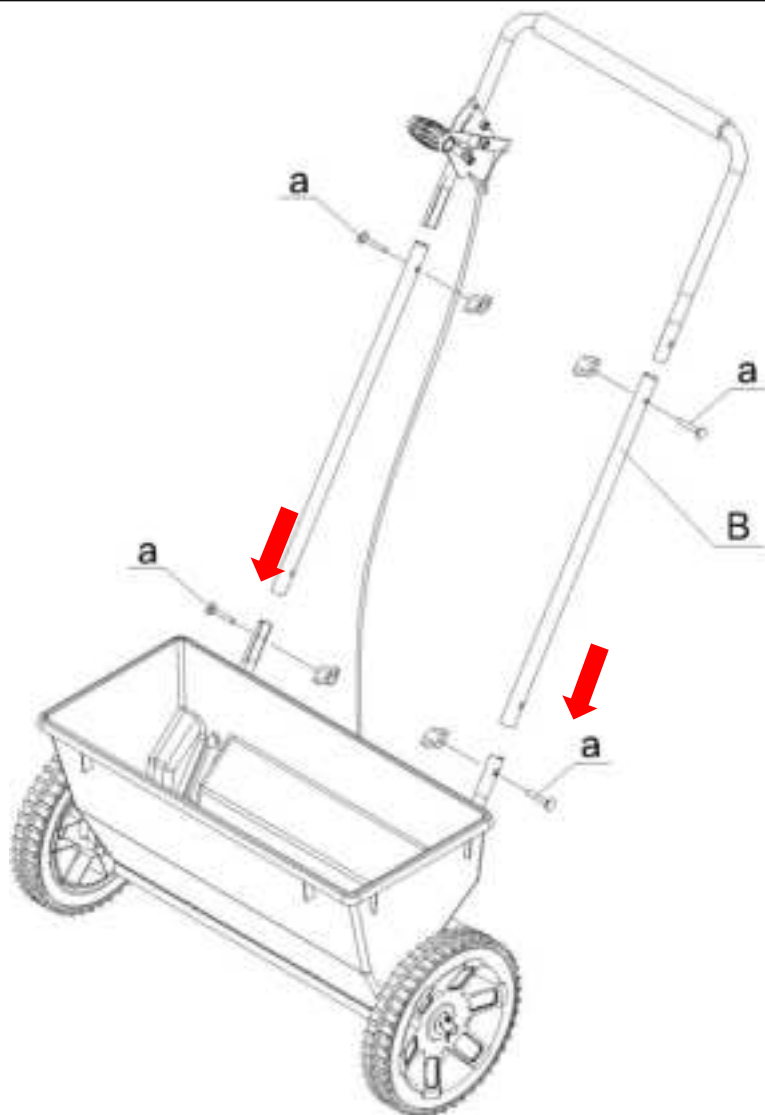

 Fix the square tube (B) and the handle (A) to the hopper (G) with Plastic knobs + screws (a x 4).



e Screw M4*30 ×2

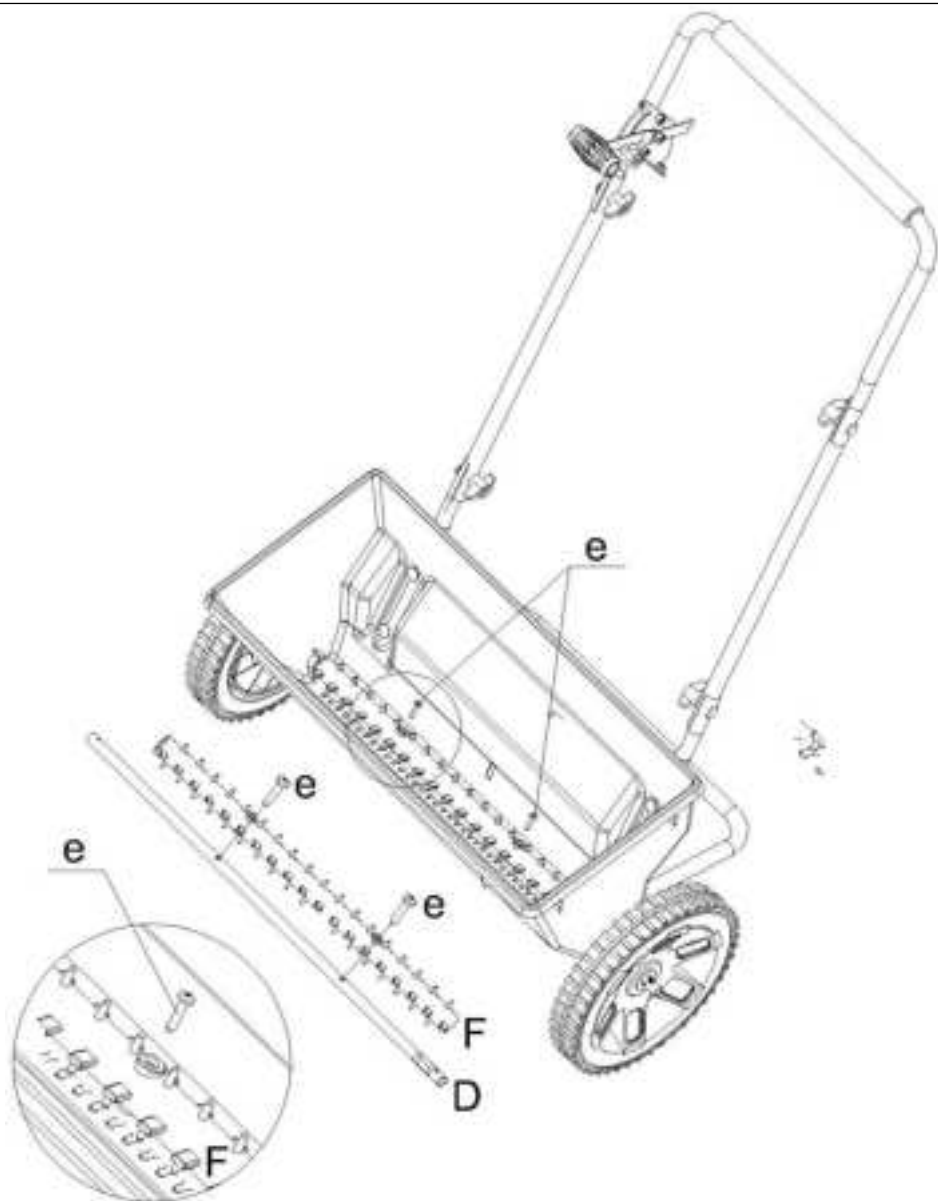


Rotate the wheel so that the holes of the shaft (D) and the mixing shaft (F) overlap, and then lock them with screws (e x 2).



Insert the buckle of the wiring harness into the hole of the hopper (G), which can prevent the wiring harness from falling off.



g R-shape pin ×1

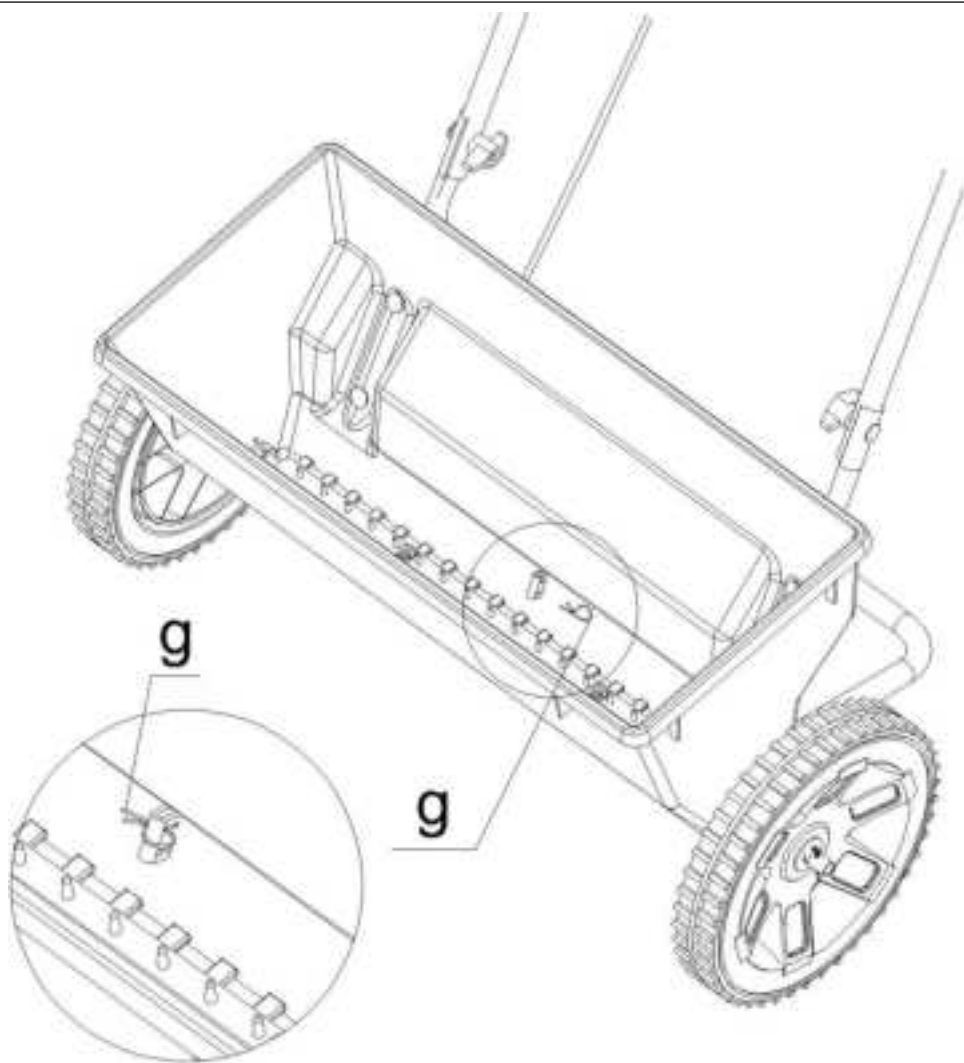

Insert the R-shaped pin (g) into the buckle part of the wiring harness to prevent the buckle from falling off.



The assembly is completed.



HOW TO USE THE SPREADER TROLLEY

TO OPEN- Push the Control Lever forward until it stops against button.

TO CLOSE- Pull the control Lever fully back toward Operator.

Follow the instructions provided by the manufacturer of the spreading material.

NOTE: Make sure that the spreading material is evenly distributed. The spreading material must be dry.

1. Before feeding in the spreading material, set the dispensing lever to the OFF position (dispensing flap closed).
2. Fill the spreader trolley hopper.
3. To adjust the volume of spread, set the dispensing lever to the desired position.
4. In order to spread or scatter the material, drive the spreader trolley at an even speed (the higher the speed, the greater the scattering distance).
5. Close the dispensing flap as soon as you stop the spreader trolley (dispensing lever in OFF position).

PRODUCT PARAMETER

Model	TC2032B
Safe Loading Weight	50lb(22.6kg)
Colour	Black
Spreading width	18.1in/46cm

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD. 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

UK	REP
-----------	------------

YH CONSULTING LIMITED. C/O YH Consulting Limited Office 147, Centurion House, London Road, Staines-upon-Thames, Surrey, TW18 4AX

EC	REP
-----------	------------

E-CrossStu GmbH
Mainzer Landstr.69,
60329 Frankfurt am Main.

