





Earphone Wearing

Power on/off Earphone charging

Instructions for Use

Battery display

Operation

Previous song Touch L twice in a row

Touch R twice in a row



Music play/pause Touch the L/R button once



Press and hold the R for 3S





Hang up/Reject a call



Game mode on/off

Voice dialing (Google\SIRI Feature)



Answer the phone

Audio switching



Frequently Asked Questions

1. The charging box has power, but why can't the earbuds be charged?

A. Please confirm if the earbuds are correctly placed in the charging box, if the charging contact of the earbuds is not in full contact, it will cause the earbuds to fail to charge.

B. Wipe the charging contacts of the earbuds with a clean cotton cloth to ensure there is no foreign object interference earbuds charging.

If there is sweat or liquid on the charging contact of the charging box, the earbuds may appear corrosion, please clean it before inserting the earbuds into the charging box.

2. Place the earbuds in the charging box and close the charging box, why are the earbuds still in the connection status?

It should be that the earbuds were not properly placed in the charging box, and check point B.

3. Why does the earbuds suddenly stall when using it?

Due to the characteristics of Bluetooth earphones, electromagnetic interference in the area may cause temporary time lag, you can change the location of use.

Specification

Cautions

- Please use this product with safety guarantee.
- 2 Please do not discard the product in the fire or the high temperature because the built-in battery will cause the explosion easily.
- 3 Please do not rough operation of the product such as wrestling collision, removal or modification of the earphone.
- Please use original accessories. Accidents caused by other accessories will not be covered by the warranty.
- ⑤ Please charge the storage box with the charger of DC5V/1A to avoid burning the product.
- 6 Please pull out the charging line in time after charging is completed to avoid leaving the product in the state of charging for a long time.
- 7) Please stay away from large WIFI, routers or other high frequency transmitting devices, so as to avoid interference of other signals by the earphones, resulting in music stuck or disconnected.
- 8 Please use this product in an effective environment (10 meters). And there should be no physical barrier between the phone and the earphone(such as wall,etc.)
- Please keep away from water.
- (ii) It is recommended to use the product below 80% Volume in order to protect hearing.

