

Water Resistant
Speaker
Duck



User Manual



K: 43-499-830 | T:70-363-777
MODEL: EBS-24106

- Includes:
- › Water Resistant Speaker Duck
 - › USB-A to USB-C Charging Cable
 - › User Manual



WARNING: THIS IS NOT A TOY AND IS NOT SUITABLE FOR CHILDREN UNDER 3 YEARS OLD TO USE. CONTAINS SMALL PARTS.

12 month warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.


Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

- Statement**
- This product shall not be connected to power supply source exceeding PSI (5V d.c. 1A).
 - Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
 - Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
 - Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
 - A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
 - The apparatus is only suitable for mounting at height < 2m.
 - The marking located on the bottom of the apparatus.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kennell Street, Williams Landing, Vic, 3007 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

Function overview:

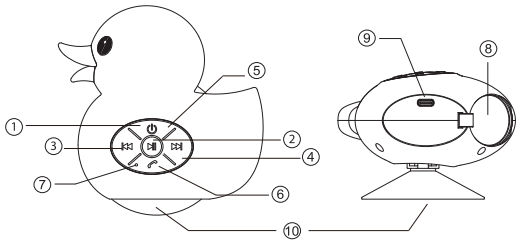

- | | |
|-------------------------------------|------------------------|
| 1. Power ON/OFF | 6. Answer/hang up call |
| 2. Play/Pause | 7. MIC |
| 3. Volume Down/Previous Song | 8. Silicone Cover |
| 4. Volume Up/Next Song | 9. USB-C Charging Port |
| 5. Silicone-frosted Indicator Light | 10. Suction Cup |

How to use this speaker:

- Function Operation**
- Power ON/OFF** Long press button 2 seconds
- Play** Press button **Pause** Press button
- Previous Song** Click key to skip the track. **Next Song** Click key to skip the track.
- Volume Down** Long Press key to decrease the volume **Volume Up** Long press key to increase the volume

Specifications:

- | | |
|--|---|
| Model no:
EBS-24106 | Charging voltage:
DC= 5V |
| Version:
Bluetooth V5.3 | Battery capacity:
3.7V 300mAh |
| Working distance:
10 Meters | Charge time:
Approx 2 hours |
| Output:
RMS 1.7W (THD≤10%) | IP rating
IPX4 |
| Music time:
Approx 3-4 hours(80% Volume) | |

Power ON/OFF Button

- › Press and hold ON/OFF button, the red indicator light will flash. The device is powered on and enters Bluetooth mode automatically.

Bluetooth Mode

- › Once the speaker is powered on, will automatically enter Bluetooth mode in several seconds and red indicator light flashes.
- › Search for "anko43499830" (Bluetooth name) and connect from Bluetooth menu on the media device.
- › Once the speaker is successfully paired and connected, you will hear a prompt tone.

Charging

- › This Speaker is powered by rechargeable Lithium battery. Please use provided USB-C cable for charging (Plug the USB-C end to the device charging port and the other USB-A end plug into a minimum 5V/0.5A charger) The LED indicator displays red while charging and light off when fully charged.

Using the environment & storage environment

- › Operating environment
Temperature: -5 °C~45 °C
- › Storage environment
Temperature: -20°C~60 °C

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by Kmart Australia is under licence.

