

Product Overview

Thank you for choosing Tonoshark ANC Wireless Headphones!

Follow the instructions below for the best experience.



HB01N

ANC Wireless Kids Headphone

Answer/End Calls: Press the pause button ▶II once to answer an

Reject Calls: Press and hold the pause button for 2 seconds to reject

When the battery is low, the indicator light will turn red. Use the included

light will turn red while charging and turn blue once fully charged.

USB charging cable to connect the headphones to a charger. The indicator

1. Do not expose the headphones to high temperatures, moisture, or direct

2. Turn off the headphones when not in use to conserve battery life.

3. Use only the provided USB charging cable and a compatible charger

4. If the headphones are not used for an extended period, charge them

incoming call and press it again to end the call.

HB01N-YD

Package Contents

- ANC Wireless Kids Headphone
- Type-C Charging Cable
- 3.5mm External Audio Interface
- Small Silicone Bag
- User Manual


Product Features

- Noise Reduction: SNR value of 25±3 dB
- Hearing Protection: Shields kids from harmful sounds
- Concentration Aid: Helps improve focus
- Kid-Friendly Fit: Adjustable size for perfect fit
- Versatile Use: Supports both wireless and wired modes Portable Design: Easy to carry with a free small bag included
- Wireless Connectivity: Supports Wireless 4.0 and above, easily connecting to smartphones, tablets, and other Wireless-enabled devices.

Specifications

- Pairing Name: Tonoshark HB01N
- Battery capacity: 450mAh
- Standby Time: Shutdown state >80 days
- Charging Time: 2 hours
- Charging Port: TYPE-C
- Audio sensitivity: 92±3 dB
- Impedance: 32Ω±15% @1KHz
- Frequency response: 20Hz~20KHz
- Maximum Input Power: 50 mw
- Audio Port: 3.5 mm

Charging Voltage: DC 4.75-5.25V

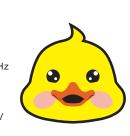

Button Instructions



- 1. Next Track Button >>+: Press and hold for 2 seconds to skip to the next song; short press to increase the volume
- 2. Pause Button I: Press and hold for 3 seconds to power on/off; short press to play/pause music.
- For calls: Short press to answer/end a call: press and hold to reject a call. 3. Previous Track Button -- : Press and hold for 2 seconds to go to the
- 4. ANC Switch: Toggles the Active Noise Cancelling (ANC) feature on or off.

previous song; short press to lower the volume.

- 5. TYPE-C Charging Port: Used to charge the headphones.
- 6. 3.5mm Audio Jack: Connects to wired audio devices, supporting wired mode 7. Microphone: Picks up sound for calls and voice commands
- 8. LED Indicator Light: Shows the headphone's status, including pairing, charging, and low battery alerts.



The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

封面

Instructions for Use

1. Power On/Off

Power On: Press and hold the pause button ▶II on the left earcup for about 3 seconds until the indicator light turns on, and the prompt sound

Power Off: Press and hold the pause button | II | for about 5 seconds until the indicator light turns off, and the prompt sound "POWER OFF" To Activate Siri: Using a triple-click on the pause button ▶II

2. Pairing with Wireless Devices

Notice: Your headphones need to be paired with a Wireless-enabled device before use. Follow these steps to pair:

- 1. Open Wireless Settings: Go to the Wireless menu on the device you want to pair with. Some devices may require you to select "Search for Devices" or "Add New Device."
- $\textbf{2. Enter Pairing Mode:} \ \textbf{With turning off the headphones, press and hold}$ the pause button I until you hear "PAIRING" and see red and blue LED lights flashing alternately.
- 3. Select Headphones: On your device, look for "Tonoshark HB01N" and select it
- 4. Complete Pairing: Follow any additional prompts on your device. Once paired, the LED lights on the headphones will stay blue.

3. Active Noise Cancelling (ANC) On/Off

ANC On: Locate the ANC switch on the left earcup. Slide the switch to the left position. You will hear a prompt sound indicating "ANC ON." ANC Off: Locate the ANC switch on the left earcup. Slide the switch to the right position. You will hear a prompt sound indicating "ANC OFF.

4. Music Control

Next Track Button ▶▶+: Press and hold for 2 seconds to skip to the next song; short press to increase the volume. Pause Button ▶II : Short press to play/pause music;

Previous Track Button -◄<: Press and hold for 2 seconds to go to the previous song; short press to lower the volume

1. Warranty Period:

Warranty Terms

regularly to maintain battery life

5. Call Functions

an incoming call.

6. Charging

Tonoshark Wireless noise-canceling headphones are covered by a one-year warranty from the date of purchase

2. Warranty Coverage:

• Manufacturing Defects: Covers defects in materials or workmanship, such as sound quality issues or malfunctioning buttons.

 Performance Issues Under Normal Use: Includes problems that occur during regular use.

6

- Accidental Damage: Damage caused by drops, spills, or other external factors.
- User-Induced Damage: Damage resulting from misuse, such as overuse or exposure to extreme environments
- Battery or Charging Issues: Problems with battery performance or charging port damage.
- Unauthorized Repairs: Issues resulting from unauthorized repairs or modifications.

4. Warranty Services:

- Repair or Replacement: If your headphones exhibit issues covered by the warranty. Tonoshark will offer repair or replacement services.
- Return and Exchange: Returns or exchanges are typically accepted within the warranty period and must meet specific conditions

5. Warranty Procedure:

- Claiming Warranty: To claim warranty service, provide proof of purchase, the warranty card, and a detailed description of the issue.
- Sending for Repair: Send the headphones to an authorized service center or designated service point for inspection and repair.

6. Additional Terms:

- Free Shipping: Free shipping may be provided for warranty claims,
- Warranty Transfer: Warranty terms may vary if the headphones are transferred to another person
- Please refer to the specific product documentation for detailed $information\ regarding\ warranty\ terms\ and\ conditions.$

Customer Support

If you encounter any issues during use, please contact Tonashark customer support with detailed product information and proof of purchase for assistance. We will response to you within 24 hours of normal business operations

____ 3 __

Contact Fmail:



Please Register to Validate Your Extended Warranty in 14 Days

Before	After
30 DAYS Full Refund	60 DAYS Full Refund
12 MONTHS Limited Warranty	24 MONTHS Limited Warranty



WARNING

Extremely loud music can drown out sound of traffic or other danger signals. Make sure you can always hear what is going on around you.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received. ncluding interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on. the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

FC (E & S) X

10