
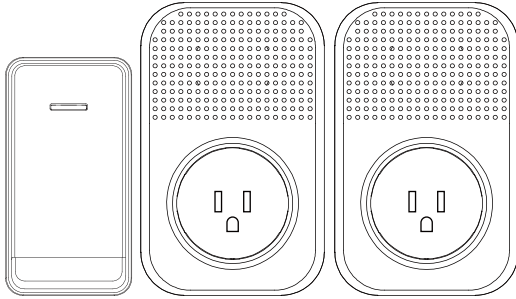



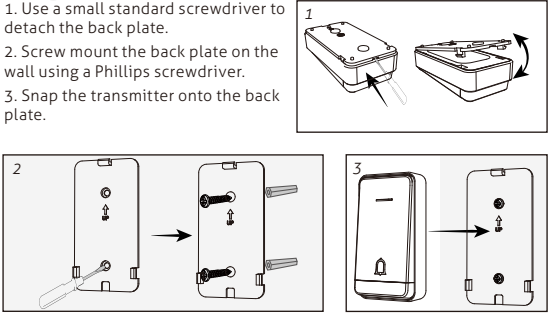


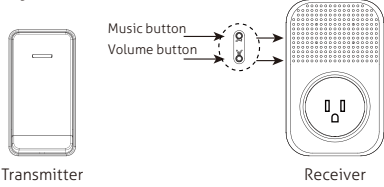


<div><div>TECKNET</div><div>Doorbell</div><div></div><div>Model: HWD01816</div><div>User Manual</div><div>EN</div></div>	<div><div>Package Contents</div><div>2x Doorbell 1x Double-Sided Adhesive Tape 2x Screws 2x Screw-joint Coupling 1x User Manual</div><div><div>Product Layout</div><div></div><div>TransmitterReceiver</div></div><div><div>Product Specifications</div><div>Receiver Power Supply: AC 100-240V Receiver Working Power: &lt;0.5W Working Frequency: 433.92MHZ ±0.5MHZ Transmission Power: -12.23dBm</div></div></div>	<div><div>How to Use</div><div>1. "🎵" Press the music button once to play the next chime and select the one you like. Press twice to go back to the previous chime. 2. "🔊" Press the volume button each time to adjust the 5 volume levels. (Mute/Low/Medium/High/Max)</div><div><div>How to Pair</div><div>Note: This device is already paired. If there is any disconnection or short-range issues, please follow the instructions below. Press and hold the receiver's pairing button "🎵" for 3 seconds until the receiver makes a "Ding-Ding" sound. Then press the kinetic bell push, then the receiver makes a "Ding" sound meaning pairing between the kinetic bell push and receiver is successful. The receiver will make another "Ding-Ding" sound to exit the pairing mode.</div></div><div><div>Maintenance</div><div>1. In order to protect the precision internal electronic components, it's advisable that unqualified users should not attempt to open the unit for maintenance. 2. Correct use of the products helps to effectively extend the service life of the unit.</div></div></div>	<div><div>Install the Transmitter</div><div><div>A.  Double-sided Tape Installation</div><div>Use the included double-sided tape to stick the transmitter to the wall.</div><div></div></div><div><div>B.  Screw Installation</div><div>1. Use a small standard screwdriver to detach the back plate. 2. Screw mount the back plate on the wall using a Phillips screwdriver. 3. Snap the transmitter onto the back plate.</div><div></div></div></div>	<div><div>IMPORTANT SAFETY INSTRUCTIONS-CAREFULLY FOLLOW THESE INSTRUCTIONS.</div><div>1. SAVE THESE INSTRUCTIONS - This sheet contains important safety and operating instructions. 2. Before using the product, read all instructions and caution markings on the product, accessories and device using our product. 3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. 4. Children should be supervised to ensure that they do not play with the appliance. 5. Keep the product away from fire or explosion may occur. 6. Do not place the product in or near any inflammable, explosive or hazardous object. 7. Do not operate the product with damaged cord or plug. 8. Do not operate the product if it has been damaged in any way. 9. Do not disassemble the product. Disassembly may result in a risk of safety hazards. 10. Do not throw or shake the product.</div></div>	<div><div>Limited 12-Month Warranty</div><div><div></div><div><b>What this warranty covers.</b> Shenzhen Unichain Technology Co., LTD. (Manufacturer: "Unichain") warrants to the original purchaser of this TECKNET product that the product shall be free of defects in design, assembly, material, or workmanship. <b>What the period of coverage is.</b> Unichain warrants the TECKNET product for <b>12 Months</b>. <b>What will we do to correct problems?</b> Unichain will repair or replace, at its option, any defective product free of charge (except for shipping charges for the product). <b>What is not covered by this warranty?</b> All above warranties are null and void if the TECKNET product is not provided to Unichain for inspection upon Unichain's request at the sole expense of the purchaser, or if Unichain determines that the TECKNET product has been improperly installed, altered in any way, or tampered with. The TECKNET Product Warranty does not protect against acts of God such as flood, earthquake, lightning, war, vandalism, theft, normal-use wear and tear, erosion, depletion, obsolescence, abuse, damage due to low voltage disturbances (e.g. brownouts or sags), non-authorized program, or system equipment modification or alteration. <b>How to claim the warranty</b> Please contact retailers or visit TECKNET website or email</div></div></div>
<div><div>support.us@tecknet.com for more information. To extend the warranty period, please visit TECKNET website and register your TECKNET products within <b>90 days</b> of purchase.</div><div><div>Disclaimer</div><div>Every effort has been made to ensure that the information and procedures in this guide are accurate and complete, no liability can be accepted for any errors or omissions and we reserve the right to make any changes without further notice to any products mentioned herein.</div></div><div><div>FCC Statement</div><div>Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, according to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radiofrequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to</div></div></div>	<div><div>correct the interference by one or more of the following measures:</div><div>~ Reorient or relocate the receiving antenna. ~ Increase the separation between the equipment and receiver. ~ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. ~ Consult the dealer or an experienced radio/TV technician for help</div><div>The device must not be co-located or operating in conjunction with any other antenna or transmitter.</div><div>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions :</div><div>(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.</div></div>	<div><div>Correct Disposal of This Product</div><div>( Waste Electrical &amp; Electronic Equipment ) This Marking shown on the product or its literature, indicate that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmental-ly safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.</div><div></div></div>	<div><div>IC Caution:</div><div>This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.  The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</div><div><div>Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:</div><div>(1) L'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.</div><div>L'appareil a été évalué pour répondre aux exigences générales d'exposition RF. L'appareil peut être utilisé dans des conditions d'exposition portables sans restriction.</div></div></div>	<div><div></div><div><div>Precaution</div><div>• Do not connect and use the doorbell socket with high-power electrical appliances, such as washing machines, air conditioners, induction cookers, microwave ovens, ovens, water heaters, vacuum cleaners, power strips, bread machines, ice machines, etc. • Do not exceed 1200W in application.</div></div></div>	