

MPS - PILOT SEAT

Instruction Manual
Bedienungsanleitung
Mode d'emploi


PARTS

[dimensions in mm / different scales]
No extra or spare parts listed!


1x




1x

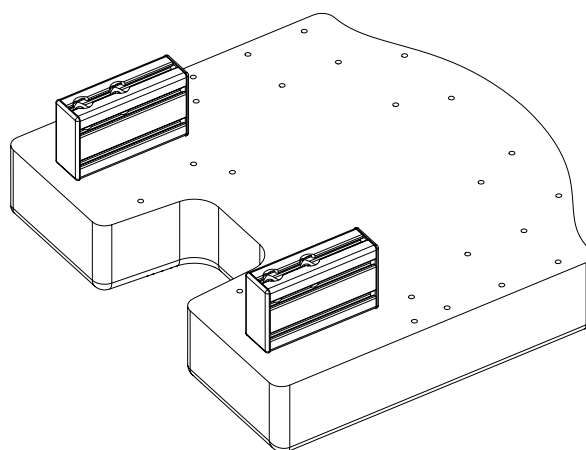


1x

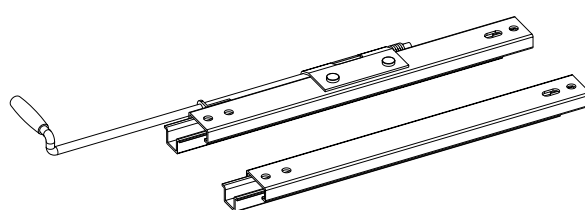


4x

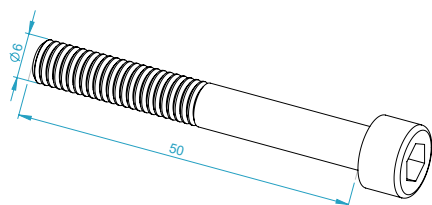


4x

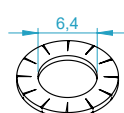


8x

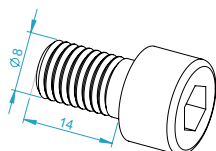


4x

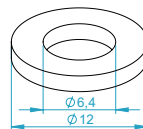

8x

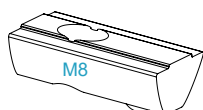


8x

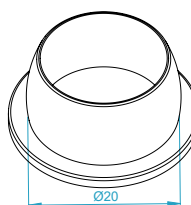


PARTS FOR OPTIONAL ARM-RESTS

1x

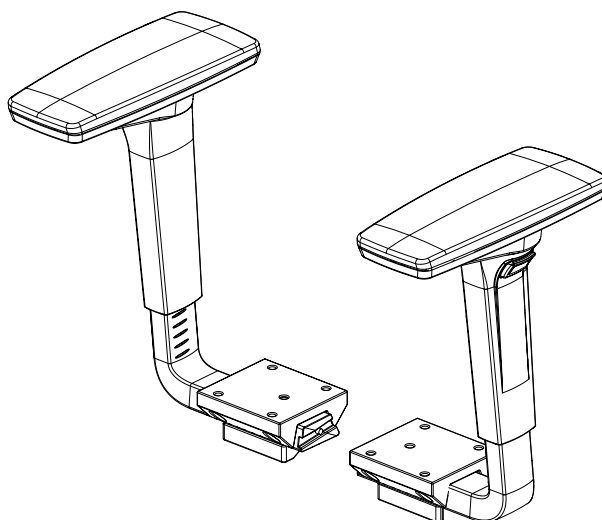


Already positioned in the appropriate
threads under the seat
(unscrew first)


8x

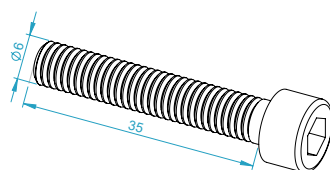


8x

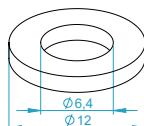


8x

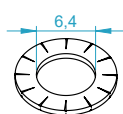


ASSEMBLY

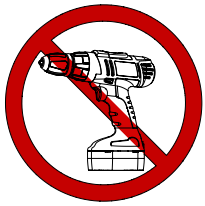




It is not recommended to use power tools.
Please make sure the screws are running smoothly in the threads. If not readjust the screw.
Do not use too much downward pressure.

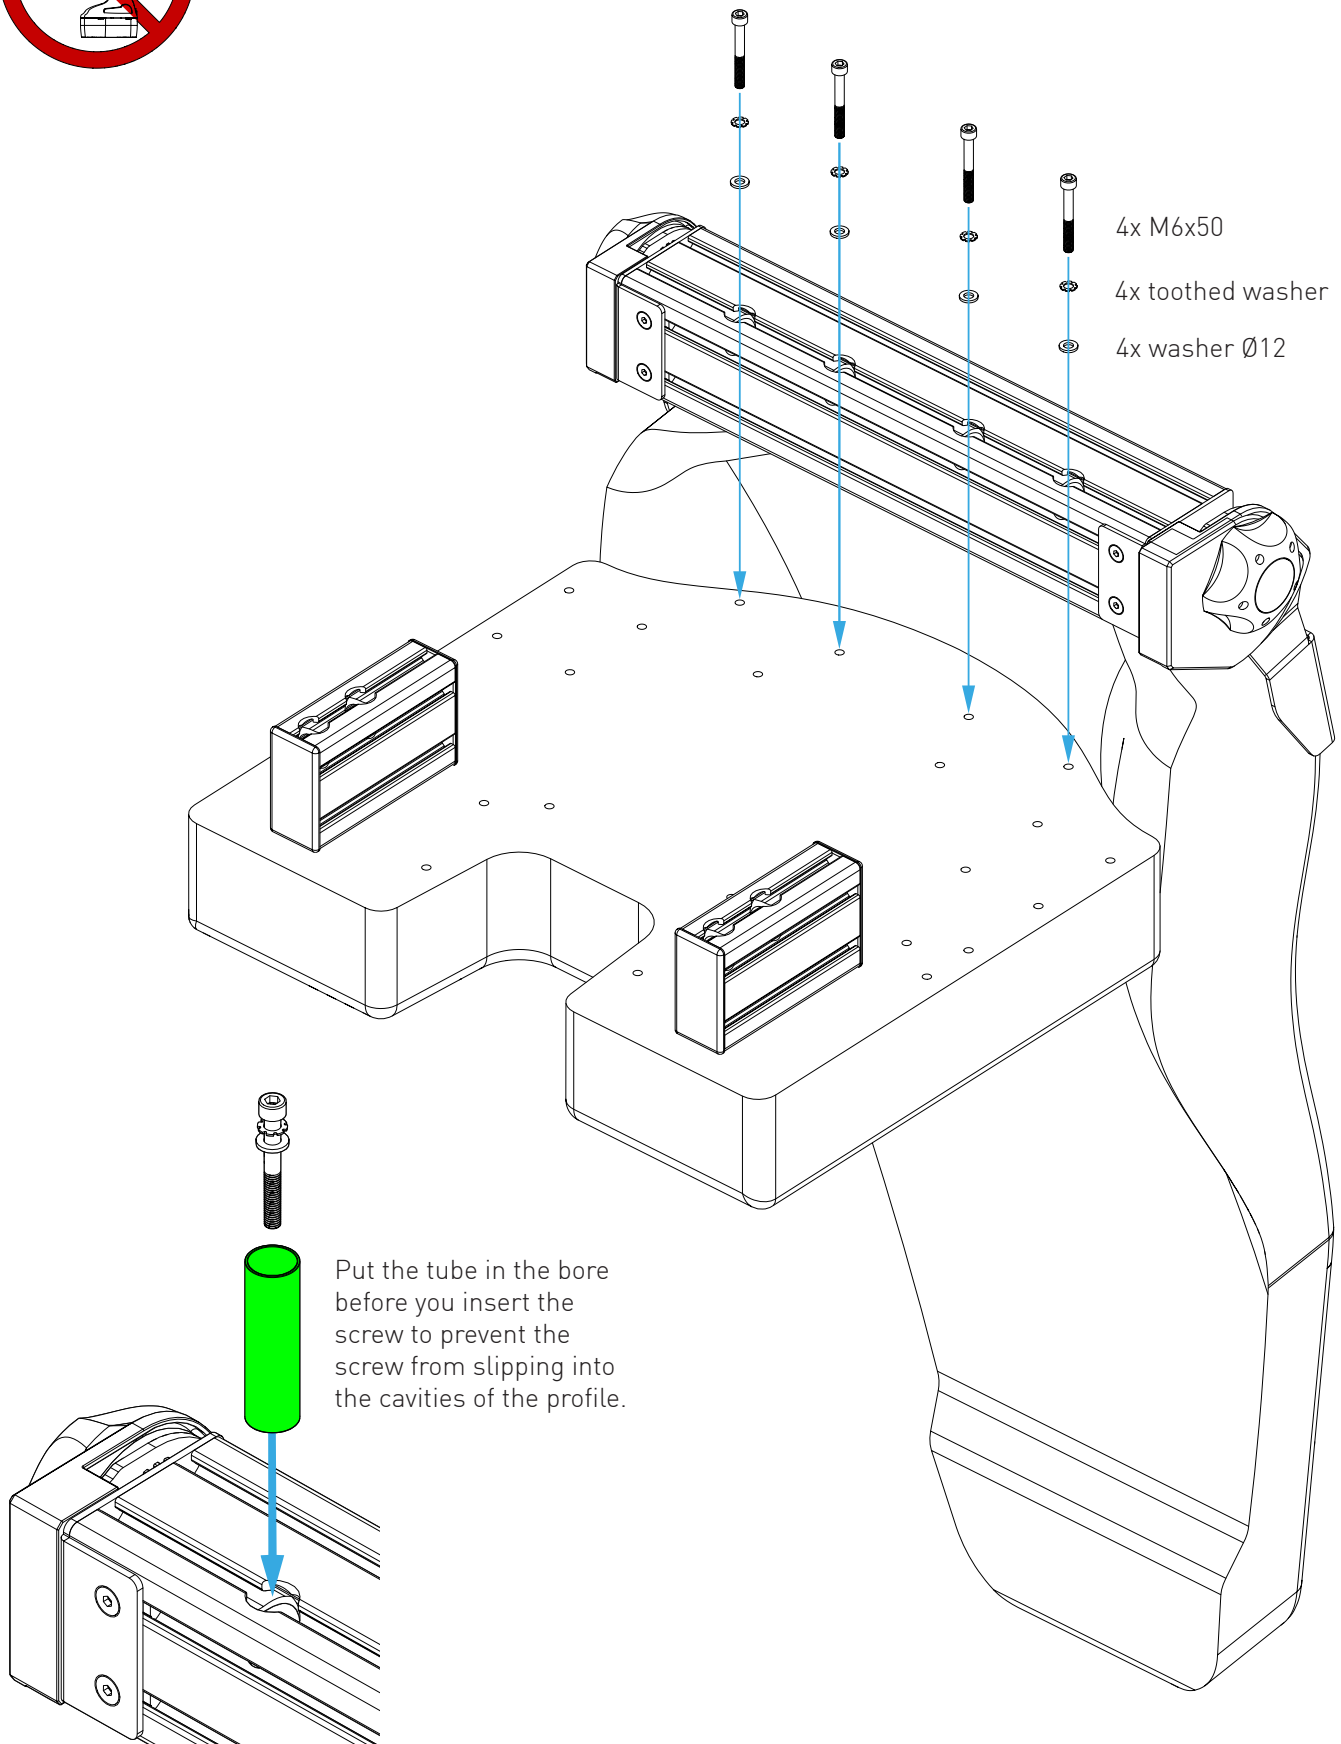


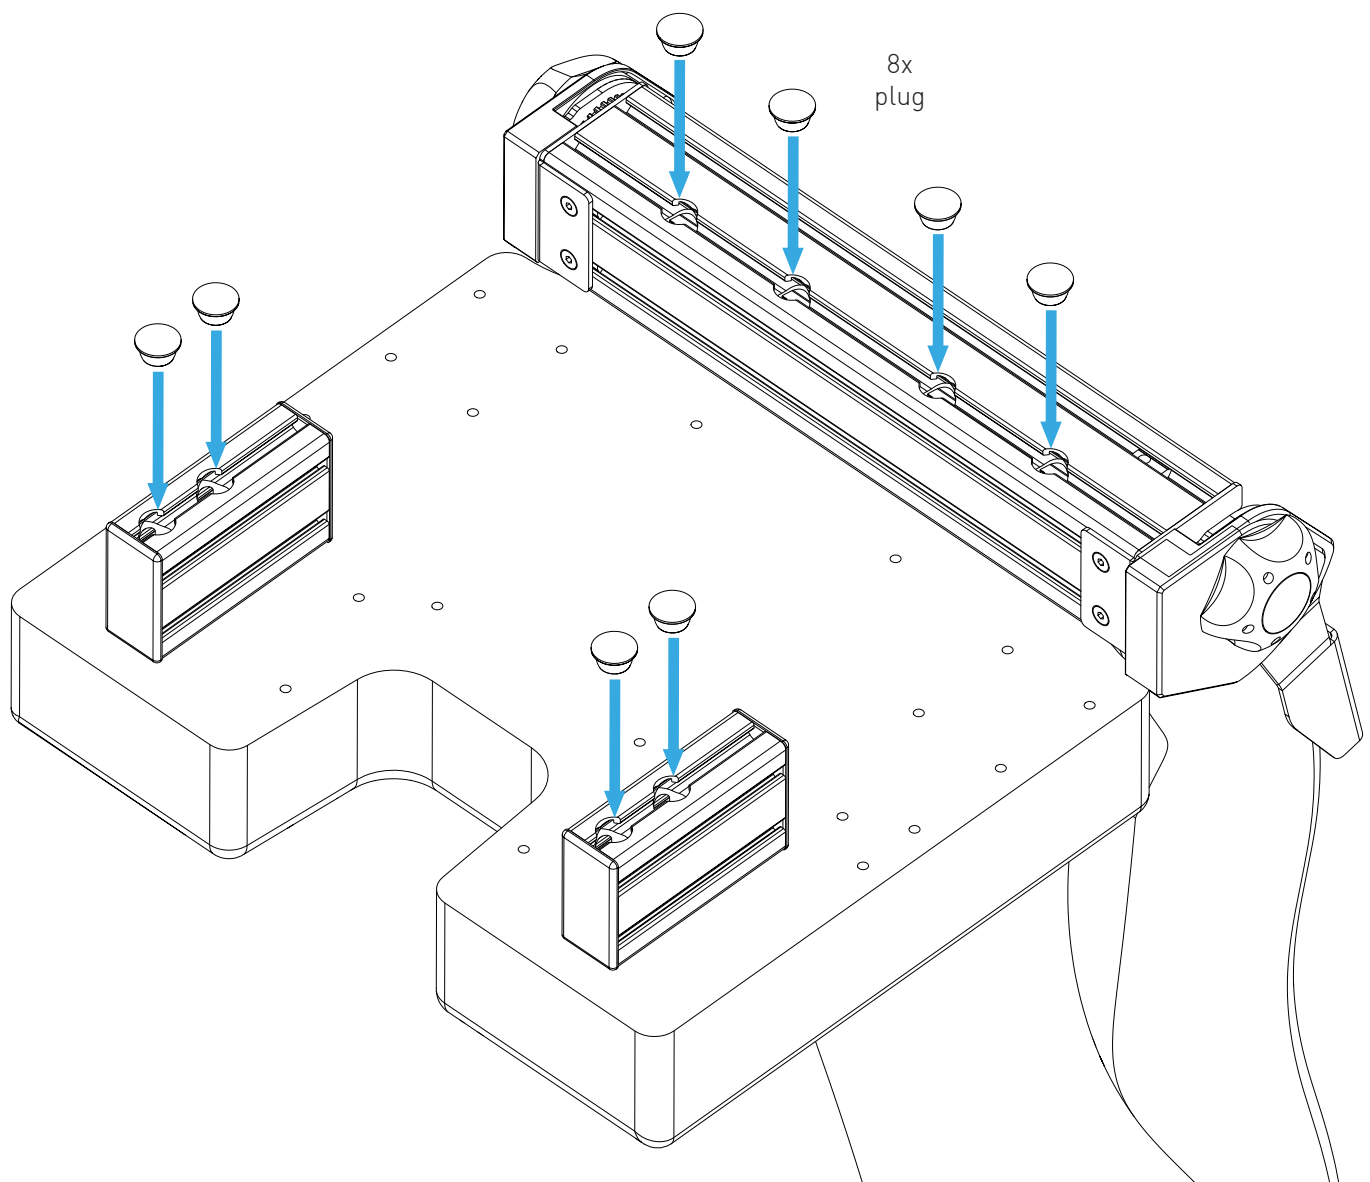



arm-rests
optional

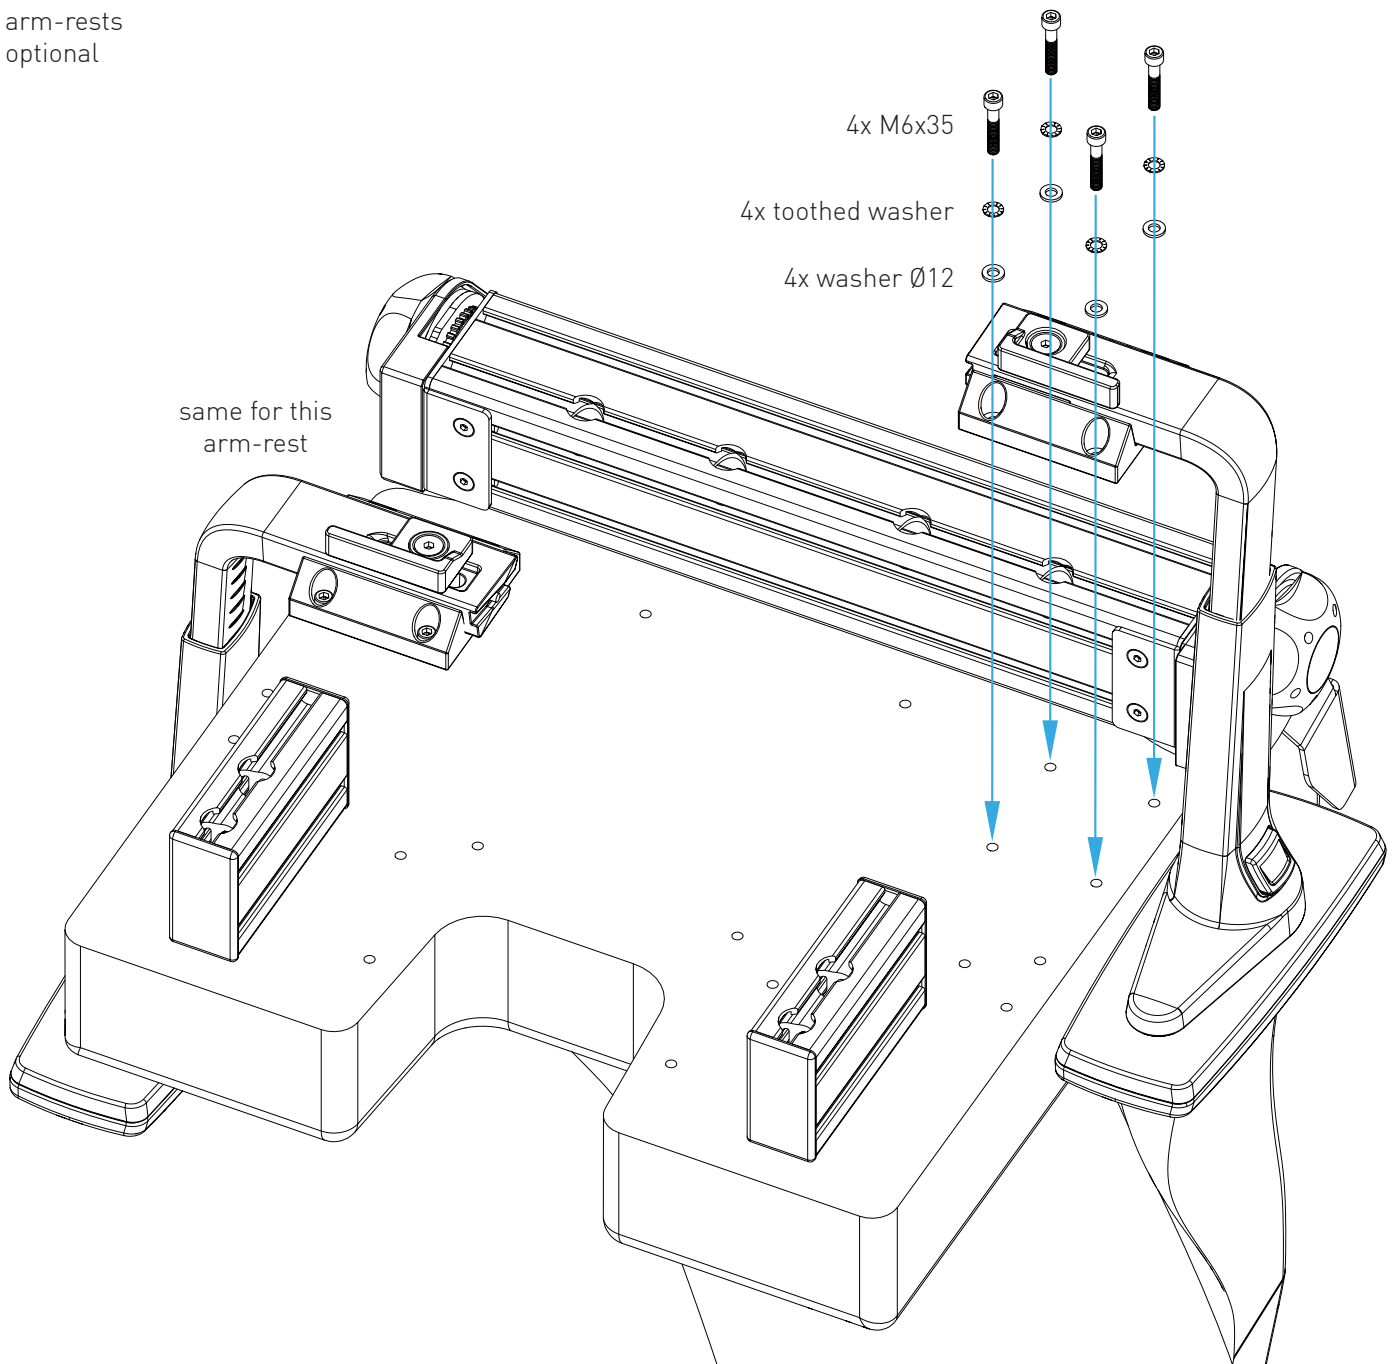


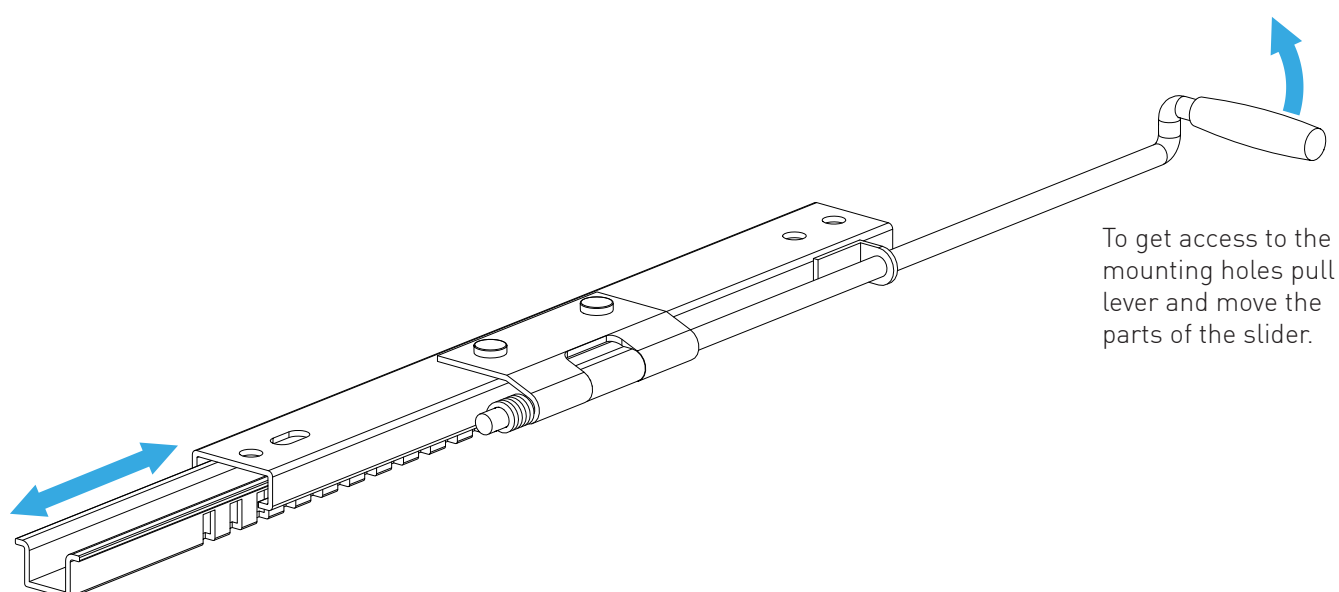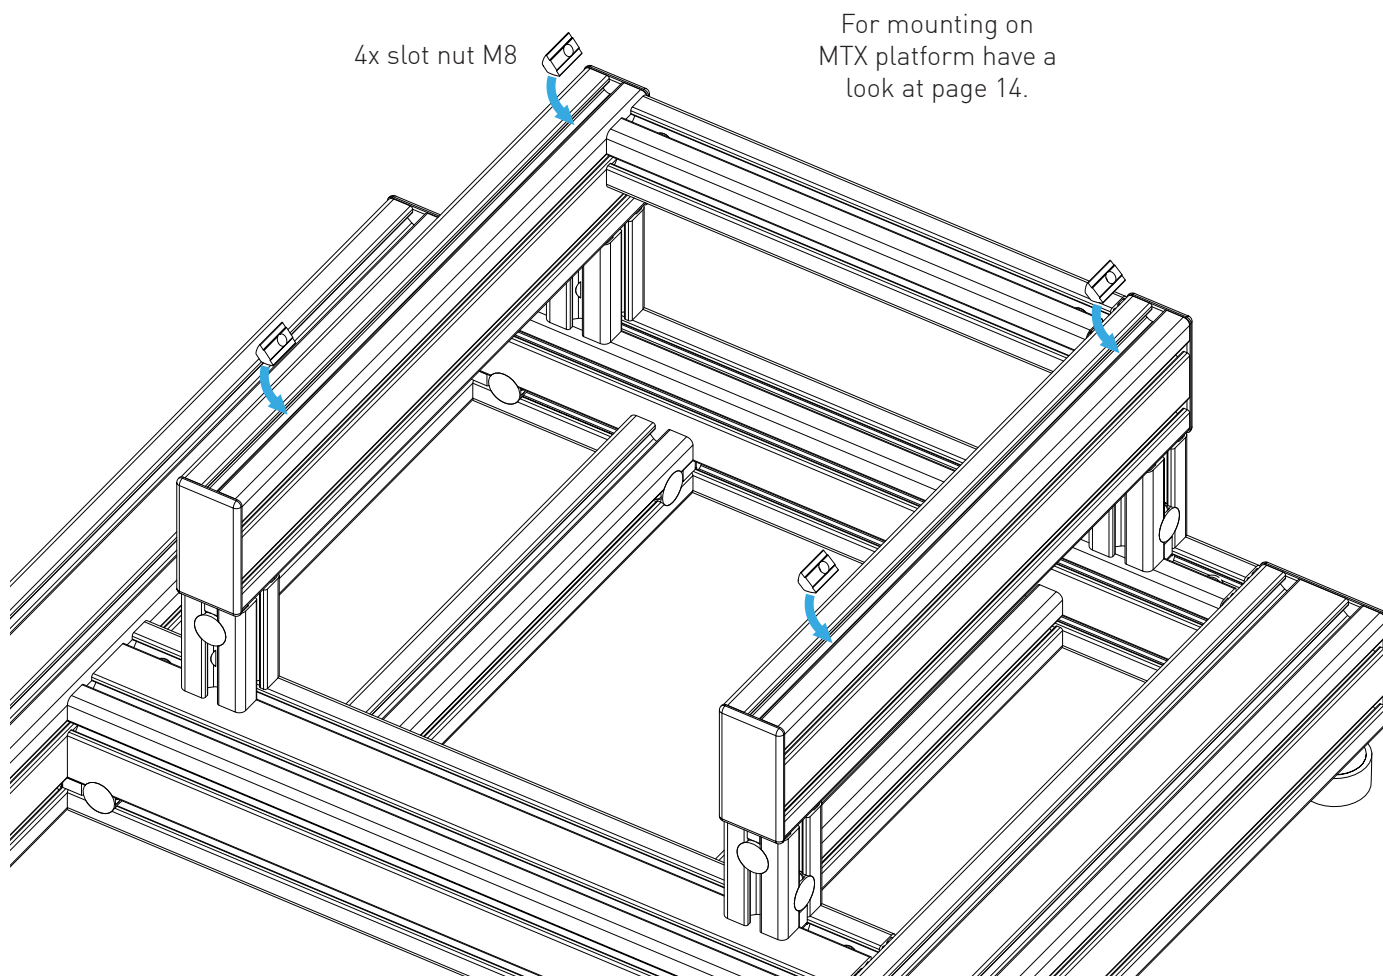


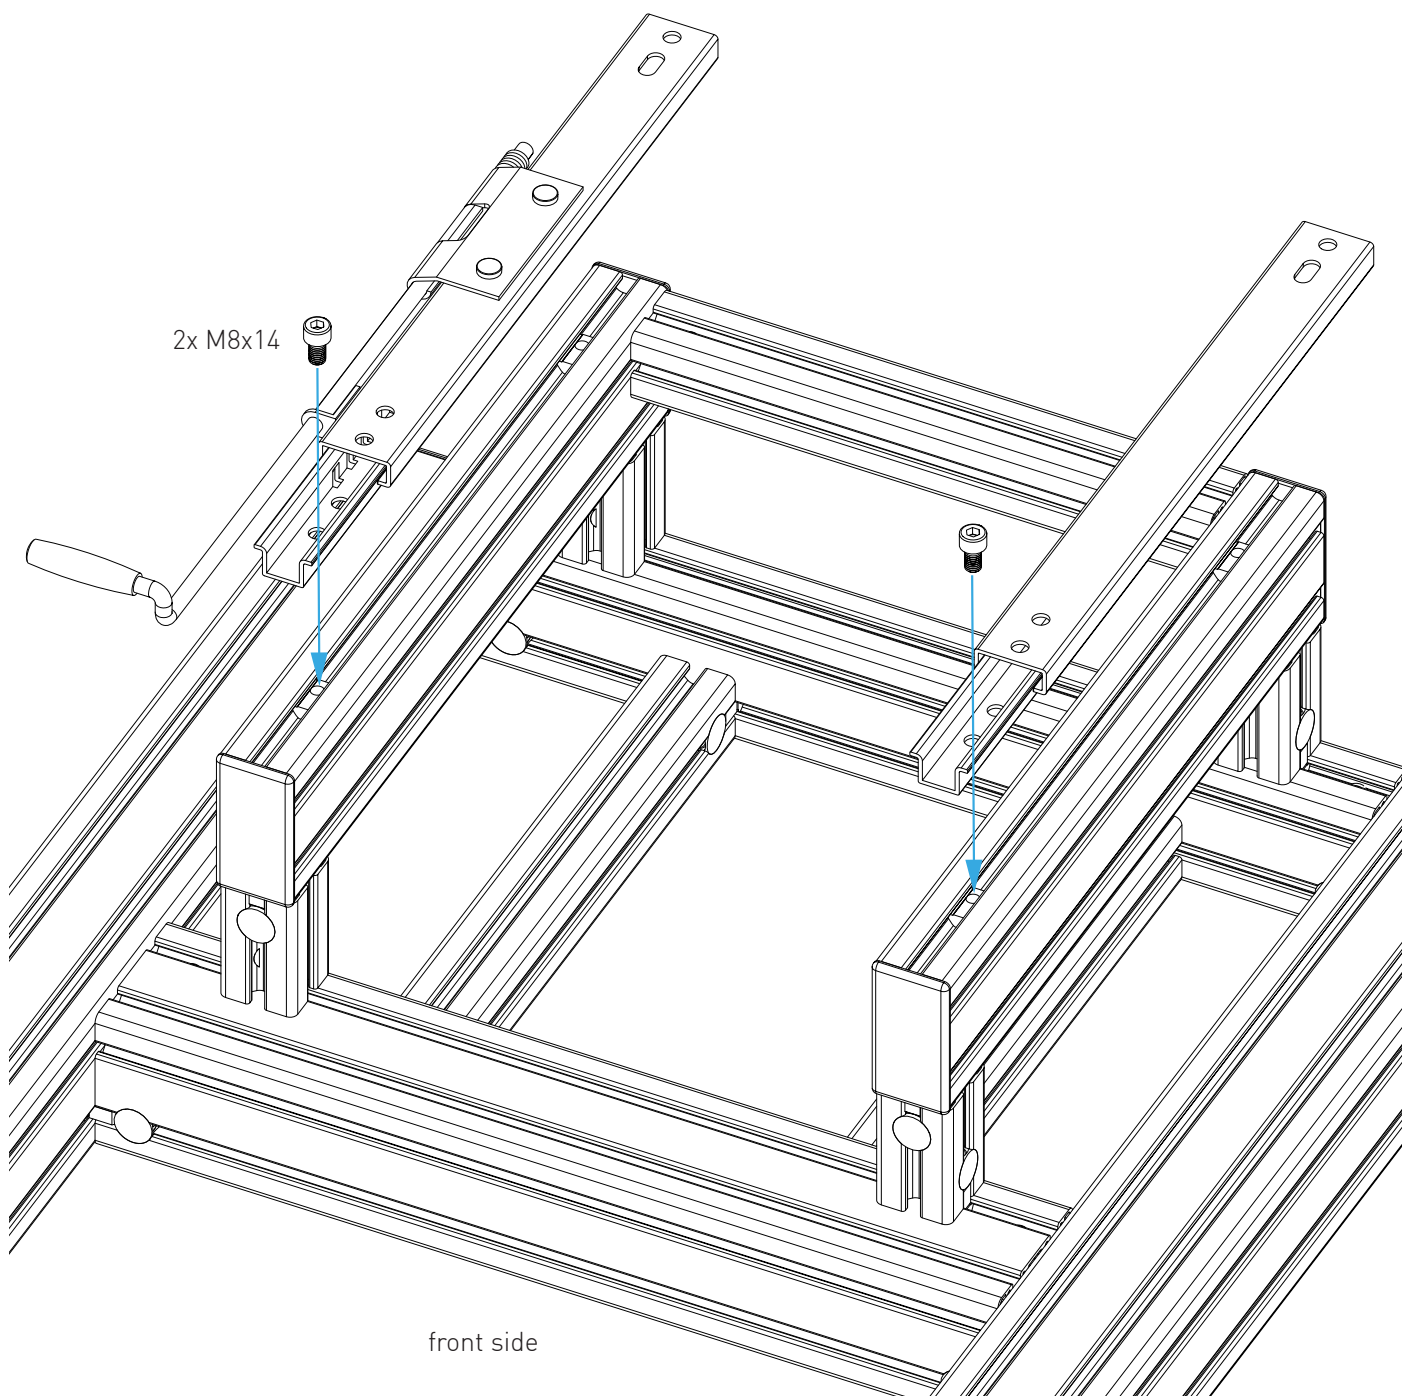

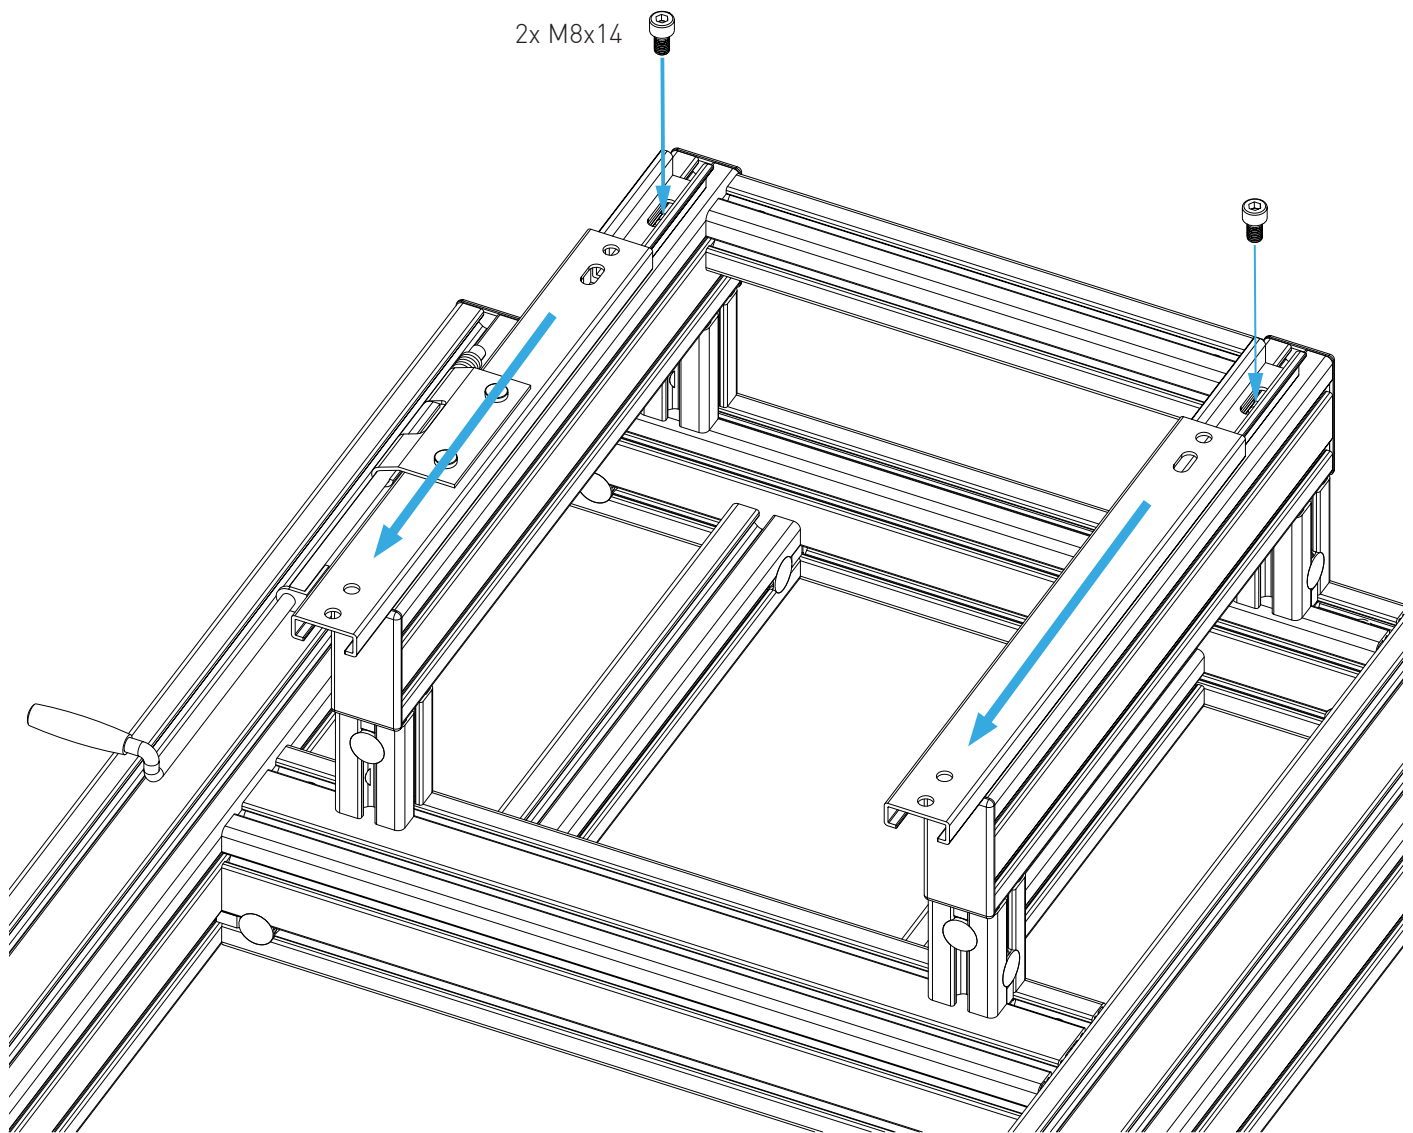

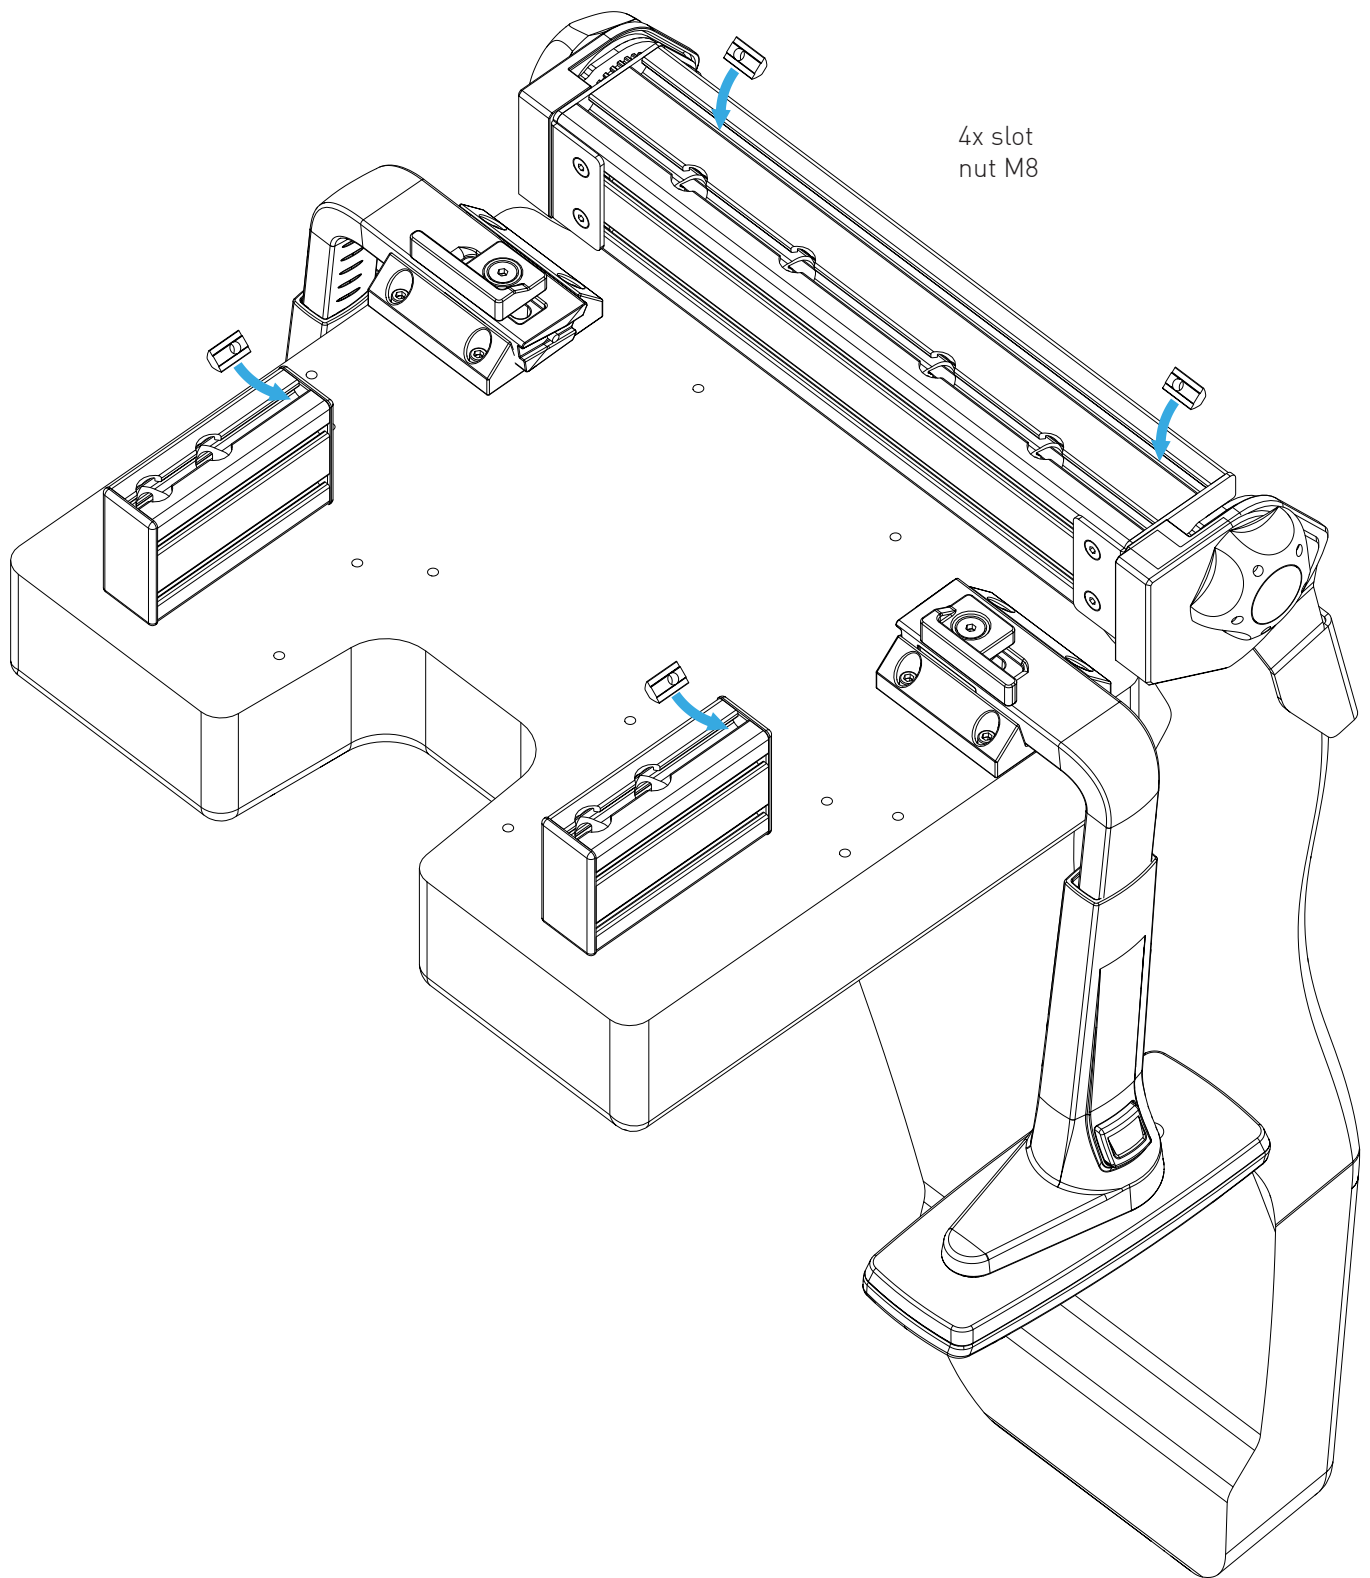


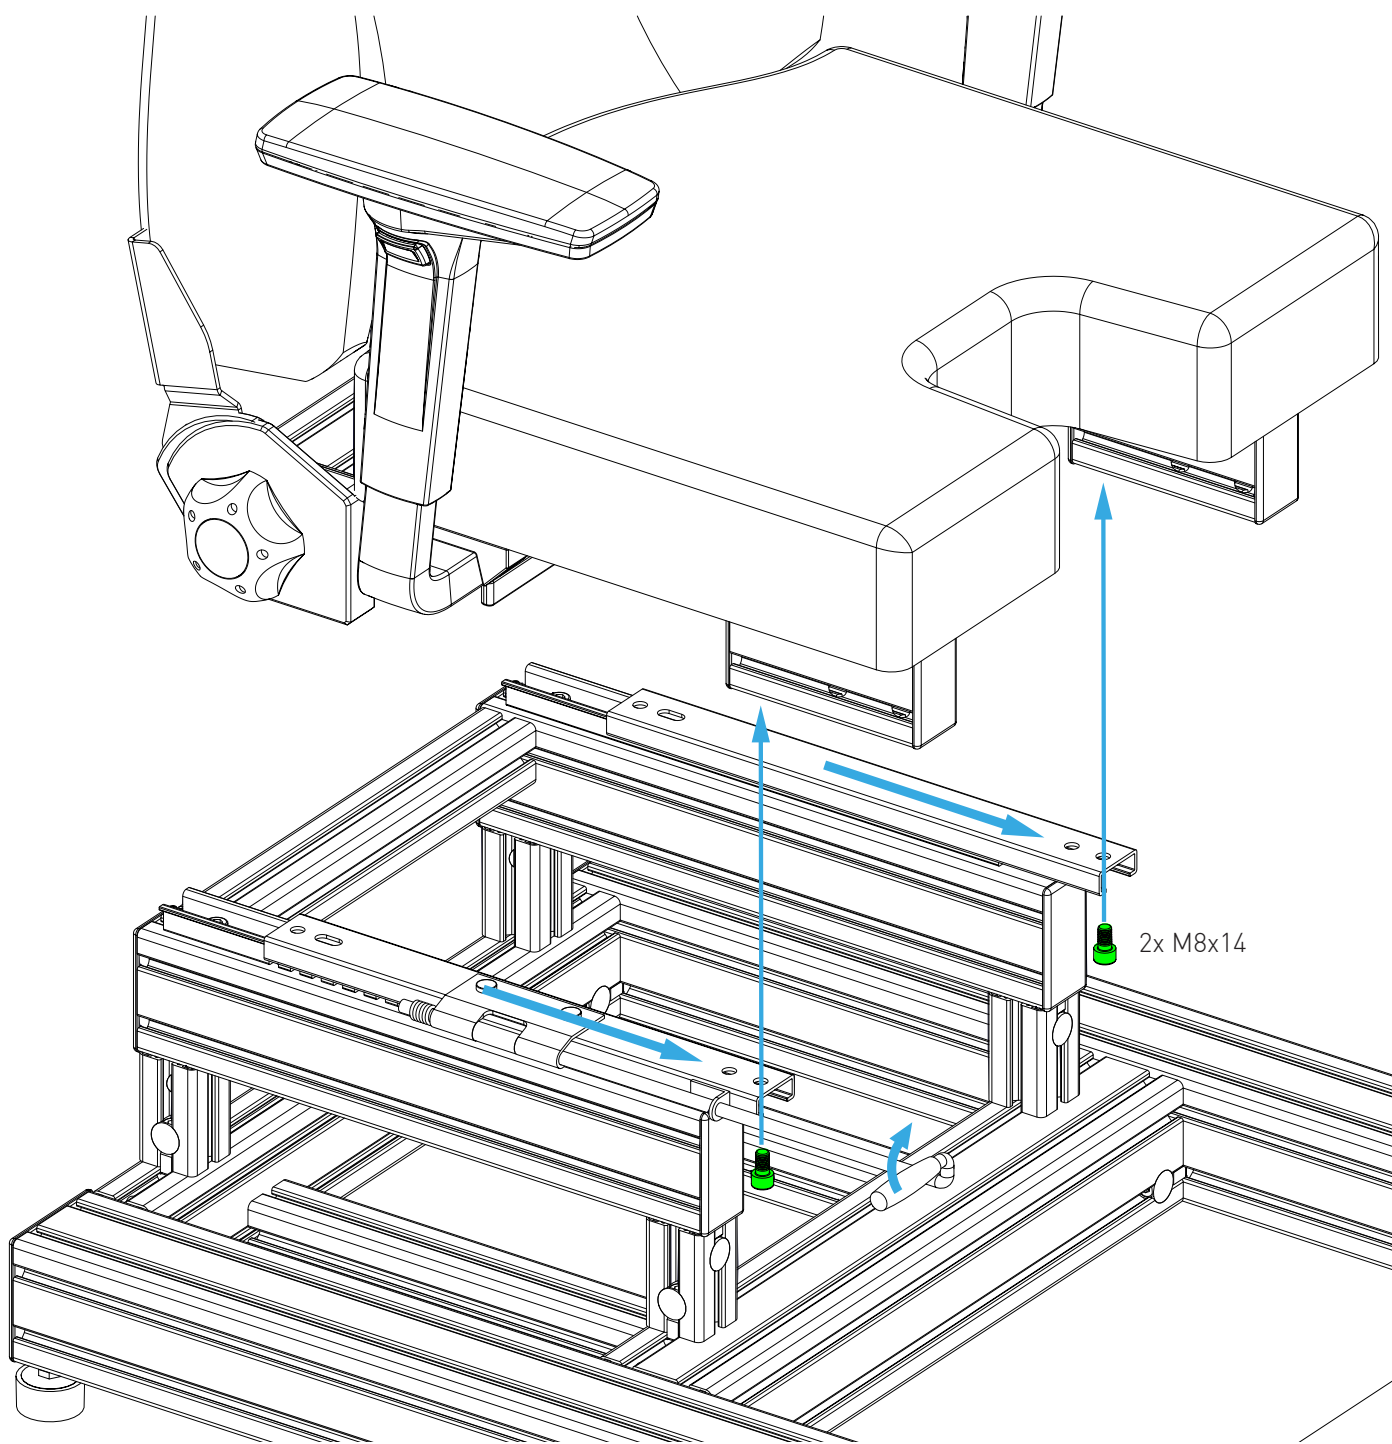


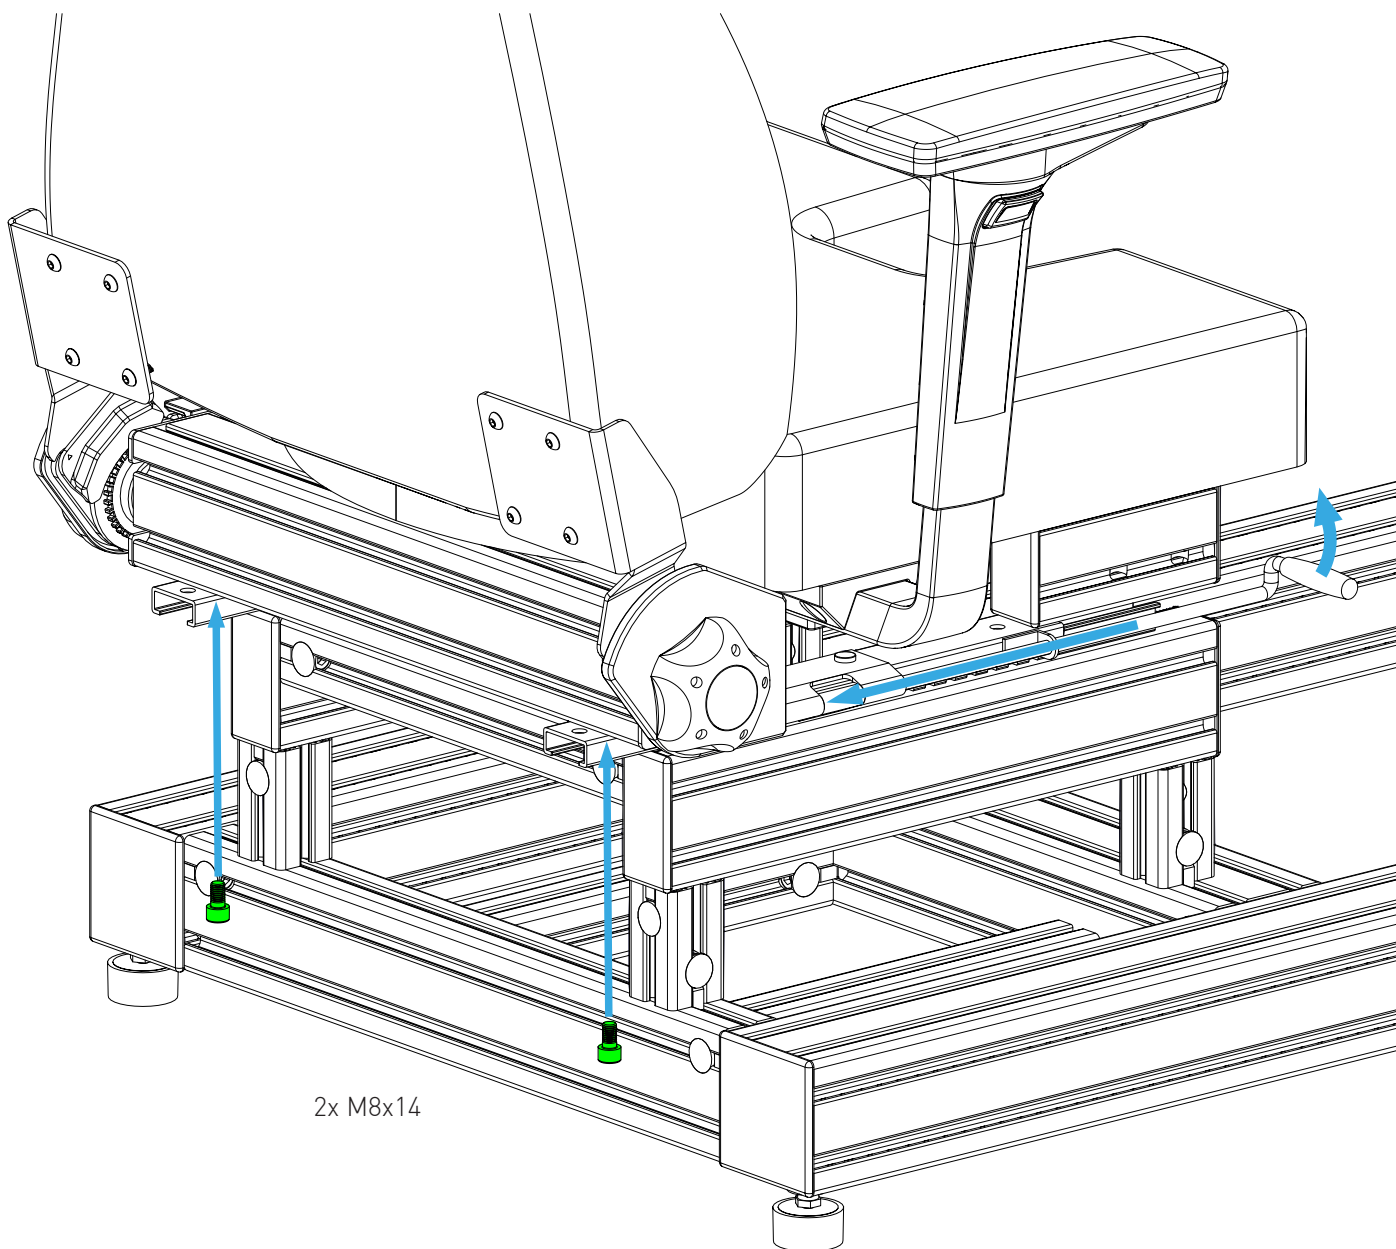


2x M8x14

bottom view

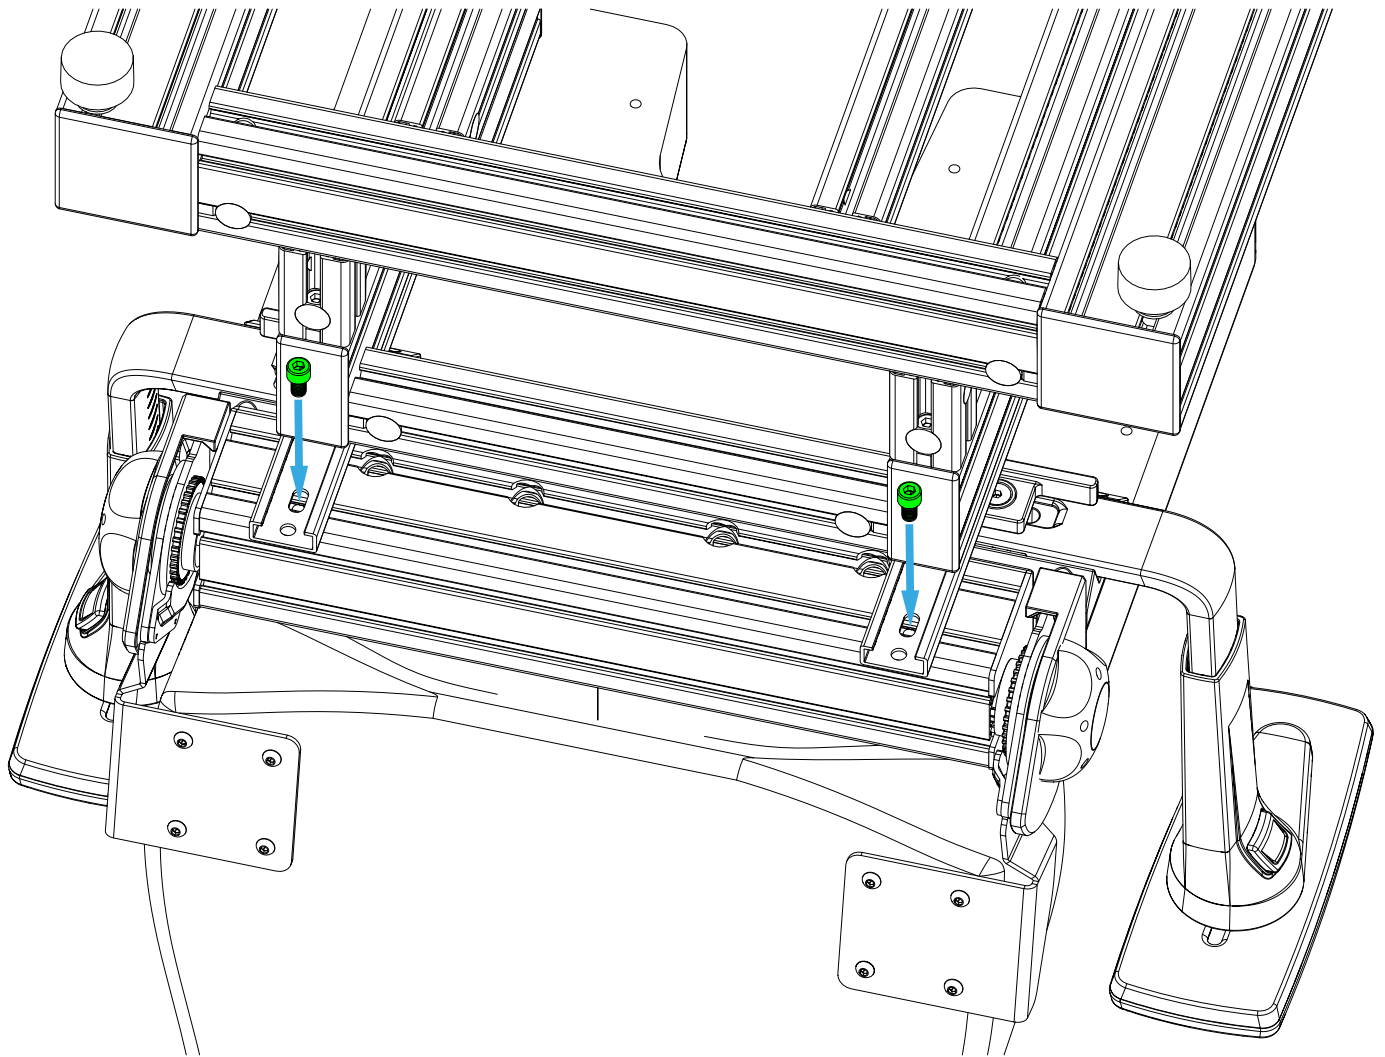

Mounting on MTX platform

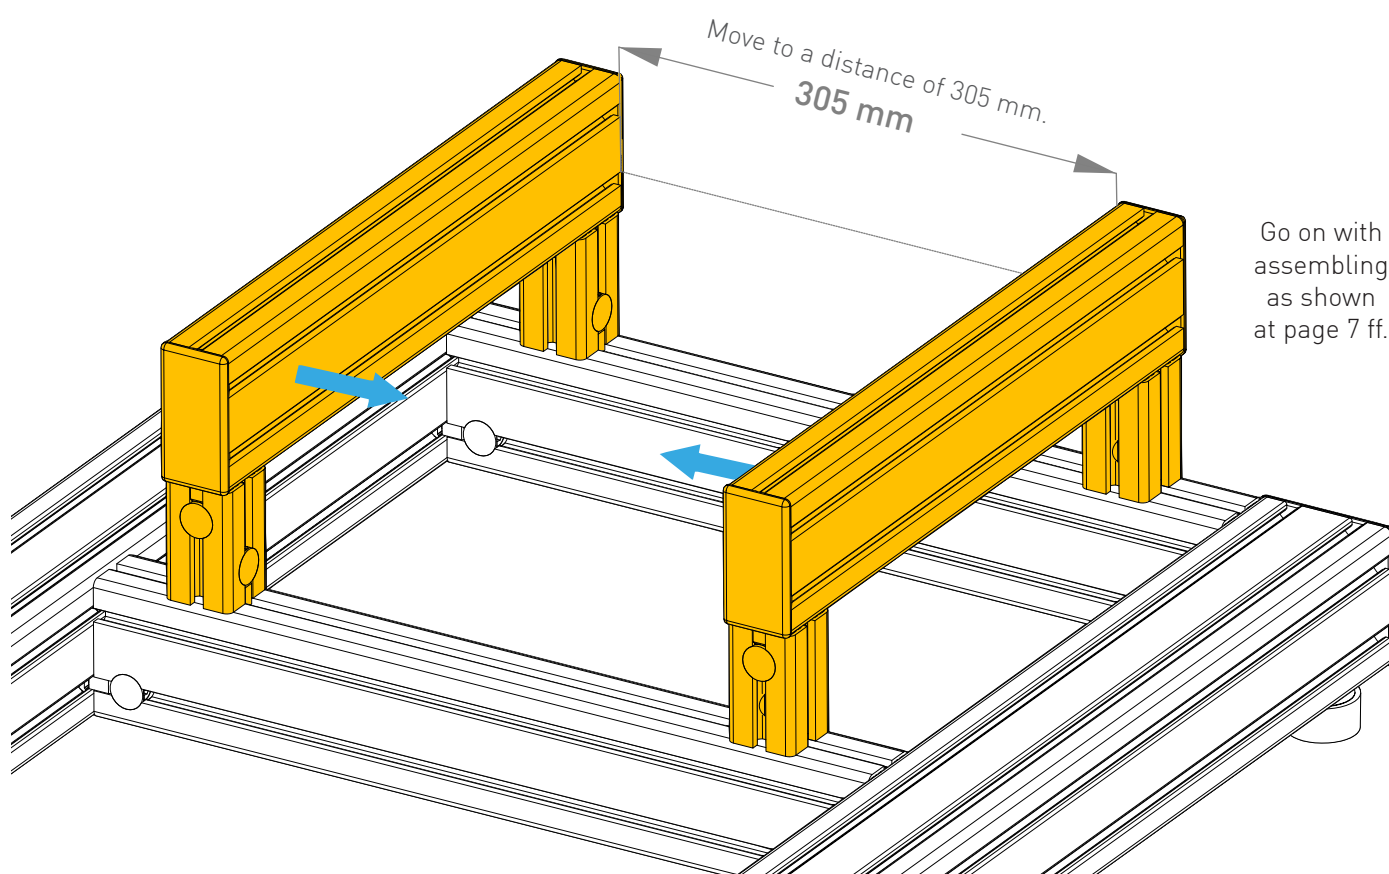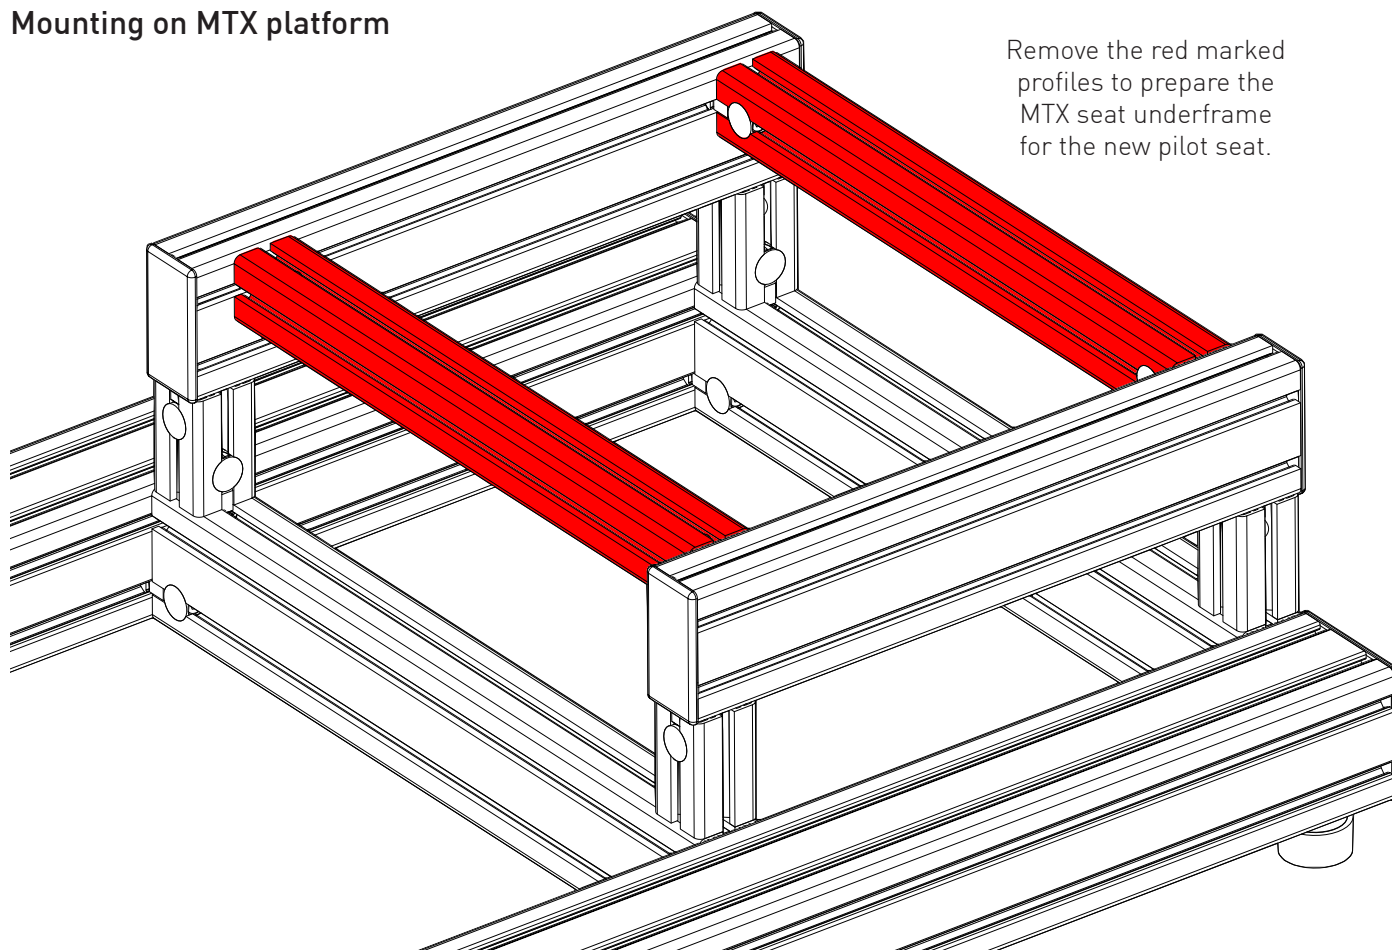



08-02-2023