


KLVS19A10
KLVS23A10

Quick Setup Guide

Please follow the steps to setup your TV:

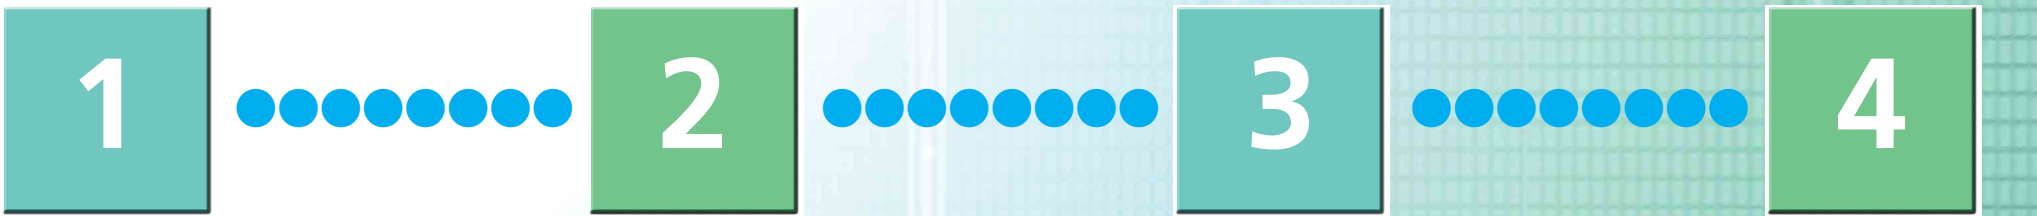

- Checking the Supplied Accessories
- Connecting Your TV (See reverse side)
- Running Initial Setup
- Programming the Remote Control


If your product is not working properly
DO NOT RETURN TO THE STORE.
For service and technical assistance
Call our Customer Information Service Center (Toll Free):
1-800-222-SONY (7669) for US residents.
1-877-899-SONY (7669) for Canadian residents.

1 Checking the Supplied Accessories

- Remote control (RM-YA001) (1) and size AA batteries (2)
- 75-ohm coaxial cable (ferrite core attached) (1)
- AC power cord (1)
- AC power adaptor (1) (KLVS19A10 only)
- HD15-HD15 cable (1)
- Support belt (1), securing screw (1) and wood screw (1)
- Operating Instructions (1)
- Quick Setup Guide (1)
- Leaflet (Installing the Wall-Mount Bracket to the TV) (1)
- Warranty Card (1)

Inserting Batteries into the Remote Control

Insert two size AA batteries (supplied) by matching the + and - on the batteries to the diagram inside the remote control’s battery compartment.

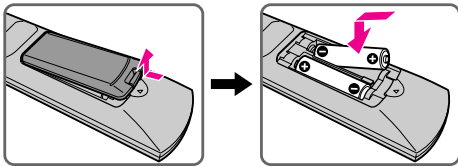

2 Connecting Your TV

- Review the following chart to determine which diagram to use to connect the components in your system:

For these components	See reverse side
<div>Cable/Antenna</div> <div><div>Cable Box</div>OR<div>Satellite Receiver</div></div> <div>VCR</div> <div>DVD Player</div>	A
<div>Cable/Antenna</div> <div><div>Cable Box</div>OR<div>Satellite Receiver</div></div> <div>VCR</div> <div>DVD Player</div> <div>AV Receiver</div>	B
<div>Cable/Antenna</div> <div><div>Cable Box</div>OR<div>Satellite Receiver</div></div> <div>VCR</div> <div>DVD Player</div> <div>Satellite Receiver</div>	C
<div>Cable/Antenna</div> <div><div>Cable Box</div>OR<div>Satellite Receiver</div></div> <div>DVD Player</div> <div>AV Receiver</div> <div>Digital Recorder</div>	D
<div>Cable/Antenna</div> <div><div>HD Cable Box</div>OR<div>HD Satellite Receiver</div></div> <div>VCR</div> <div>DVD Player</div>	E
<div>Cable/Antenna</div> <div><div>Cable Box</div>OR<div>Satellite Receiver</div></div> <div>VCR</div> <div>Sony Dream System</div>	F

- See the “Cables Required” chart that appears with the diagram to determine which cables you’ll need. You may need to purchase extra accessories, such as cables and splitters, depending on the components you plan to connect.
- Turn off and unplug all components before making connections.
- If you are connecting a digital cable box, you’ll need a special bi-directional splitter that’s compatible with your cable box. Contact your cable provider for details.

Making Video Connections

Your TV includes several types of video inputs. Use the inputs that are available on your components that provide the best video performance, as shown in the table on the right.

	Connector type
<div></div>	HDMI* (High-Definition Multimedia Interface)
<div></div>	Component video*
<div></div>	S VIDEO
<div></div>	Composite video
<div></div>	RF/Coaxial
* Support 480i, 480p, 720p, 1080i	

Additional Connections

For best audio performance, connect your digital audio components using either digital optical or digital coaxial audio connections. Depending on which components are in your system, you may need to complete additional connections. For example, if you have a satellite receiver, you’ll need to connect the satellite antenna. If you have an A/V receiver, you’ll need to connect speakers.

- Notes
- The connection diagrams shown on the reverse side are recommendations only; other possible solutions may exist. Connections that include an A/V receiver can often be very complex, so check your A/V receiver’s instruction manual for additional details.
 - See the Operating Instructions when connecting to a personal computer.

3 Running Initial Setup

- 1 Press POWER to turn on the TV. The Initial Setup screen appears.
- 2 Press

▲

 or

▼

 to select the on-screen display language. Then press

⏻

. The message “First please connet cable/antenna” appears.

Note

By default, Auto Program is set to scan cable TV channels.
- 3 Press CH+ to start Auto Program.

Auto Program automatically creates a list of receivable channels. When finished, the lowest numbered channel is displayed. When all the receivable channels are stored, the “Show /Hide Channels” settings appear.

To scan available VHF/UHF antenna channels instead of the cable TV channels

- 1 Select Settings in WEGA GATE, then go to Channels settings.
- 2 Set Cable to Off.
- 3 Start Auto Program by pressing CH+.

To perform Auto Program again, follow the above instructions. Depending on your signal source, be sure to set Cable to On or Off accordingly (see Operating Instructions).

- Note
- The Initial Setup menu will appear each time the TV is turned on until you complete the scanning for the available channels.

4 Programming the Remote Control

The remote control is preset to operate Sony brand video equipment.

Sony Equipment	Programmable Code Number
DVD/VCR	601 (Sony Dream System)
SAT/Cable	801 (Sony Satellite Receiver)

Follow the steps below to program your TV’s remote control to operate the non-Sony video equipment.

Using the code list below, find the three-digit code number for the manufacturer of your equipment. (If more than one code number is listed, use the number listed first.)

-
- 1 Press and hold the

⏻

 or

📶

 FUNCTION button you want to program on the remote control and press the

📶

 button simultaneously. The selected FUNCTION button (DVD/VCR or SAT/CABLE) will flash.
 - 2 Enter the three-digit manufacturer’s code number using the

⓪

-

⓯

 buttons while the button is lit, approximately 10 seconds.
 - 3 Press

📺

 button.

When the programming is correct, the selected FUNCTION button will flash twice slowly, and when not, flashes five times quickly.

To check if the code works

Aim your TV’s remote control at the equipment, and press the green POWER button. If the equipment responds, the programming is completed. If not, try the next code listed.


- Tips
- If no code is input within the above specified time, or an invalid or incorrect code number is input, the remote control automatically goes back to the previous setting.
 - In some cases, you may not be able to program your remote control to operate other equipment. In such cases, use the equipment’s own remote control.
 - Dead batteries or removing the batteries may cause the programmable codes to be lost and revert back to factory settings. Reprogramming the codes may be necessary.

Manufacturer's Codes	Manufacturer	Code	Manufacturer	Code
DVD Players	Alwa*	338, 344	Scott	312, 313, 321, 335, 323, 324, 325, 326
	Audio Dynamic	314, 337	Sharp	327, 328
	Broksonic	319, 317	Signature 2000 (M.Ward)	338, 327
	Canon	309, 308	SV 2000	338
	Citizen	332	Sylvania	308, 309, 338, 310
	Craig	302, 332	Symphonic	338
	Curtis Mathes	304, 338, 309	Tashiro	332
	Daewoo	341, 312, 309	Tatung	314, 336, 337
	DBX	314, 336, 337	Teac	314, 336, 338, 337
	Dimensia	304	Technics	309, 308
	Emerson	319, 320, 316, 317, 318, 341	Toshiba	312, 311
	Fisher	330, 335	Wards	327, 328, 335, 331, 332
	Funai	338	Yamaha	314, 330, 336, 337
	General Electric	329, 304, 309	Zenith	331
	Go Video	322, 339, 340		
DVD Changers	Goldstar	332	Cable Boxes	
	Hitachi	306, 304, 305, 338	Manufacturer	Code
	Instant Replay	309, 308	Sony	230
	JC Penney	309, 305, 304, 330, 314, 336, 337	Hamlin/Regal	222, 223, 224, 225, 226
	JVC	314, 336, 337, 345, 346, 347	Jerrold/G.I./Motorola	201, 202, 203, 204, 205, 206, 207, 208, 218, 222
	Kenwood	314, 336, 332, 337	Oak	227, 228, 229
	LG	332	Panasonic	219, 220, 221
	LXI (SEARS)	332, 305, 330, 335, 338	Pioneer	214, 215
	Magnavox	308, 309, 310	Scientific Atlanta	209, 210, 211
	Marantz	314, 336, 337	Tocom	216, 217
	Marta	332	Zenith	212, 213
	Memorex	309, 335		
	Minolta	305, 304	Satellite Receivers	
	Mitsubishi/MGA	323, 324, 325, 326	Manufacturer	Code
	Multitech	325, 338, 321	Sony	801
HDD/DVD Combo Units	NEC	314, 336, 337	Dish Network	810
	Olympic	309, 308	Echostar	810
	Optimus	327	General Electric	802
	Orion	317	Hitachi	805
	Panasonic	308, 309, 306, 307	Hughes	804
	Pentax	305, 304	Mitsubishi	809
	Philco	308, 309	Panasonic	803
	Philips	308, 309, 310	RCA/PROSCAN	802, 808
	Sony (DAV)	601, 602, 603, 604	Toshiba	806, 807
	Pioneer	308	Philips	811
	Quasar	308, 309, 306	Samsung	812
	RCA/PROSCAN	304, 305, 308, 309, 311, 312, 313, 310, 329		
	Realistic	309, 330, 328, 335, 324, 338		
	Sansui	314		
	Samsung	322, 313, 321		
VCRs	Sony	301, 302, 303		
	Admiral (M. Ward)	327		
	Sanyo	330, 335		

* If an Aiwa VCR does not work even though you enter the code for Aiwa, enter the code for Sony instead.

A

Use this diagram if you have;

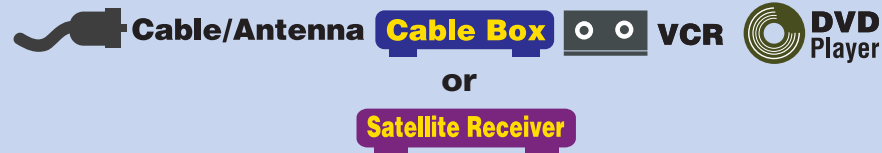


Cables Required

Splitter	1
Coaxial	4
Composite	2
Component	1
Audio	1

If your DVD player or satellite receiver has an HDMI jack, use that instead of the video connections shown here.

If you are not using a cable box or satellite receiver, connect your cable or antenna to the VCR's RF IN jack.

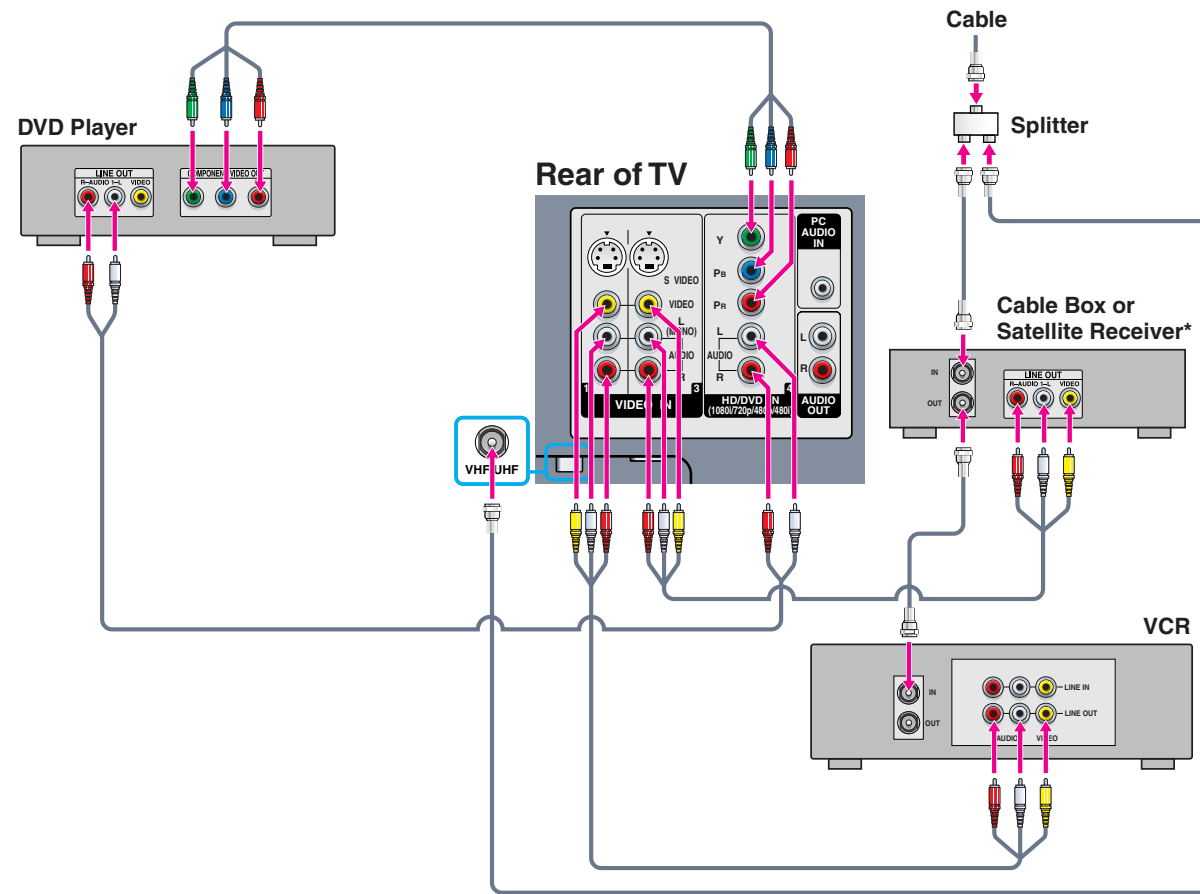

B

Use this diagram if you have;




Cables Required

Splitter	1
Coaxial	4
Composite	3
Component	1
Audio	2

If your DVD player or satellite receiver has an HDMI jack, use that instead of the video connections shown here.

If you are not using a cable box or satellite receiver, connect your cable or antenna to the VCR's RF IN jack.

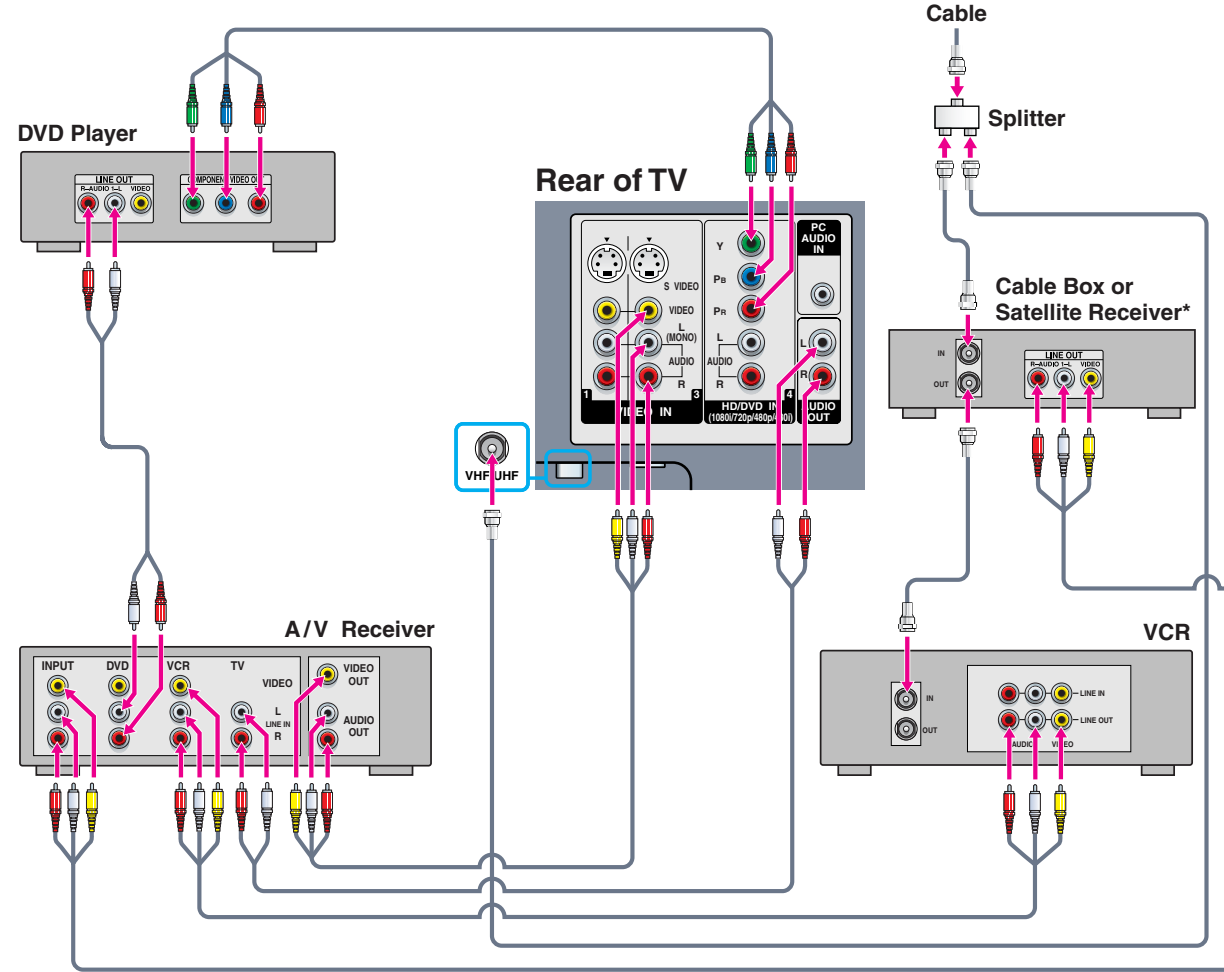

C

Use this diagram if you have;




Cables Required

Splitter	1
Coaxial	6
Composite	3
Component	1
HDMI	1
Audio	1

The DVI-HDTV VIDEO connector does not provide audio, so audio cables must be connected to provide sound when a DVI to HDMI adaptor is used.

If you are not using a cable box, connect your cable or antenna to the VCR's RF IN jack.

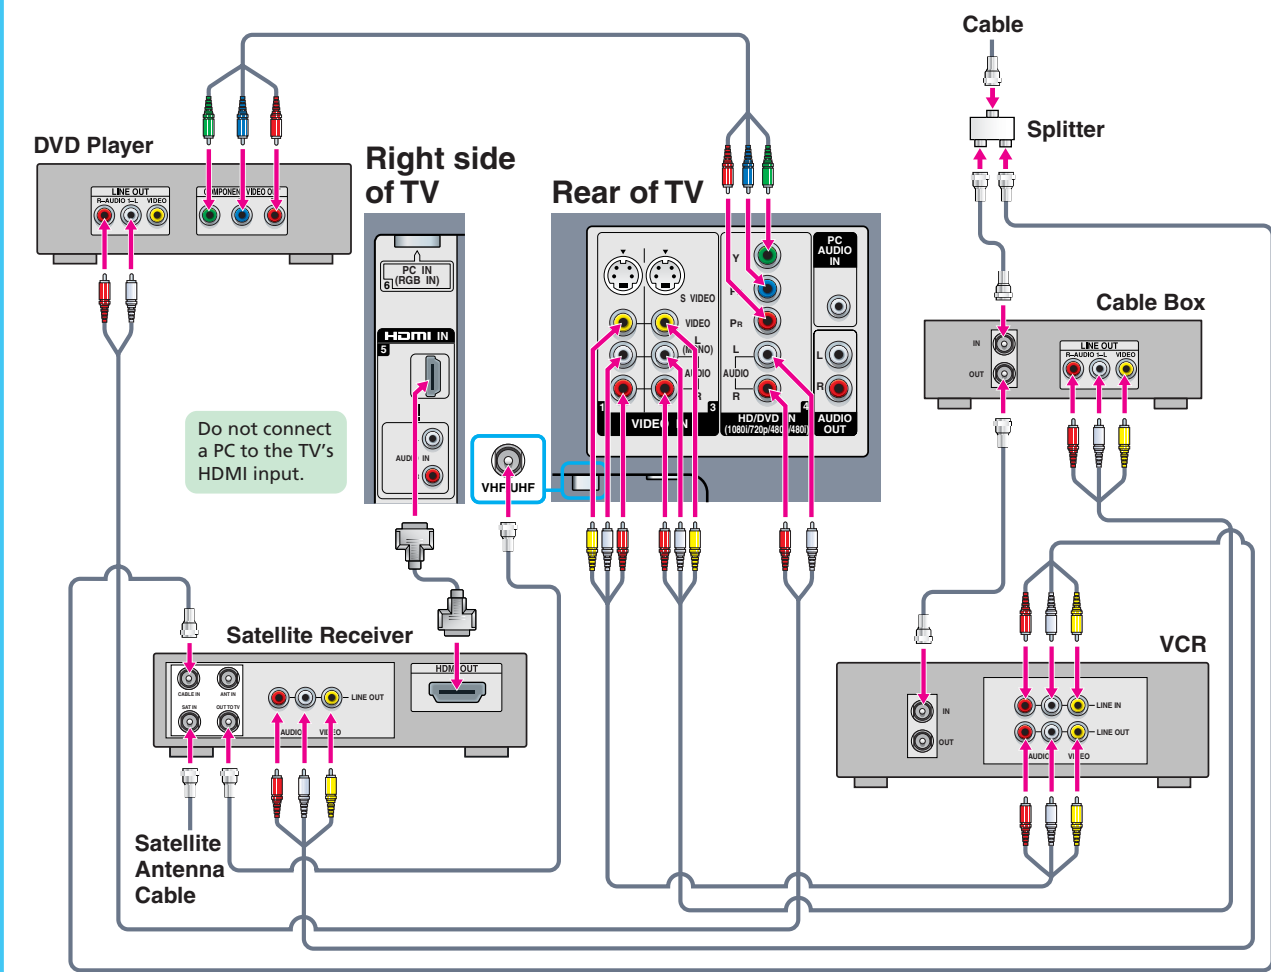

D

Use this diagram if you have;




Cables Required

Splitter	1
Coaxial	3
Composite	3
Component	1
Audio	2


If your DVD player or satellite receiver has an HDMI jack, use that instead of the video connections shown here.

If you are not using a cable box or satellite receiver, connect your cable or antenna to the VCR's RF IN jack.

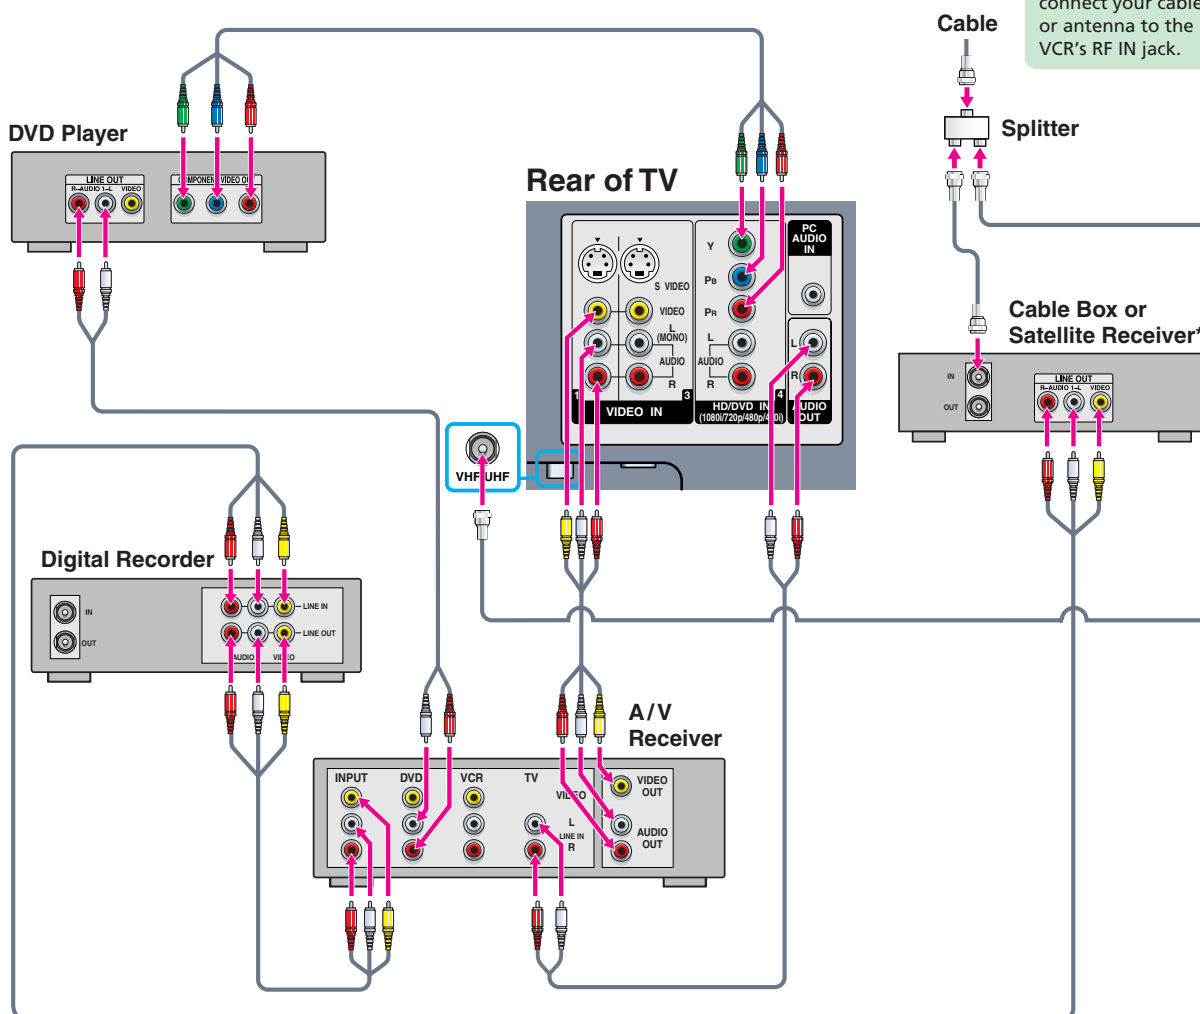

E

Use this diagram if you have;

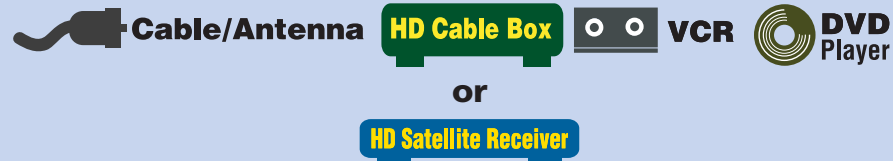


Cables Required

Splitter	1
Coaxial	3
Composite	2
Component	1
HDMI	1
Audio	1


The DVI-HDTV VIDEO connector does not provide audio, so audio cables must be connected to provide sound when a DVI to HDMI adaptor is used.

If your cable box has a DVI jack, use that instead of the video connections shown here.

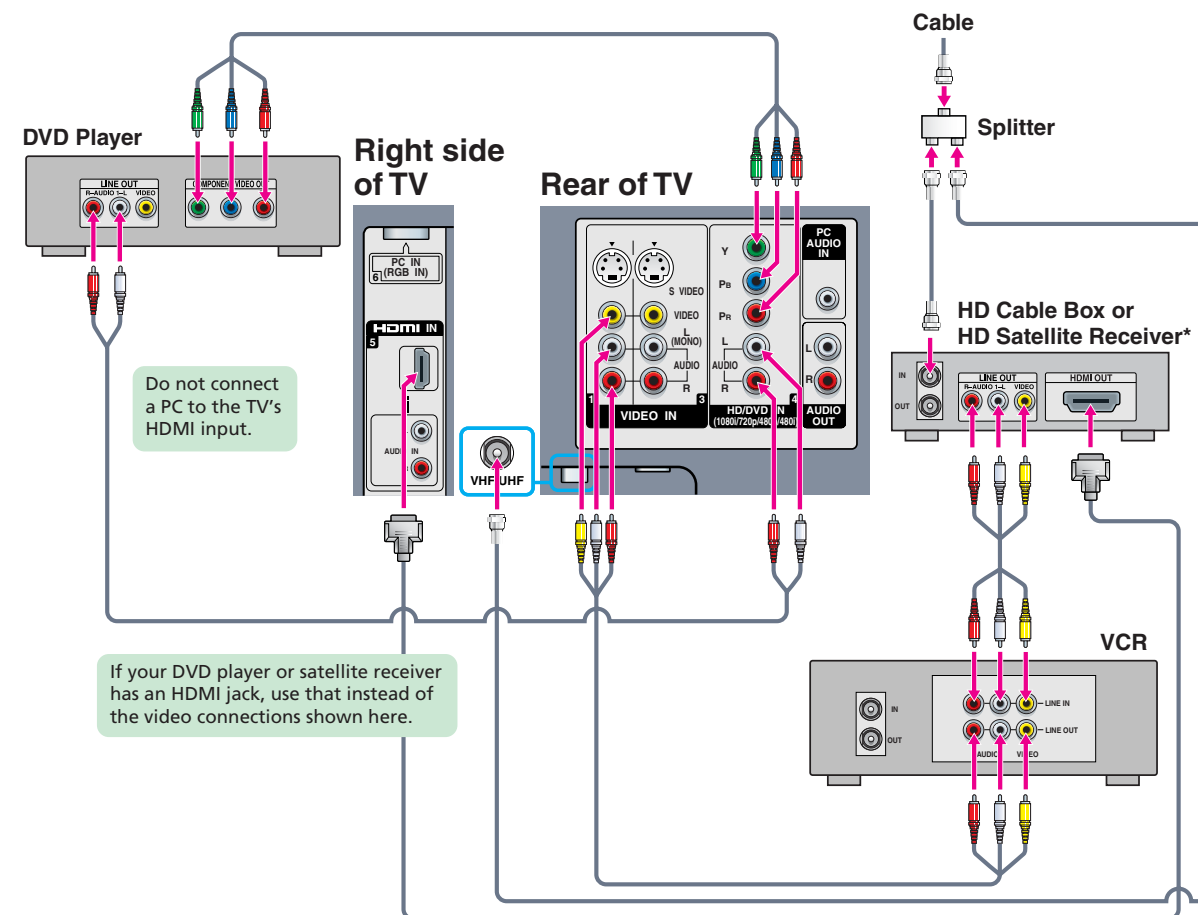

F


Use this diagram if you have;

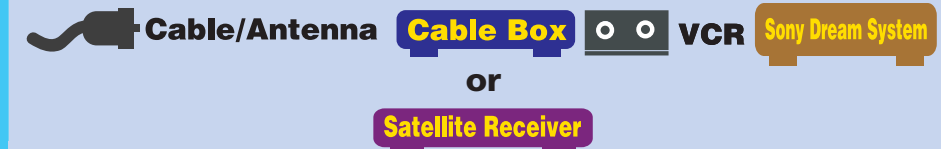

Cables Required

Splitter	1
Coaxial	4
Composite	2
Component	1
(without Audio)	1
Component	1

If you are not using a cable box or satellite receiver, connect your cable or antenna to the VCR's RF IN jack.

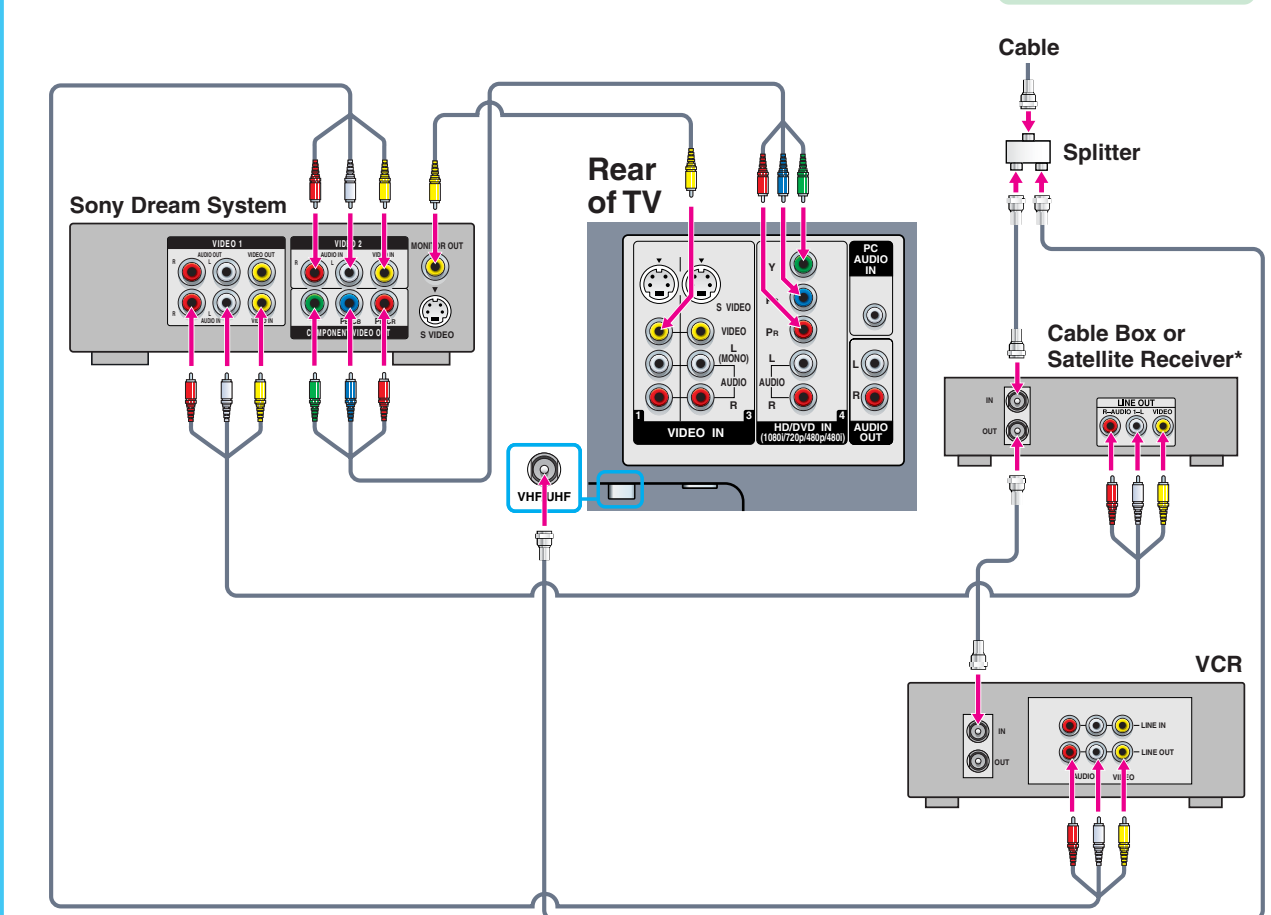

This file has been downloaded from:

www.UsersManualGuide.com

User Manual and User Guide for many equipments like mobile phones, photo cameras, mother board, monitors, software, tv, dvd, and others..

Manual users, user manuals, user guide manual, owners manual, instruction manual, manual owner, manual owner's, manual guide, manual operation, operating manual, user's manual, operating instructions, manual operators, manual operator, manual product, documentation manual, user maintenance, brochure, user reference, pdf manual