



Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause/ Cancel	 Pause / Step / Freeze
 Stop/ Hold	 Stop / Hold
 Rec	 Rec / Rec Mode
 <</ Index	 << / Tune-
 >>	 >> / Tune+
 I <</ Sub. PG	 I << / Preset-
 >>/ Reveal	 >> / Preset+
 Subtitle	 Subtitle / EQ
 Aspect	 Picture / Format
 Size	 Zoom / Size
 Tv/ Radio	 TV/ Radio /
 DTV/ ATV	 Set up / OPT /
 TTX	 Text / Got o
 Source	 AV / Input / RDS

Original	Recharge
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Vol +	 Vol +
 Recl ist	 Smart / List
 CH+	 CH+ / Page+
 Vol -	 Vol -
 Display	 Display / Media
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4



