

WOLFANG

Trail Camera User Manual

WT01

EN

DE

FR

IT

 
ES

Menu


EN	English	1
DE	Deutsch	14
FR	Français	27
IT	Italiano	40
ES	Español	53

Product Structure


Front View

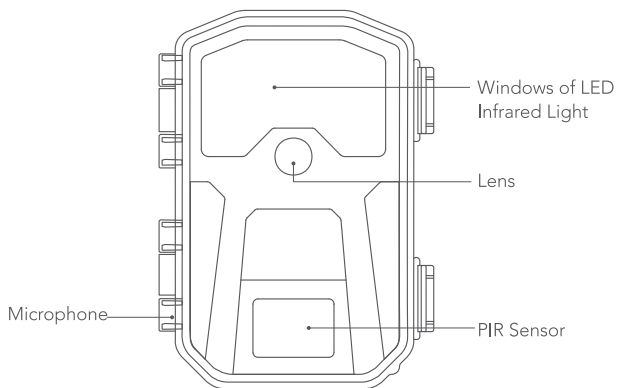

Back View

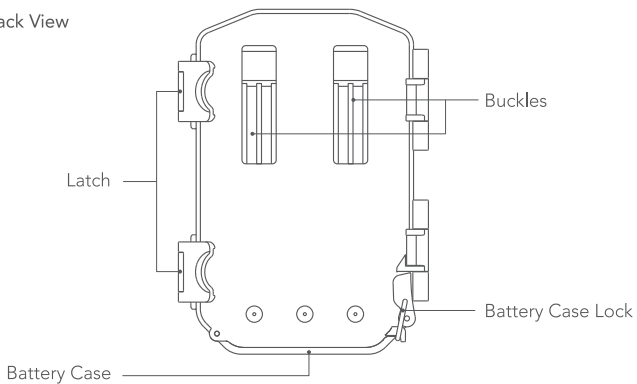 

Inside View

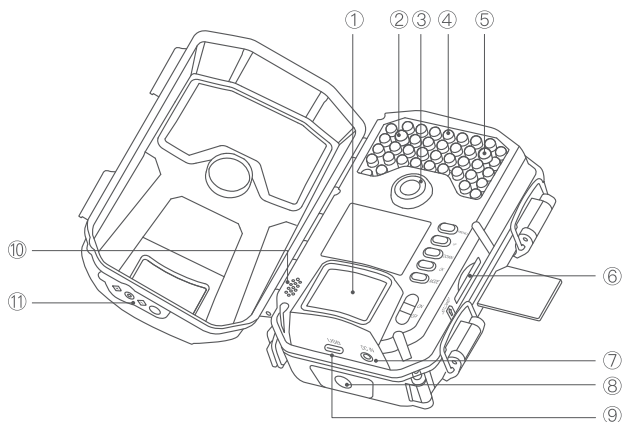 

① PIR Sensor

② Light Sensor

③ Lens

④ LED Infrared Light

⑤ PIR Sensor Indicator

⑥ SD Card Slot

⑦ DC-IN Port

⑧ Tripod Hole

⑨ USB Port

⑩ Speaker

⑪ DC IN Plug Cover

Important Note

EN

Dear Customer,

Thank you for purchasing a WOLFANG Trail Camera. We appreciate your business and will do everything in our power to earn your trust. Please refer to the instructions in this manual for operation and best use of the camera.

If your WOLFANG Trail Camera does not seem to be functioning properly or if you are having photo/video quality issues, please feel free to email us, we will respond quickly and professionally to solve whatever issue you may have.

We also welcome and value all feedback and suggestions on our camera. Your objective feedback and frank opinions are the driving force behind our innovation. Please do not hesitate to reach out to us with complaints or suggestions, as they allow us to continue to grow and adapt with the ever-changing market.

We are deeply aware that quality service never ends, and will spare no effort to improve on our product quality and customer service experience now and forever. Thank you, once again, for choosing WOLFANG and we look forward to being your camera partner now and in the future.

WOLFANG Trail Camera Service email: support.vc@wolfang.co

Sincerely,
WOLFANG

For Video Instruction, Exclusive Offers, New Releases, and more, please search "WOLFANG Trail Camera" on YouTube and Facebook, or scan below QR code.



Facebook



 
Instagram




YouTube

Quick Start Guide

EN

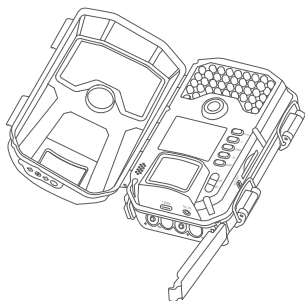


Insert 4 or 8 AA batteries

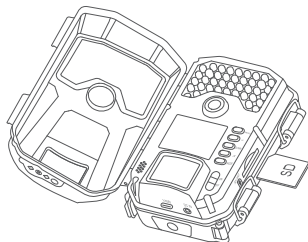 


Insert SD Card

 
Switch to ON

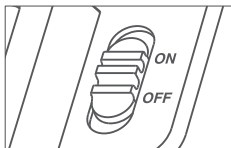


Switch to ON

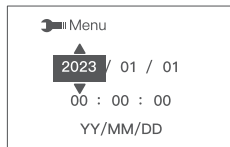 

Setup Date&Time

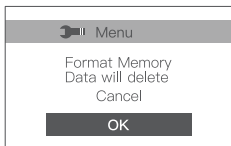 

Format SD card for first time use

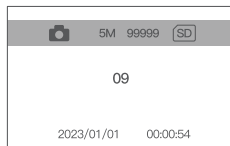 


Start Working after countdown

Installing the Batteries and SD Card

Before you begin learning how to use your WOLFANG Trail Camera, you will first need to install a set of batteries and insert a SD card. Please take the time to read the following directions and cautions:

Loading the batteries

 Normal AA batteries

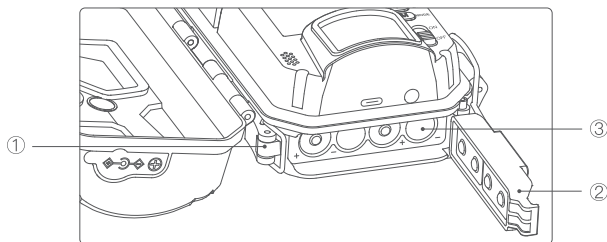

① Battery Case Lock

② Battery Door

③ Batteries

Insert the battery in the direction shown in the pic.

 
After opening the battery case lock at the bottom left of the camera, you will see that the camera has eight battery slots. Install a full set of 8 AA batteries. Be sure to insert each battery with correct polarity.

CAUTIONS:

1. WOLFANG recommends using a full set of eight high quality new 1.5V AA Lithium or alkaline AA batteries in all WOLFANG trail cameras models to obtain maximum battery life, as the lower voltage can cause operational issues.
2. Do not mix old and new batteries.
3. Do not mix battery types-use All lithium or All alkaline.

External Power Supply


EN

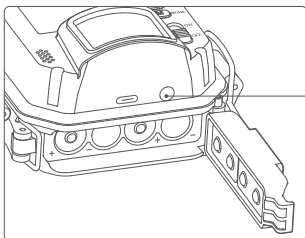

Connect one end of adaptor to an external power supply and the other end to the DC-IN port.

- The camera also can be operated by using power from an external power supply, connect the external power supply to the "DC-IN" jack at the bottom of the WOLFANG trail camera.
- External power supply output: 6V/2A
- DC-IN plug size: 3.5mm × 1.35mm

 Insert and format the SD Card

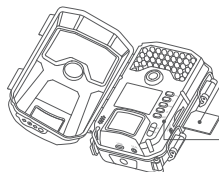

Insert the SD card into the card slot (metal contacts down) and push in until you hear a "click".

When the card is inserted, the mode switch must be in OFF position.

Note:

- Insert a Class 6 or higher class SD card up to 32GB.
- Format the new SD card before using the camera.

 
Product Operation and Menu Settings

EN

Product Operation

OFF/ON Mode

Shift the "Mode Switch" to choose working status

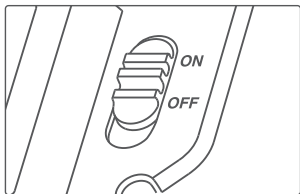

OFF Mode: Turn off the camera

The camera is completely off. Only in OFF mode should you insert or remove the memory card or replace the batteries.

ON Mode: Adjust settings/Start operating

 
When switched from OFF to ON, the screen display will go into the preview mode. You can manually record video, take photos, playback the recorded files or change settings.

In the preview mode, the PIR sensor is on. When they are triggered, light indicator will flash, but the camera will not take photos or record videos automatically.

If there is no operation, it will automatically get into working mode. There will be have a delay time and the screen will have a 10s countdown, and then it will be blank, the button operation will be disabled.

When detecting animals or other moving objects, the camera will take photos or record videos when the PIR sensor is triggered, then return to standby afterward.

• Manual Photo Mode

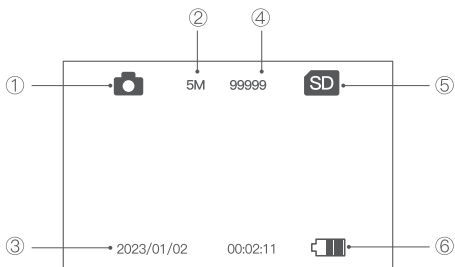

① Video Mode

② Video Resolution

 
③ Date & Time

④ Remaining Photo Capacity

⑤ SD Card Status

⑥ Battery Level

• Manual Video Mode

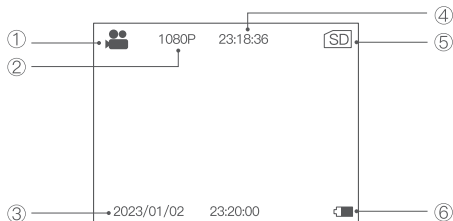

① Still Photo Mode

② Photo Resolution

③ Date & Time

④ Remaining Video Length

⑤ SD Card Status

⑥ Battery Level

Menu Settings

EN

Monitor Delay

Select the delay time when the camera enters the automatic shooting mode. In ON mode, the camera will automatically go into the automatic shooting mode after the set delay time if you do not make any operations.

Mode Setting

Selects whether still photos or video clips are captured when the camera is triggered. Photo&Video mode combines both Photo and Video, so a still photo and a video clip are both captured for each trigger.

Photo Pixel

Selects resolution for still photos. Higher resolution provides more pixels, but creates larger files that take up more of the SD card capacity (fills up faster).

Sequence

Selects how many photos are taken per trigger in Photo mode.

Video Resolution

Selects video resolution. Higher resolution produces better quality videos, but creates larger files that take up more of the SD card capacity (fills up faster). Using high speed SD cards (SanDisk® SDHC class 6 or higher) is recommended if you will higher video settings.

Recording Length

Specify the duration of a video recording when the camera is triggered automatically. The recording period for videos is not limited in TEST mode. To extend camera using life, we recommend to set a shorter video length.

Operate Interval

Select the length of time that the camera will “wait” until it responds to any additional triggers from the PIR after an animal is first detected and remains within the sensor’s range.

CAUTIONS:

PIR Interval have great influence on battery working time. The shorter the interval, the high frequency to capture target, but more power consumption; The longer the interval, the lower frequency to capture the target and less power consumption.

Timer

Set time to “ON” if camera should only be active within a certain time. Once “on” has been confired with the OK key, the start and end time can be set. if the start time is, for instance set to 18:35 and the end time is 8:25, the camera will be operational from 6:35 of the current day until 8:25 am of the following day. The camera will not be triggered and will not take any photos when the time in not included in this period.

Time Lapse

Turns Time Lapse recording mode on/off. When activated, this function forces the camera to take photos or videos even when it is not triggered by a nearby live target, useful for constant monitoring of an area that might be far away from the camera. This is also useful for observing cold blooded animals (e.g. snakes) or outdoor plants etc. As soon as the “on” setting has been confirmed by pressing the OK key, you could enter the interval time (15 seconds~30 minutes) after which photos are to be taken.

Note:

In this mode, the PIR function would stop working, and the camera would take photos in the setting interval time.

Language

Select the desired menu language.

Date & Time

Set the year, month and date (based on the date format you set), then the hour (based on the date format you set) and minute.

Serial ID Set

Allows the user to set a customer numbering for the camera. Useful for ID purposes when multiple cameras are setup, since each camera will imprint numbering on all photos (but not videos) it captures.

Use the UP/DOWN keys (to change the setting) and OK keys (to move to the next field) to set the two-digit code.

Beep

Select "ON" to open beep sound, "OFF" means close.

Record Audio

Select if record audio while recording a video.

Time Stamp

Select "Time Stamp" / "Date" if you want the date & time or only date (that the image was captured) imprinted on every photo / video, select "Off" for no imprint.

Password Set

After select "On" enter A four-digit password to protect your camera against unauthorized access. Use the UP/DOWN keys (to change the setting) and OK keys (to move to the next field) to set the four-digit code.

NOTE:

This password must be entered each time the camera is switched on in the TEST mode before the camera can be used. If you forget the password by accident, "1111" is the all-purpose password.

Format

Deletes (erases) all files stored on a card to prepare it for reuse. Always format a card that has been previously used in other devices or if it is a new card.

CAUTION:

Make sure you have downloaded and backed up any files you want to preserve first!

Default Setting

Select OK to restore all parameters to the original factory default settings. If the camera is behaving oddly and you think you may have changed the setting for something accidentally (but aren't sure which one), this will reset all parameters to their most commonly used or "generic" settings.

Version

 
 
Displays current firmware version for reference.

Mounting and Positioning the Camera

EN

Using the Adjustable Web Belt

Push one end of the belt through the two bracket on the back of the camera. Thread the end of the strap through the buckle. Fasten the belt securely around the tree trunk by pulling the end of the strap firmly so there is no slack left.

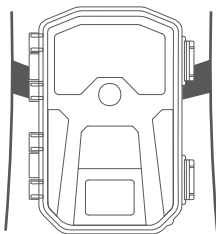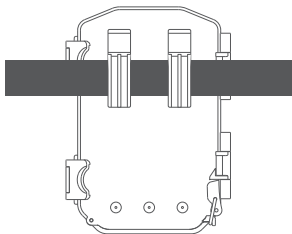

Sensing Angle and Distance Test

To test whether the WOLFANG trail camera can effectively monitor the area you choose, this test is recommended to check the sensing angle and monitoring distance of the WOLFANG trail camera. To perform the test:

- Switch the WOLFANG trail camera to the ON mode.
- Before the end of 10s countdown, make parallel movements in front of the camera at several positions within the area where you expect the game or subjects to be. Try different distances and angles from the camera.
- If the motion indicator LED light (Red LED) blinks, it indicates that position can be sensed. If it does not blink, that position is outside of the sensing area. The results of your testing will help you find the best placement when mounting and aiming the trail camera. The height away from the ground for placing the device should vary with the animal size appropriately. In general, 3 to 6 feet is preferred. You can avoid potential false triggers due to temperature and motion disturbances in front of the camera by not aiming it at a heat source or nearby tree branches or brush (especially on windy days).

Automatic Shooting

Make sure that Power switch in the ON position. Once you switch to the ON mode, the work indicator LED (red) will blink. Before activating automatic shooting, you can set the camera parameters, install it in the shooting area, and adjust the direction and position so that the lens is aligned with the shooting range.

When there is no operation, the camera will automatically have a delay time (30S/1MIN/3MIN) according to the setting. The red PIR light indicator will still flash, and then the screen will display a 10-second countdown.

After 10 seconds countdown ends, the screen turns black, the red PIR light indicator stops blinking, and the PIR sensor is active. The camera enters the working mode. The camera automatically monitors and captures moving animals or people.

Please note, the delay time and 10s countdown are set to give you enough time to close and lock the front cover of the camera and then walk away. The PIR sensor is strongly sensitive to ambient temperature. The greater the temperature difference between the environment and your subject, the farther the possible sensing distance.

Replay Mode

All photos and videos taken by the WOLFANG trail camera can be viewed directly on the built-in screen, also can be protected, unprotected and deleted directly on the camera.

Reviewing the Files Directly on the Camera

Put the power switch to ON position, press **【Mode】** key twice to enter the Replay mode.

- Press **【UP】** : page forward
- Press **【DOWN】** : page forward
- When check videos in the Replay mode, **【OK】** key is Play/Pause key
- When you want to delete the unwanted file in the Replay mode, press **【Menu】** key and **【OK】** key to delete the current file or delete all files.
- Press **【Mode】** key again to quit the Replay mode.

Connection the Camera to a Computer

When using a PC (or Mac*) to view photos (or video clips*), First, put the power switch to the **【OFF】** position. Then connect to the PC via type C cable. Then you could view images/videos saved on the SD card directly on the PC.

- Video files may require additional software for viewing on Mac.n Mac.

