

## Circulation Fan

KADTCFAN1MA

 
 


# Safety & Warnings

Read all safety notes and instructions before first use even if you are familiar with this product. Retain this user guide for future reference.

- This product is suitable for use by children aged 8 years and above and by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, provided they are supervised or instructed in safe use and understand the hazards involved.
- Children must not play with the product.
- Cleaning and maintenance must not be carried out by children without supervision.
- Keep the product out of reach of children or individuals who are infirm.
- Do not allow use without supervision.
- Do not insert fingers, pencils or any objects through the grille while the fan is operating.
- Always disconnect the fan before moving it to another location.
- Operate the fan only on a stable, flat surface to prevent tipping.
- Do not use the fan in a window or expose it to rain. Indoor use only.
- If the power cord is damaged, it must be replaced by Kogan.com or a qualified technician to avoid hazards. Cease use and contact **help.Kogan.com** for support.
- Do not immerse the product, cord, or plug in water or any liquid.
- Always unplug the product when not in use and before cleaning.
- Once the fan is assembled, do not remove the rotor blade guard.
- Unplug the fan before cleaning.
- Do not disassemble the rotor guard to clean the blades.
- Clean the outer casing and rotor guard with a damp cloth.

# Overview

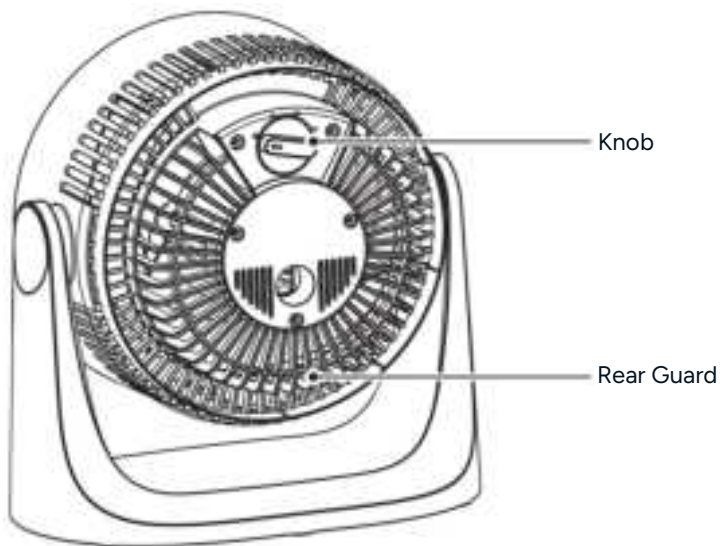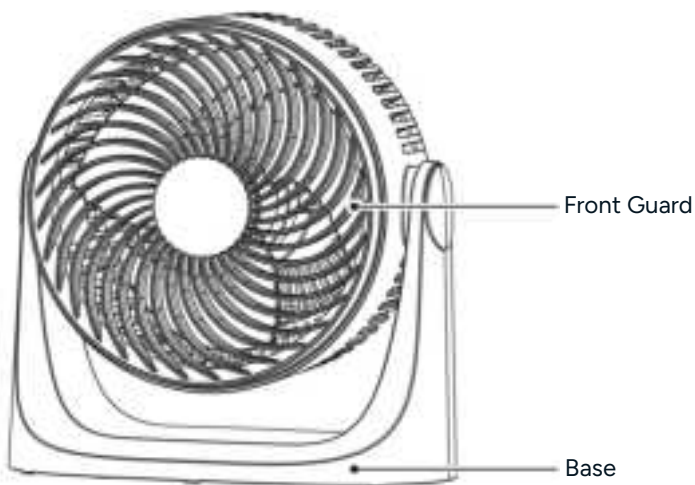

## Note:

Images are for illustrative purposes only. Actual product may differ.

 
# Installation

This circulation fan can be wall mounted. To prevent the fan from falling, it must be installed vertically and securely fixed to a suitable surface.

Do not install the fan on walls less than 10 cm thick or made from weak or easily damaged materials. The mounting location should be at least 10 cm away from adjoining walls and ceilings.

## Concrete & Masonry


1. Drill two holes in the wall, 8.6 cm apart.
2. Insert expandable screws into the holes but do not fully tighten them.
3. Leave a 5 mm gap between the screw head and the wall.

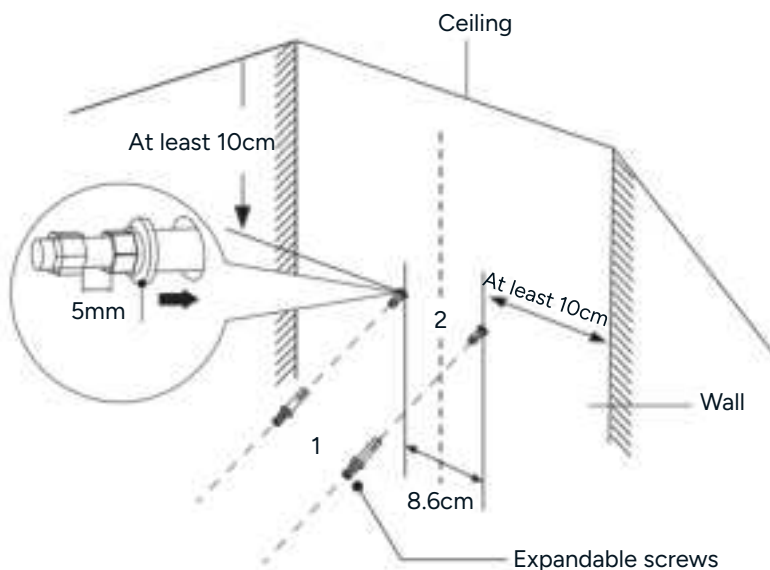

### Note:


Ensure all screws are tightened once the fan is mounted and the spacer is properly installed against the wall.

 4. Once installed, hang the fan in place.

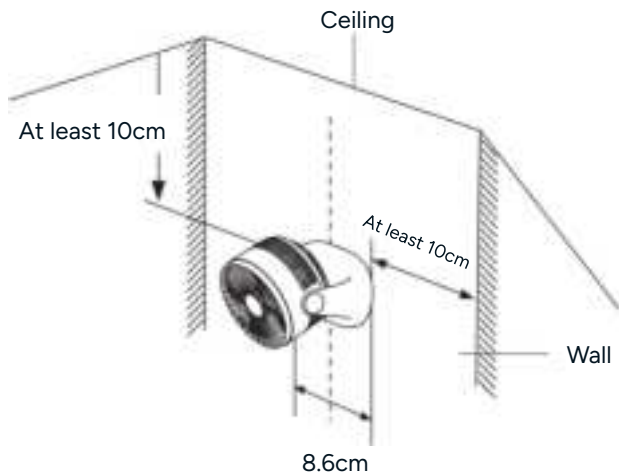


### Timber/Wall Studs

 1. Drill x2 8mm diameter holes in the wall, 8.6 cm apart.
2. Insert cross-tapping screws into the holes and tighten them, again leaving a 5 mm gap between the screw head and the wall.

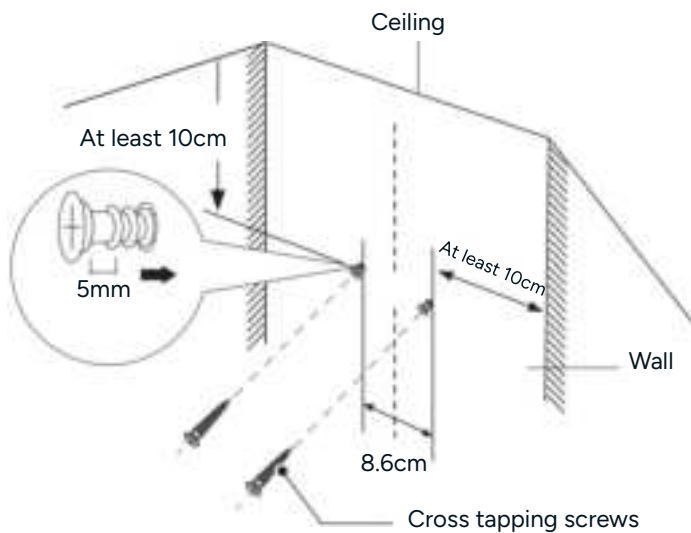


 
3. Hang the fan securely.
4. Ensure all screws are tightened once the fan is mounted and the spacer is properly installed against the wall.

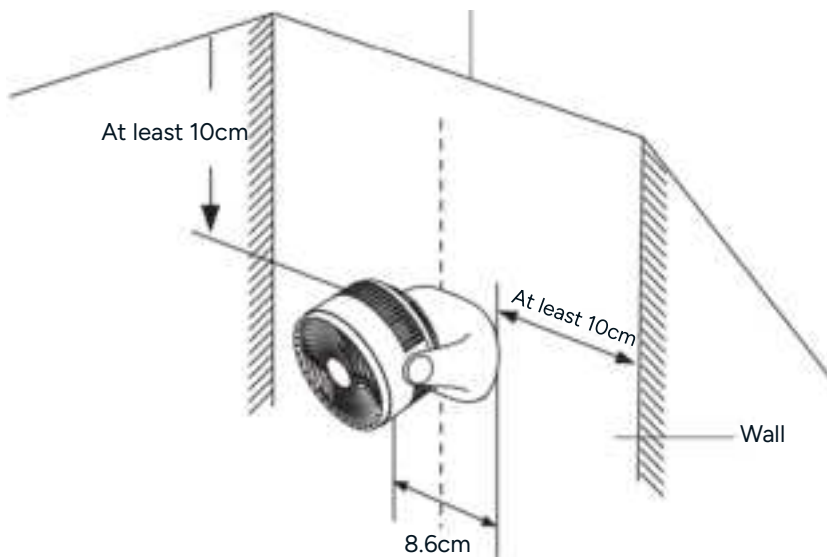

# Operation

Turn the knob on the rear panel to select the desired fan speed:

  0	Power Off
1	Low speed
2	Medium speed
3	High speed

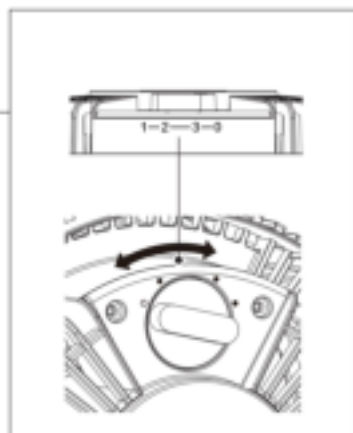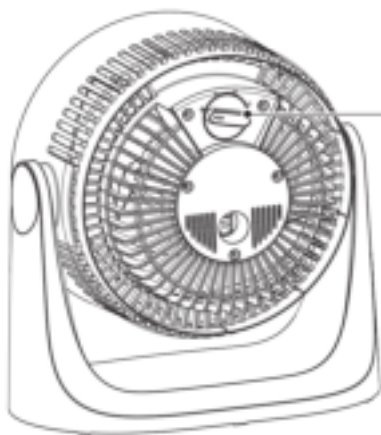



# Cleaning & Care

- Always unplug the product before cleaning or maintenance.
- To ensure proper airflow, keep the vents on the rear panel free from dust. Do not attempt to disassemble the product to remove internal dust.
- Wipe the exterior with a soft cloth dampened with a mild detergent. Avoid abrasive cleaners or solvents such as petrol or paint thinner, as these can damage the surface. Do not allow liquids to enter the motor housing or interior components.
- Plastic parts may be cleaned using a cloth dampened with mild soapy water. Wipe off any soap residue with a dry cloth.

# Specifications

Voltage	220-240V~
Frequency	50Hz
Power	28W

Item	Symbol	Unit	Tested
Maximum fan flow rate	F	m3 /min	12.4
Fan power input	PW	W	22.0
Service value	SV	(m3 /min)/W	0.6
Standby power consumption	P <sub>SB</sub>	W	—
Seasonal electricity consumption	Q	kWh/a	7.0
Fan sound power level	L <sub>WA</sub>	dB(A)	54.1
Maximum air velocity	C	meters/sec	4.2

# Troubleshooting

If the fan does not operate, check the following:

- If the fan does not power on:
  - Ensure the power plug is properly inserted into the socket.
  - Check that the switch on the rear panel is turned on.

If the issue persists, the product may be faulty. **Contact [help.Kogan.com](https://www.kogan.com/help)** for further support.

## Disposal



This marking indicates that this appliance should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

## Notes

[illegible]

### **Need more information?**

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.Kogan.com**.

