



 


 
 





 
 
 
 

 




 
 
 

 


 
 
 

 
 
 
 
 
 
 
 


 

 
 
 
 
















 




| Original | Replacement | Original | Replacement |
|--|---|---|---|
|  Standby / On |  Power |  USB Rec |  Rec |
|  Function |  List |  Display |  Info |
|  Open / Close |  Eject |  Vol+ |  Vol + |
|  Home Media |  Media |  Vol- |  Vol - |
|  Karaoke |  Guide |  Mute |  Mute |
|  Mic Vol+ |  Ch + |  Top Menu |  D. Menu |
|  Mic Vol- |  Ch - |  Menu / PopUp |  Menu |
|  Resolution |  Format |  Up |  Up |
|  Net Contents |  Shift + Media |  Left |  Left |
|  Key Lock |  Pre Ch |  Enter |  Ok |
|  Dimmer |  Shift + Mute |  Right |  Right |
|  Sleep |  Sleep |  Down |  Down |
|  Exit |  Exit |  Home Menu |  Smart |
|  Virtual 3D Sound |  3D |  Return |  Back |
|  Sound |  Dual |  Tools |  Options |
|  Sound Retriever |  Shift + Dual |  Continued |  Shift + Play |
|  CD/SACD |  AV |  Skip Search |  Shift + Right |





| Original | Replacement |
|--|--|
|  REV |  << |
|  Play |  Play |
|  FWD |  >> |
|  I<< / <II / <I |  I<< |
|  Pause |  Pause |
|  Stop |  Stop |
|  >>I / I> / II> |  >>I |
|  Audio |  TV/R |
|  Subtitle |  Subt |
|  Angle |  Shift + Format |
|  Repeat |  Text |
|  A-B |  Shift + Text |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |

| Original | Replacement |
|--|--|
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Clear |  Shift + Exit |
|  Program / Red |  Red |
|  Program / Red |  Shift + Sleep |
|  RDS / Bookmark / Green |  Green |
|  PTY / Zoom / |  Yellow |
|  PTY / Zoom / |  Shift + Eject |
|  Index / Blue |  Blue |
| | |
| | |
| | |
| | |

