 


Read all instructions BEFORE assembly and USE
of product.
KEEP INSTRUCTIONS FOR FUTURE USE.



Imported by:
KG Group
49-51 Sunmore Close,
Heatherton Vic 3202, Australia

Customer Service:
KG Group
039-555-9670
support@kgelectronic.com.au

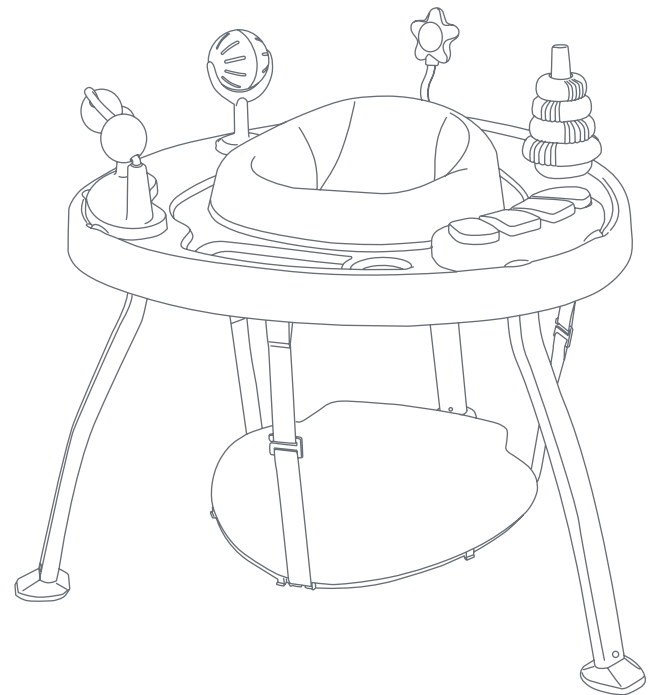

**Bounce N' Play 3-in-1
Activity Center**

AC01XXA

Instruction Manual

Baby Trend, Inc. 13048 Valley Blvd. Fontana CA 92335
1-800-328-7363 (8:00 a.m. ~ 4:30 p.m. PST) www.babytrend.com

STRANGULATION HAZARD

Strings can cause STRANGULATION!

- DO NOT place items with a string around child's neck, such as hood strings or pacifier cords.
- DO NOT suspend strings over product or attach strings to toys. The Stationary Activity Center is: Only for use by infants at least 6 months old and who can hold their head up unassisted.

FALL HAZARD!

Babies can FALL from unit resulting in head injuries.

- Never leave child unattended. Always keep child in view while in product.
- Never use near stairs, stoves or ovens, heaters, fireplaces, swimming pools, or other dangerous areas. To avoid tip over, place product on a flat, level surface.
- NEVER lift this product with your child in it.
- NEVER place product on counter tops, tables, or any other elevated surface.

Discontinue seated use mode if child can climb out or begins to walk, reaches 30 pounds in weight or 32 inches in height.

Do not use the stationary activity center if it is damaged or broken.

Discontinue use should any part become damaged. Please contact our customer service KG Group at 039-555-9670 or support@kgelectronic.com.au to order replacement parts or arrange for repairs.

Read all instructions before assembly and use of the stationary activity center.

Keep instructions for future use.

IMPORTANT! To ensure safe operation of your product, please follow these instructions carefully. Please keep these instructions for future reference.

IMPORTANT! Before assembly and each use, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. NEVER use if any parts are missing or broken.

 
IMPORTANT! Adult assembly is required.

Check that you have all the parts for this model
before assembling the Activity Center.




BABY TREND CUSTOMER SERVICE

The Customer Service Department can be contacted KG Group at 039-555-9670 or support@kgelectronic.com.au. Return Authorizations are required prior to returning product(s) to Baby Trend. Warranty only valid in North America.

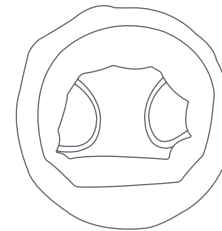


Seat and cover

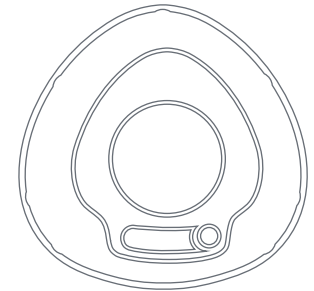 

Tabletop



 3 Table Legs

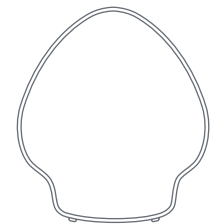


Platform / Cover




Spinning Ball



 Bendable Rattle



Toy Rings

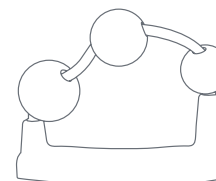 

Toy bar



Light and Sound Board

SWIVEL SEAT MODE

- 1 • Insert each leg into the underside of the tabletop (Fig. 1a).
NOTE: Ensure that the pin clicks into position.
- Align the seat to the center opening and press it down firmly. The seat must completely click into to the tabletop (Fig. 1b).
NOTE: Rotate the seat to ensure the swivel function is active.
- To attach and dettach the seat cover, see step 7.

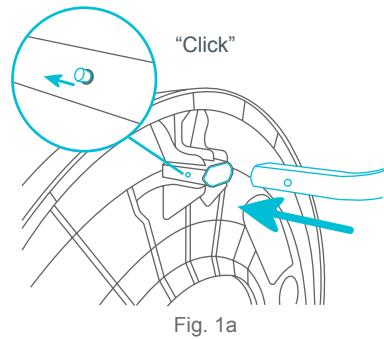 


Fig. 1a

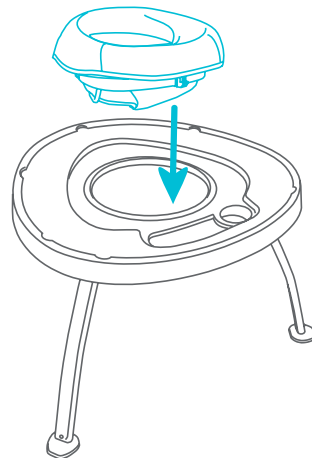 


Fig. 1b

SEAT REMOVAL

- 2 • To remove the seat, use the edge of the seat to lift it off the tabletop (Fig. 2).

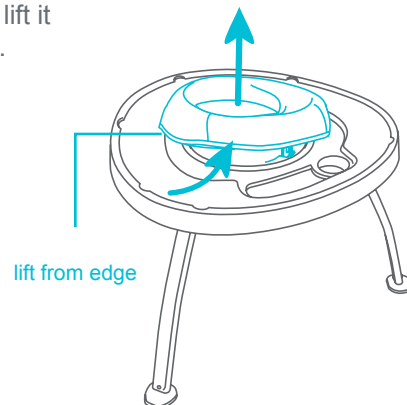 


Fig. 2

ADJUSTABLE PLATFORM SET UP

- 3 • Underneath the tabletop pinch and pull out the 3 small straps (Fig. 3a). Underneath the platform unhook the 3 adjustment plates, pinch and pull out the 3 large straps (Fig. 3b).
- With the smooth side up, align the pointed side of the platform to the front of the tabletop. Hook the adjustment plate to small strap using the lowest hoop (Fig. 3c). Repeat for the rear straps.
- To adjust the height, unhook the adjustment plate and put it through the next division of the strap (Fig. 3d).
- **ATTENTION:** Always secure the straps when the platform is not in use. Refer to step 4c and 4d.

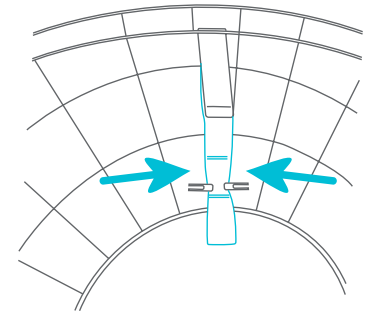 


Fig. 3a

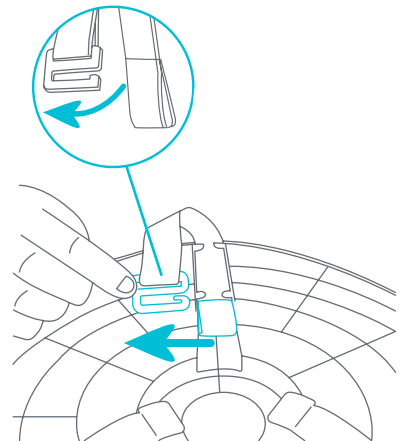 


Fig. 3b

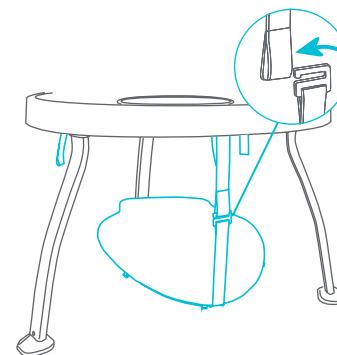 


Fig. 3c


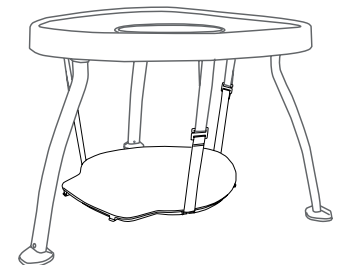 


Fig. 3d



ASSEMBLY

 NOTE: The Platform has 3 adjustable height levels. Always adjust all the straps to the same level (Fig. 3e).

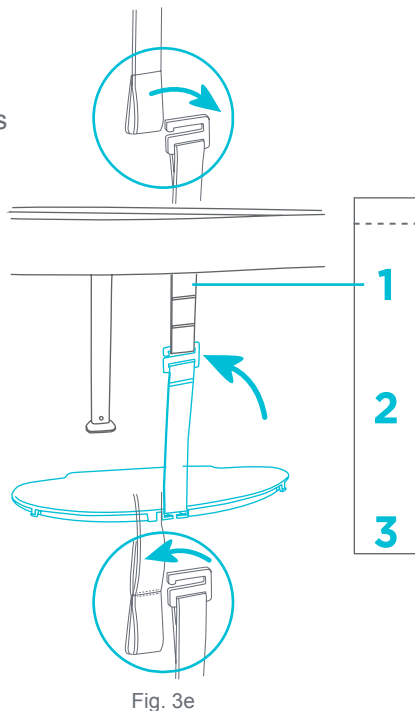



ACTIVITY TABLE MODE

  - 4 • If the platform is attached to the activity center, you must first reverse step 3.
NOTE: Always store away all straps for the tabletop mode as seen below.
- Align the platform to the center opening, push the 2 tabs into the front first and press down firmly (Fig. 4a).
- To remove the platform apply pressure from underneath at the pointed side of the platform while holding down the tabletop (Fig. 4b). The platform should release easily.

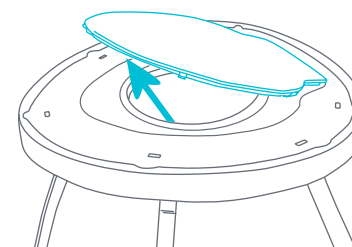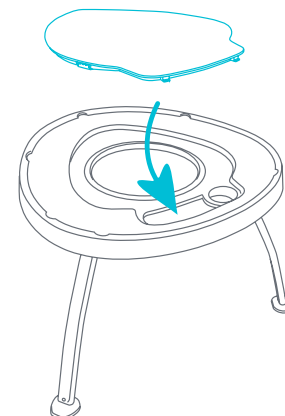



PLATFORM POSITIONS

  - Use level 1 to place the platform in the highest position, level 2 for middle position and level 3 for the lowest position (Fig. 3f).
NOTE: Always use the level that is most suitable for your child's height.
- To remove the platform: unhook the adjustment plate from the small strap (Fig. 3g).
NOTE: See strap storing in step 4.

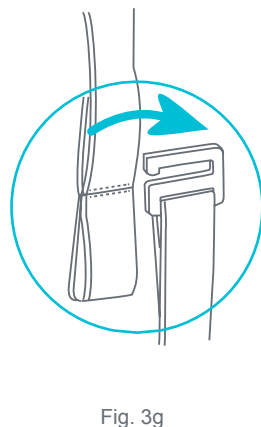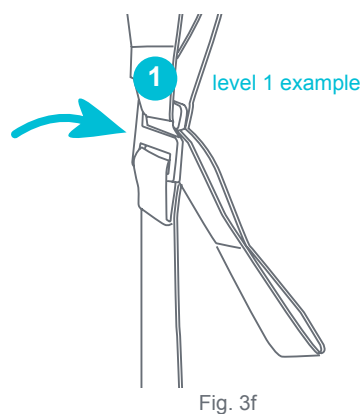

STRAP STORAGE

  - **Tabletop Straps:** Underneath the tabletop, put the strap into the storage slot. Pinch the strap and put the second hoop into the tabs. Repeat for the other 2 straps (Fig. 4c).
- **Platform Straps:** Always secure the straps when the platform is not in use. Be sure to lay each strap back over itself and clip each adjustment plate to the strap. Store the strap by pinching it into the small tabs (Fig. 4d). **DO NOT USE** product with any loose and unsecured straps. Always check product before each use.

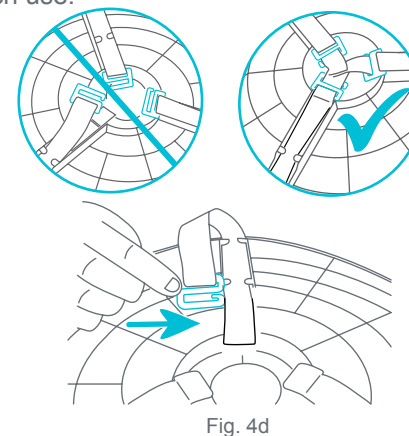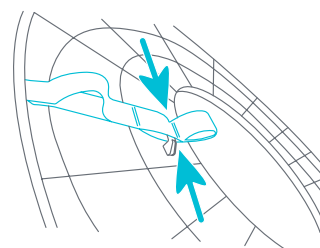

BATTERY INSTRUCTION

- 5 • Reference the diagram below. The light and sound board requires 3 AAA batteries. Reference (Fig. 5) for battery installation. Unscrew the battery door and pull outward. Install batteries as shown. Re-install battery door and push until it clicks into place.

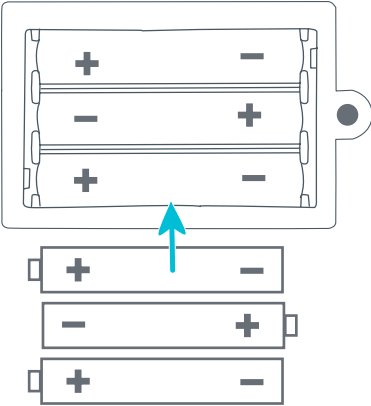 



Fig. 5

⚠ WARNING:

- Requires three AAA (LR03) batteries (not included) for toy operation.
- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and used batteries are not to be mixed. Batteries need to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

BATTERY DOOR

 Light and Sound Board Diagram

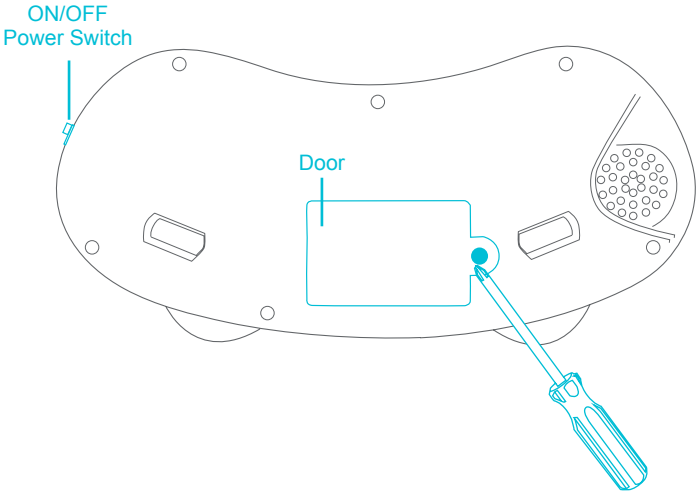

TOY ATTACHMENTS

- 6 • Single lock toys can be used with any of the 3 single tab housings the activity center. Set the toy base in alignment with the tabletop fitting. From underneath the tabletop push the lock up and turn it left to lock (Fig. 6a).
- Double lock toys can be used with any of the 2 paired tabs on the activity center. Set the toy base in alignment with the tabletop grooves. From underneath the tabletop, push the lock up and turn it left to lock (Fig. 6b).

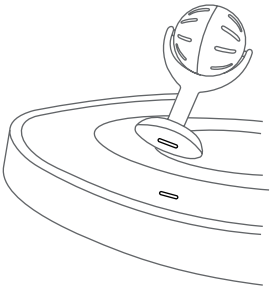 


Fig. 6a


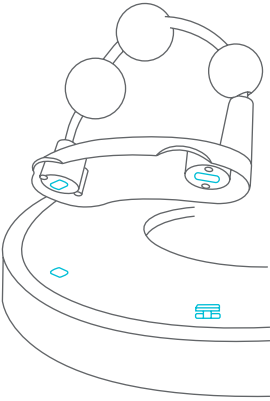 


Fig. 6b

TOY ATTACHMENT

 - Use the diagram below to lock the toys onto the tabletop. (1) Push the tab up and rotate it left to lock. (2) Rotate the tab right to release the toy. (3) Always put the small tab lock back into the tabletop when not in use.

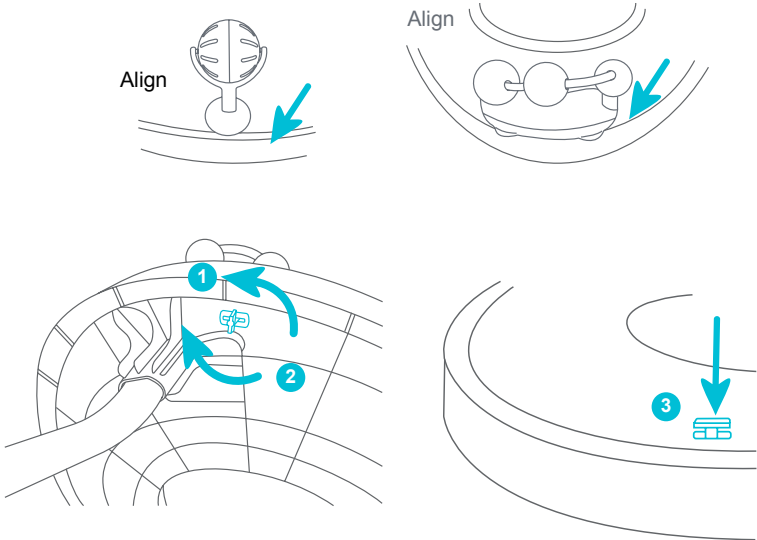

To clean use only mild household soap or detergent and warm water on a sponge or clean cloth.

Do not bleach /Hang to dry/Do not wash/Do not iron/Do not dry clean.

DO NOT MACHINE WASH. For metal and plastic parts, use only lukewarm water and mild soap.

SEAT FABRIC

- 7 • To remove the seat fabric for maintenance, pull out all the plates from the tab on the seat base (Fig. 7a).
- To reattach the fabric, insert the warning label side towards the backrest of the seat base. Fold the fabric over and insert the rear center plate into the tab. Continue to connect all plates around the seat base tabs. All plates and tabs must be secured before use (Fig. 7b).

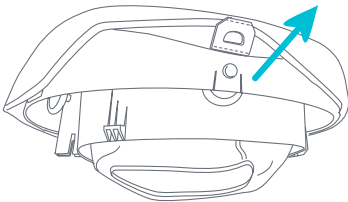 


Fig. 7a

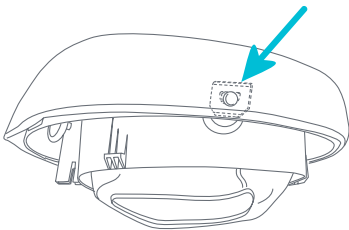 
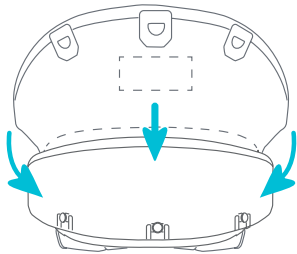 


Fig. 7b

TABLE LEGS

- 7 • To remove the legs from the tabletop, press in the pin and pull the leg out. Repeat for the other 2 legs.

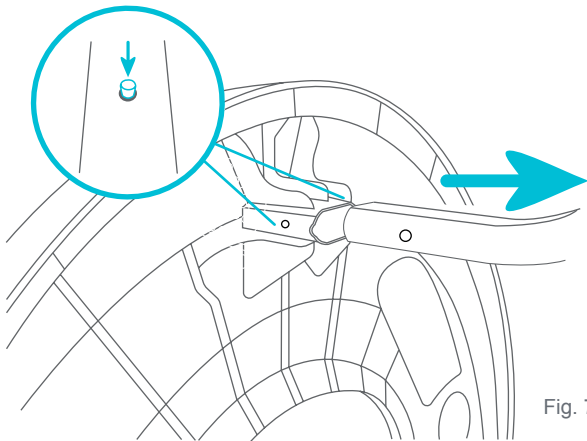 


Fig. 7

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1 this device may not cause harmful interference, and
- 2 this device must accept any interference received, including interference that may cause undesired operation.

⚠ WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTES

NOTES

NOTES

NOTES