


PRODUCT USER GUIDE

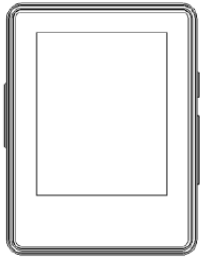

Version: V1.0

In order to ensure the best usage experience, please read this Operating Instruction carefully and keep it in a safe place for future reference.

is idle and shuts down for a set time.

Notes: This function is invalid when the player is connected to the PC or charged.

Battery Low Power

When battery low power occurs, the player will display a tip screen, and then automatically shut down and enter the standby mode. Do not restart at this time, please charge in time. It is recommended to choose the charger with a current specification of 500-1000mA.

PC connection

Connect the computer to charge this machine and operate the data of this machine at the same time. In the startup and shutdown state, use the USB cable provided with this machine to connect the PC and the player, open "My Computer" to see the new "Removable Disk" tip, operating system: Windows XP/Mac OS 10 and above.

Music

Keep a short press of "⏮" and "⏭" to select the music application, and press "⏵" to enter the music playing interface. Select "Music" application in the main interface, and keep a short press of "⏵" to enter music list interface. Music playing supports breakpoint continuation and background playing; **Background play:** Does not support image, recording, radio and video;

It refers to entering the application without conflict with audio while playing songs, and the song plays continuously at the same time. At this time, the music playing would not be stopped. Keep a short press of "⏵" to enter the menu settings, including (all songs, underplaying, artist, album, my favorite, update playlist).

All Songs: Display a list of all songs in memory. Click the song to play.

Underplaying: Display this menu while playing music.

Artist: Display the singer list of all songs in the memory by singer name. For example, select the singer, and the songs in play are the songs in the singer directory.

Precautions

This product is a precision electronic product, which needs special attention during the usage:

1. Please keep the product away from electromagnetic environment, excessive humidity, smoke and other harsh environments;
 2. Please do not separate or modify the product;
 3. Please do not use any corrosive or abrasive cleaner to clean the earphones;
 4. Please do not immerse the device in water;
 5. Please do not use excessive force to squeeze the product;
 6. Please do not put the product in direct sunlight or in a fire environment, and keep the product away from high and low temperature environments;
 7. Please do not shake or impact the product violently;
 8. Please do not turn the volume up too high to protect your hearing (physicians point out that listening at a high volume for a long time will damage the listener's hearing). Please turn down the volume or stop using if tinnitus occurs;
 9. Please ensure that this product is placed safely to avoid accidents and falls caused by children's touch;
 10. This machine body will heat up if its USB is connected with the computer for a long time. It is recommended not to connect with the computer for a long time, and unplug it from the USB interface when not in use;
 11. Do not disassemble this machine without authorization, otherwise you will lose the right of warranty. If you have any questions, please contact the dealer;
 12. Changes due to the performance and function of the product will not be notified. In case of any discrepancy between the Operating Instruction and the material machine, the material machine shall prevail;
 13. Please do not use the product when driving or walking on the street, otherwise it may cause a car accident;
 14. Do not use the product in a particularly hot, cold, dusty, humid or dry environment;
- A. This earphones adopt polymer lithium battery, which is rechargeable. The previous charges must be charged for more than 3 hours, and the service life can be prolonged by


recharging after using up the battery every time;
B. It is recommended to continue charging for half an hour after being fully charged to ensure longer playback time;
C. The lithium battery must be replaced by the customer service personnel, and the user cannot replace it by himself (caution: there is an explosion risk if the battery is not replaced properly, which can only be replaced with batteries of the same type or equivalent); In order to protect the environment, please hand over the waste batteries to professional institutions for recycling;
D. The service life of the battery may vary with the service conditions and production time.

15. Charging: This machine can only be charged through the computer USB interface or with a 5V, 1000mA adapter conforming to the national standards. Whether this machine is powered on or not, you can charge the product as long as you connect the product with the adapter. The product has a certain normal heating up phenomenon during the charging;
16. The actual use of this product may be different from the contents of the Operating Instruction due to the software update, please take the purchased product as the standard, and the Operating Instruction is only for reference;

Product characteristics

1. 1.77-inch TFT display screen, clear and bright.
2. Support the playing of mp3, ape, flac, wav and other mainstream audio formats;
3. Recording pen function, high-quality recording, good helper for learning and recording;
4. Support high resolution image and e-book reading function;
5. Support Bluetooth transmission, perfectly match your Bluetooth device;
9. Support video playing and portable viewing of courses/videos;
10. Support background playing, support music listening while reading;
11. Support radio to make your life more convenient (this type has two versions, with radio receiver and without radio receiver, please note during purchase);
12. TF card expansion, up to 128GB

13. Support sound playing, get rid of the appearance bothered by earphones

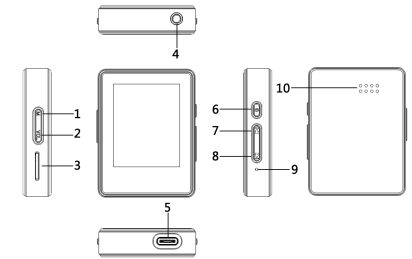

1. M button: Menu button, during playing of music and voice, keep a short press of M, the menu pops up.
2. VOL button: Volume button and return button, keep a short press: return to the previous interface, keep a long press: enter volume adjustment mode.
3. SD card slot: Please insert the SD card in the correct direction.
4. Headphone jack: Standard 3.5mm Earphone interface.
5. USB interface: Charging, data transmission.
6. Power key: play/pause/OK key
7. Previous key: select the previous option or file.
8. Next key: select the next option or file.
6. Reset button: When the machine crashes, insert a toothpick or needle to reset the machine.
10. Built-in speaker:

Operating instructions

Power on/off

Keep a long press of "⏵" for more than 3s to start up, and press again to shut down. Automatically shut down when the system

Human voice testing: This function is voice detection recording. Do not turn off this function when recording important files.

Radio: (The product is divided into two versions: radio and non-radio). Please note during purchasing.

Keep a short press of "⏮" and "⏭" to select "Radio" application. Keep a short press of "⏵" to enter the radio interface.

Keep a short press of M button to enter the menu setting (including radio station frequency band, presetting radio station, automatic radio station searching and empty presetting radio station).

Bluetooth: Keep a short press of "⏵" to turn on and off the Bluetooth.

Equipment name: Displays the current Bluetooth device name. Paired device: Can view the paired devices, or cancel or disconnect the paired devices.

Search Devices: Keep a short press of "⏵", the player will automatically search for connectable Bluetooth devices, and display the device name after searching. Click "device name" to connect the device to be connected.

Notes: The top status bar displays the Bluetooth icon after turning on, the Bluetooth icon in the top status bar flashes after entering "search device". When the connection is successful, the Bluetooth icon turns blue, and when the connection is not successful, the Bluetooth icon turns white. (Note: video and radio do not support Bluetooth function).

Alarm clock: Select alarm clock to enter alarm clock setting, including alarm clock (switch), alarm clock time and alarm

E-book

Keep a short press of "⏮" and "⏭" to select "e-book" application, and keep a short press of "⏵" briefly to enter the e-book text file list interface. Select target text file, keep a short press of "⏵" to open the e-book.

The top of the e-book shows the current and total pages of the file. Page turning: Keep a short press of "⏮" to page down and keep a short press of "⏭" to page up.

Menu setting: Keep a short press of M button to enter (including auto play time setting, background color, page selection and bookmark option).

Auto play time setting: Set 3-30s option setting. (keep a short press of "⏮" on the e-book page to start auto play).

Background color: Including classic black, pure white and cowhide yellow options.

Bookmark option: Can set up to 5 bookmarks.

Notes: E-book specification: Unicode (UTF-8) small-end encoded text;

Image

Keep a short press of "🖼️" and "🔍" to select "Image", keep a short press of "⏮" to enter file list interface, keep a short press of "🔍" and "🖼️" to select file.

After image selection, keep a short press of "⏮" to view the image.

Return to the list: During the viewing of image, keep a short press of VOL button to exit to list interface.

clock cycle settings.

Alarm clock switch: Turn on and off the alarm clock.

Alarm clock time: Set alarm clock reminder time.

Alarm clock cycle: Can set single time, daily and working day-time.

Notes: The shutdown is invalid after setting the alarm clock (after the alarm clock is turned on, the CPU consumes power quickly, so please turn off the alarm clock when you don't use it).

Setting

Select "Setting" application, keep a short press of "⏮" to enter sub-menu settings, the setting menu options,

including: Bluetooth, alarm clock, language, date and time, brightness, information screen settings, idle shutdown, information, storage status, factory settings and update playlist.

Bluetooth: Select Bluetooth and keep a short press to enter

(including Bluetooth, Bluetooth name, paired device and searching device)

Language: Supported languages include: simplified Chinese, English and other six languages.

Date and Time: Including setting time and setting date.

Brightness: The range is 10-100, the default value is 90.

Screen off Setting: (including screen always lighting and screen off time setting).

Screen normal lighting: Turn on and off the screen always lighting.

Screen off time setting: The range is 10-60s, and the default value is 60s.

Idle shutdown: (including idle shutdown, idle shutdown time setting)

Notes: It is invalid after the alarm clock is turned on.

Idle shutdown: Turn on and off the idle shutdown.

Idle shutdown time setting: The range is 1-60min, and the default value is 5min.

Notes: It is invalid after the alarm clock is turned on

Message: Display software information.

Storage condition: Display total capacity and residual capacity.

Factory setting: Select whether to restore factory settings. Select "Yes" to restore the settings to their original values.

Update Playlist: When copying new audio/video, etc., you need to update the playlist, otherwise you may not be able to view or play these files.

Formatting: Clear all files in the disk (please back up important files).

Folder

Display all directories and files on the memory card.

Select a file in the file list and click it, and the system will automatically select the corresponding application to open the file. (if you select a music file, the music playing interface will appear; if you select an e-book, the e-book interface will appear). Refer to the corresponding application operating instructions for the corresponding options.

File Deletion: Select the file to be deleted in the file list. Keep a

short press of M button to pop up whether to delete it, select "Yes" to delete the selected file.

Notes: Only support single file deletion, does not support folder deletion.

Specifications

Product model	Digital player
Appearance and dimension	55.5MM*42.5MM*12.5MM
Software language	simplified Chinese, English and other six languages.
Product weight	About 29g
Display screen	1.77 inches 128*160
Battery	200mAh/3.7v lithium battery
Charging specification	5V/1A input
Charging time	About 2 hours
Bluetooth version	5.0
Total harmonic distortion	<0.4%
Signal-to-noise ratio	75db@1KHz,±3db
TFcard extension:	≤128GB
Operating requirements	-5°C-40°C
Audio format	APE (Fast/Normal compression, 800Kbps-1000Kbps, sampling frequency 8KHz-48KHz), FLAC (1000Kbps-1200Kbps, sampling frequency 8KHz-48KHz), MP3 (8Kbps-320Kbps, sampling frequency 8KHz-48KHz), WMA (5Kbps-384Kbps, sampling frequency 8KHz-48KHz), WAV (32Kbps-1536Kbps, sampling frequency 8KHz-48KHz), AAC-LC (8Kbps-320Kbps, sampling frequency 8KHz-48KHz),
Video format	AVI 128*160 (tool)
Recording format	WAV

Image	Support JPG/JPEG/BMP
E-book format	TXT file
Interface	USB1.1, charging
Analogue output	3.5m analogue Outputs
Loudspeaker	1W*8ohm
Operating temperature	-5°C-40°C

* The audio indicators shown in this table are for reference only. There will be slight deviation in audio parameters due to the small difference of electronic components of the product. Please take the material machine as the standard.

* Files beyond this specification sheet may be unrecognized or cannot be played. Please use the file within the specification range to play. Some files may fail to play due to irregular coding and cannot be recognized.

* Due to the large number of network song format conversion software, some of the converted formats will not fully meet the format standards. So the player cannot fully guarantee the perfect playback of all songs within the specification.

* Bluetooth play tip: When playing through Bluetooth, files compressed as High by ape are not supported. (When playing through Bluetooth, such as playing high-quality music, it may cause the lag phenomenon).

* USB cable tip: Please use the built-in data cable of this machine for charging and data transmission of this product, otherwise it may not work normally.