 



LED PUCK LIGHTS WITH REMOTE CONTROL

ASSEMBLY AND INSTALLATION INSTRUCTIONS
**IMPORTANT, RETAIN FOR FUTURE REFERENCE:
READ CAREFULLY**

PARTS AND SPECIFICATIONS

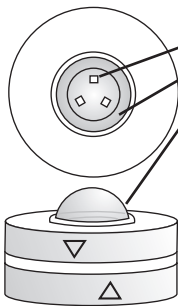

 Each light requires 3 AAA batteries

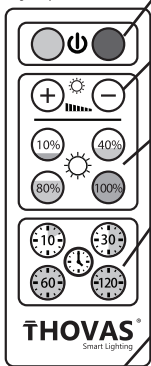

3 LEDs

ACTIVATION DOME - Press lightly on the frosted dome to manually turn the individual puck ON and OFF.

BATTERY - Each puck requires 3 AAA batteries.

MOUNTING - 3M™ adhesive mounting pads are supplied for each puck.

▲ SENSOR AREA - Install the side with ▲'s directed outward.

REMOTE CONTROL - Controls all puck lights.

POWER - Controls all pucks.
RED - turns all pucks OFF.
GREEN - turns all pucks ON.

DIMMER* - Controls brightness of all pucks.
Press and hold (+) increases brightness
Press and hold (-) decreases brightness

DIMMER PRESETS* - Turn lights ON first. Select brightness preset (presets of 10%, 40%, 80% and 100% brightness).

TIMER - Controls the amount of time the puck lights stay ON. Turn lights ON first. Select duration. Lights will flash once to confirm command. Timer clears when lights turn OFF. 10, 30, 60 and 120 minutes preset.

BATTERY - Requires CR2025 battery

* Last status memory - All puck lights will return to the prior brightness settings when turned ON.

INDOOR, DRY USE ONLY

Battery Installation

REMOTE CONTROL - CR2025 battery pre-installed.

This product contains a button battery. If swallowed, it could cause severe injury or death in just 2 hours. Seek medical attention immediately. (On First Use Remove Battery Compartment Protective Plastic)

PUCK LIGHTS - 3 AAA batteries each

- Remove the battery cover by rotating to "Open" position as indicated.
- Place 3 AAA batteries into the battery compartment aligning polarity (+) (-) as indicated.
- Return battery cover by turning to the "Close" position.

Battery compartment



Battery Replacement

REMOTE CONTROL - CR2025 battery required.

- Loosen battery compartment retaining screw.
- Slide battery drawer out.
- Remove battery.
- Place new battery in position aligning polarity (+) (-) as indicated.
- Slide battery drawer in.
- Tighten battery compartment retaining screw.

PUCK LIGHTS - 3 AAA batteries each

- Open by rotating ▲'s until aligned.
- Remove ALL batteries
- Place 3 new AAA into battery compartment aligning polarity (+) (-) as indicated.
- Close by rotating ▲'s until out of alignment.

 
CAUTIONS: BATTERY INSTRUCTIONS

- Always purchase the correct size and grade of battery most suitable for the intended use.
 - Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
 - Clean the battery contacts and also those of the device prior to battery installation.
 - Ensure the batteries are installed correctly with regard to polarity (+ and -).
 - Remove batteries from equipment which is not to be used for an extended period of time.
 - Remove used batteries promptly.
- For recycling and disposal of batteries to protect the environment, please check the internet or your local phone directory for local recycling centers and / or follow local government regulations.



Retaining screw

unlocked



locked

Operating Instructions

 
PUCK LIGHTS - Manual Operation - Once batteries are installed turn ON each puck by lightly pressing the Activation Dome. Repeat pressing the Activation Dome to manually turn the unit OFF. Light brightness will default to previous settings.

PUCK LIGHTS - Remote Control Operation

The remote control unit will operate Pucks within a 7 m / 21 ft range. Once batteries are installed turn all puck lights ON by pointing the remote control towards the sensor. Use the DIMMER, DIMMER PRESET and TIMER functions by pointing the remote control towards the sensor and selecting the desired function.



ON/OFF



Directed at sensor 7 m / 21 ft

One Year Limited Warranty

www.thovas.net, warrants to the original retail purchaser, this product to be free of defects in material and workmanship for a period of up to one year from date of original purchase.

Warranty applies only to the original purchaser of the product.

Warranty is limited to consumer use and does not cover parts damaged due to normal wear, abnormal conditions, misuse, or accidents, and is limited to repair or replacement only.

This limited warranty does not cover bulbs or batteries, or any part that may become defective due to mishandling.

Warranty is effective only upon presentation of dated proof of purchase. Customers are responsible for all postage costs on returned merchandise.

No shipping or handling charges will be reimbursed.

AUSTRALIA:

AUSTRALIA: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Limitations on Warranty Disclaimers

There are no warranties which extend beyond the description on the face hereof. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

THOVAS®

For assistance with assembly or installation, parts and customer service, please do not return to retailer - contact THOVAS CUSTOMER SERVICE at:

mail: info@thovas.net

website: www.thovas.net



Protecting the Environment - Recycle It

Responsibly recycling these products saves natural resources and protects human health through reuse of reclaimed resources. Please call your local waste management company for vendors in your immediate area.

ADDING PUCK LIGHTS TO A SET

Up to 48 pucks may be controlled by one remote control. No programming is needed. Any similar puck lights will be controlled when placed within the range of the remote control's signal.

Mounting Instructions

PUCK LIGHTS - Adhesive Mounting Pads Included* Remove the protective paper on one side of the Mounting Pad and apply to the battery cover (use caution as the adhesive is very strong). Position the puck in the desired location. Remove the second protective paper and apply pressure to set the adhesive. Once applied the puck light is permanently mounted.

* This is permanent tape that may cause damage if removed. Not recommended for use on wallpaper or delicate surfaces.

WARNING

1. This product is not a toy and contains small parts. Close supervision is necessary when this unit is used near children.
2. To reduce the risk of electrical shock, do not put the unit in water or other liquid. For cleaning, use a soft dry cloth. Do not place or store appliance where it can fall or be pulled into a tub or sink.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1) This device may not cause harmful interference.

2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Industry Canada Statement

This Class B digital apparatus complies with Canadian ICES-005.

