



Read instructions or watch easy-to-follow video. Scan QR code or visit <https://goo.gl/BPC688>.

Questions? Contact us at 1-800-654-8483 between 7:00AM—8:00PM CST.

Best Practices for Installation

- Install power supply/receiver a minimum of 18" above the ground to ensure optimal range on remote control.
- Note that placing power supply/receiver directly on ground can severely diminish the remote control range.
- Do not mount power supply/receiver behind large objects such as posts, walls, large boulders or other items which may interfere with the signal from the remote control. Also, avoid mounting the power supply/receiver on or near metal walls or other large metal objects. Doing so can reduce the remote control's operation distance.

- Do not pull cords tight as it may damage electrical connections. Leave a small amount of slack on cords to remove strain on connections.
- Longest remote control operating distances are obtained when the power supply/receiver is in line of sight of the remote control. Operating the remote control inside of houses and other buildings will reduce the remote control's operation distance.

Congratulations on your recent purchase of Enbrighten Mini Landscape Lights. Enbrighten Mini Landscape Lights are designed to provide lighting for life.

IMPORTANT: Before installation, please read all the warning statements included at the bottom of these instructions.

To ensure proper installation, please follow each step below.

Initial Setup

1. Carefully unplug Enbrighten Mini Landscape Lights from box. Remove and dispose of the wire ties and plastic bag (see warning on bottom).
2. Locate remote control and install 2 AAA batteries (included).
3. When installing landscape lights outside, a ground-fault circuit interrupter (GFCI) receptacle must be used. Before installing, plug the landscape lights into the GFCI receptacle to ensure all lights work properly.

IMPORTANT: Unplug the landscape lights prior to installation.

Installing Landscape Lights



Each landscape light is designed for mounting with the included stakes (one per light) or for use on a flat surface (see below instructions).

Ground Installation

1. Carefully plan your installation by laying out the landscape lighting system.

Start with the GFCI receptacle and mounting of controller. Placement for the first light can be up to 20' away from the controller. Each subsequent light can be placed up to 2' from the previous light.

2. Mount the controller within an appropriate distance for the polarized plug to reach the receptacle. The controller can be mounted using the keyholes on the rear of the controller or the keyhole ear tabs (see figure A). **For optimal remote range, be sure to mount at least 18" off the ground. Do not lay the controller directly on the ground or where standing water may accumulate (see figure B). Laying controller on the ground will significantly reduce remote range.**

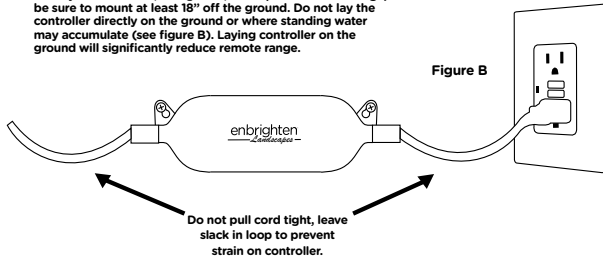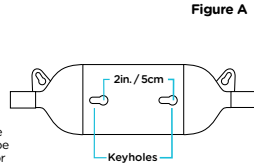

Ground Mounting

- a) Place light directly on ground or garden bedding.
- b) Using provided mount stake. You have been provided 1 stake per puck. The stake can be inserted into the bottom keyhole – make sure the arrow points toward the center of the light and slide toward the center to lock into place. The stake can then be inserted into the soil or mulch at the desired angle. The stake has been designed to be durable in outdoor applications. However, if the stake requires more than a firm push to be inserted into the ground, loosen soil or remove obstacles, such as rocks, to ensure the stake is not damaged.

Cord Management

Your Enbrighten Mini Landscape Lights feature burial-grade cable. This allows you to conceal excess cable by directly burying it in the soil or covering it with garden bedding.

Flat-Surface Mounting

Lay out the landscape system in the manner in which you plan to mount it. Only mount lights to a solid support structure, such as joist, beams, studs or other sturdy mounting surfaces. Use one #6 pan head screw (not included) of an appropriate length for the mounting surface to properly install the lights.

Using the Remote

To power on your lights, press the red ON/OFF button located at the top of the remote. Your Enbrighten Mini Landscape Lights come paired with your remote.

NOTE: Keep remote indoors when not being used. Remote is not waterproof.

Now that your lights are installed and powered on, take time to explore the following settings that are programmable via your remote.

Single-Color Selection Feature

Find your favorite color on the remote's color pad and simply push that button to set all of the lights the same color.

NOTE: Within this feature, you can also press the dimming button to adjust from 10 light levels. The dimming option is only available for single- and dual-color selection.

Dual-Color Selection Feature

- 1) Press Color 1, then select a color from the color pad to set the color of every other light starting with the first light.
- 2) Press Color 2, then select a color from the color pad to set the color of every other light starting with the second light.
- 3) During the selection feature, press the dimming button to choose one of 10 light levels.

Tunable White Color Selection Feature

By pressing the white button, cycle through white selections – 2200K, 2700K and 5000K.

Strobe Selection Feature

By pressing the strobe button, the lights will strobe through all of the colors in a random pattern.

Fade Selection Feature

By pressing the fade button, the lights will fade in and out through all of the colors in a random pattern.

Modes Selection Feature

Press the modes button repeatedly to cycle through the following preset modes:

- Twinkle • Multi-Fade • Christmas • St. Patrick's Day
- Red, White and Blue • Fall • Spring • Multi-Colors

NOTE: Your landscape lights will automatically remember the last customized settings and turn back on in the same mode and color scheme.

Timer Selection Feature

By pressing the 2-hour timer button, you will activate a two-hour countdown until lights turn off. By pressing the 4-hour timer button, you will activate a four-hour countdown until lights turn off.

Pair Your Remote with Additional Lights

Your Enbrighten Mini Landscape Lights come with a remote that can be paired to additional sets of landscape lights. Additionally, your remote can be paired with Enbrighten Seasons Café Lights to allow totally customizable Enbrighten lighting.

To pair an Enbrighten pairable remote with landscape lights or pairable Enbrighten Seasons Café lights, follow the below instructions:

- 1) Plug in (or supply power) to the lights, and within 8 seconds press and hold the ON/OFF button. The lights will turn white, blink once and remain white. Your remote and lights are now paired.
 - a) Please note, you can pair a remote with as many Enbrighten Seasons Lights as you desire
 - b) Multiple strings can be paired at one time with one remote, by supplying power to multiple strings at once, then pressing and holding the ON/OFF button within 8 seconds of power on, per the above instructions.
- 2) Lights can be paired with up to 8 remotes. If you wish to remove a remote control from memory of a light (unpair) follow the below instructions:
 - a) Plug in (or supply power) to the lights, and within 8 seconds, press and hold the yellow button (in bottom left corner). The lights will turn white, blink twice and remain white. Your remote and lights are now unpaired.
 - b) Multiple lights can be unpaired at one time from one remote by supplying power to multiple lights at once, then pressing and holding the yellow button within 8 seconds of powering on.

Electrical Ratings
Input: 120V, 50/60Hz

Model No.	Input watt, Max.	Location Use
ENB / 2 / 32 / 6 / 18 / 2	5W	WET
ENB / 2 / 44 / 12 / 18 / 2	10W	
ENB / 2 / 68 / 24 / 18 / 2	20W	
ENB / 2 / 92 / 36 / 18 / 2	30W	

Important — please read:

Refer to the manual or visit www.byjasco.com for limitations and restrictions on warranties and the product registration information.

WARNING: When using outdoor or portable luminaires, basic safety precautions should always be followed to reduce the risk of fire, electrical shock, and personal injury, including the following:

Ground-fault circuit interrupter (GFCI) protection is to be provided on the circuit(s) or outlet(s) to be used for the wet-location portable luminaire. Receptacles are available having built-in GFCI protection and are able to be used for this measure of safety.

WARNING: Keep these bags away from babies and children. Do not use in cribs, beds, carriages or playpens. The thin film may cling to nose and mouth and prevent breathing.

WARRANTY INFORMATION: This Jasco product is warranted for three (3) years with a limited-lifetime replacement warranty on Enbrighten LED light source only.

MADE IN CHINA
Distributed by: Jasco Products Company LLC,
10 E. Memorial Rd., Oklahoma City, OK 73104.
This Jasco product comes with a 3-year limited warranty.
Visit www.byjasco.com for warranty details.
Questions? Contact us at 1-800-654-8483 between 7:00AM—8:00PM CST.
Patents pending | www.enbrighten.com



41366 41367 41369 41657
Version 1
07/31/2018

⚠ WARNING

RISK OF ELECTRIC SHOCK

- OUTLETS USED FOR POWERING LANDSCAPE LIGHTS SHALL COMPLY WITH ALL NATIONAL AND LOCAL ELECTRICAL CODES. CONSULT LOCAL ELECTRICIAN IF UNSURE OF COMPLIANCE REQUIREMENTS.
- FOR USE ONLY ON GFCI-PROTECTED CIRCUITS.
- DO NOT SUBMERSE.
- DO NOT USE AROUND SWIMMING POOLS, AQUARIUMS.
- LANDSCAPE LIGHTS ARE A WET-LOCATION PRODUCT AND HAVE NO SERVICEABLE PARTS.
- DO NOT USE WITH EXTENSION CORD NEAR WATER OR WHERE WATER MAY ACCUMULATE.
- KEEP LAMPS AT LEAST 16 FEET FROM POOLS AND SPAS.
- KEEP PLUGS AND RECEPTACLES DRY.
- AVOID DAMAGE TO THE CORDS AND LAMP ASSEMBLIES DURING INSTALLATION. PERIODICALLY INSPECT THE LANDSCAPE LIGHTS FOR PHYSICAL DAMAGE OR OTHER DAMAGE CAUSED BY OUTDOOR EXPOSURE TO THE ELEMENTS.

RISK OF FIRE

- LANDSCAPE LIGHTS ARE DESIGNED TO BE MOUNTED WITH THEIR INDIVIDUAL KEYHOLE MOUNTING FEATURE. DO NOT MOUNT LANDSCAPE LIGHTS BY USING THE MAIN ELECTRICAL CORD OR THE INDIVIDUAL DROP CORDS.
- NOT INTENDED FOR INSTALLATION IN CEILING, SOFFITS, CABINETS, ATTICS OR OTHER ENCLOSED SPACES.

REPLACE ANY DAMAGED LANDSCAPE LIGHTS.

- DO NOT INSTALL IN LOCATIONS WHERE LANDSCAPE LIGHTS CAN BE STEPPED ON.
- ENSURE LANDSCAPE LIGHTS ARE UNPLUGGED FROM POWER DURING INSTALLATION.
- CHILDREN SHOULD NOT BE ALLOWED TO PLAY WITH LANDSCAPE LIGHTS.
- ILL RECOMMENDS TESTING GFCI CIRCUITS AND RECEPTACLES EVERY MONTH TO ENSURE PROPER OPERATION.



Read instructions or watch easy-to-follow video. Scan QR code or visit <https://go.gl/BPC868>.

Simplify your enbrighten[®] experience by automating on and off light times

We recommend the following models, available at select retailers or at www.enbrightenme.com

myTouchSmart Outdoor/Indoor Plug-in Timer
Model #26898



Heavy duty and weather resistant with two grounded outlets. Fully customizable time settings.

myTouchSmart In-Wall Digital Timer
Model #41431



Easy-to-program custom settings, presets and countdown options. On/off switch opens to reveal program buttons.

myTouchSmart SunSmart™ In-Wall Digital Timer
Model #33861



Easy-to-program custom settings, presets and countdown options. Self-adjusts to sunset/sunrise times throughout the year. On/off switch opens to reveal program buttons.

myTouchSmart Outdoor/Indoor Wi-Fi Smart Plug
Model #39845



Schedule and control outdoor or indoor lighting from any mobile or voice-controlled device.



For additional stakes and accessories, visit www.enbrightenme.com or call 1-800-654-8483

enbrighten[®] café

Multiple lengths and styles available now at www.enbrightenme.com



WARM WHITE LIGHT 2700K | LINKABLE UP TO 750ft.

WARM VINTAGE LIGHT 2200K | LINKABLE UP TO 750ft.

WARM VINTAGE LIGHT 2200K | ANY 2 COLOR COMBINATIONS | LINKABLE UP TO 750ft. | PRESET COLOR & EFFECT MODES | DIMMABLE | 2 OR 4 HOUR TIMERS

Black cord:	White cord:
31660 12' / 6 Bulbs	35604 12' / 6 Bulbs
33307 18' / 9 Bulbs	36803 24' / 12 Bulbs
31662 24' / 12 Bulbs	35608 48' / 24 Bulbs
31663 36' / 18 Bulbs	
31664 48' / 24 Bulbs	

Black cord:	White cord:
35626 12' / 6 Bulbs	35643 12' / 6 Bulbs
35629 24' / 12 Bulbs	35646 24' / 12 Bulbs
35631 48' / 24 Bulbs	35648 48' / 24 Bulbs

Black cord:	White cord:
37791 24' / 12 Bulbs	39511 24' / 12 Bulbs
37790 48' / 24 Bulbs	39092 48' / 24 Bulbs



Read instructions or watch easy-to-follow video. Scan QR code or visit <https://goo.gl/BPCB68>.

Simplifique la experiencia con las bombillas enbrighten® automatizando el momento en que quiere que se enciendan y apaguen.

Recomendamos los siguientes modelos, disponibles en establecimientos comerciales seleccionados o en www.enbrightenme.com.

myTouchSmart
Temporizador enchufable para interiores y exteriores
Modelo n.º 26898



Reforzado y hermético con dos tomacorrientes conectados a tierra. Ajustes del temporizador totalmente personalizables.

myTouchSmart
Temporizador digital de pared
Modelo n.º 41431



Ajustes, preconfiguraciones y cuenta regresiva personalizados y de fácil programación. Los interruptores de encendido y apagado se pueden abrir para acceder a los botones del programa.

myTouchSmart Sunsmart™
Temporizador digital de pared
Modelo n.º 33861



Ajustes, preconfiguraciones y cuenta regresiva personalizados y de fácil programación. Se autorregula para ajustarse a la hora de salida y puesta del sol a lo largo del año. Los interruptores de encendido y apagado se pueden abrir para acceder a los botones del programa.

myTouchSmart
Enchufe inteligente con Wi-Fi para interiores y exteriores
Modelo n.º 39845



Programa y controle la iluminación de los exteriores desde cualquier dispositivo móvil o de control por voz.



Para obtener más estacas y accesorios, ingrese a www.enbrightenme.com o llame al 1-800-654-8483.

enbrighten *café*

En www.enbrightenme.com encontrará varias longitudes y estilos.



LUZ BLANCA CÁLIDA 2700K | LINKABLE UP TO 750ft.

LUZ CÁLIDA VINTAGE 2200K | LINKABLE UP TO 750ft.

LUZ CÁLIDA VINTAGE 2200K | COMBINACIONES DE DOS COLORES | CONECTABLE HASTA 230m 750ft. | TEMPORIZADORES DE 2 O 4 HORAS | ATENUABLE

Cable negro:		Cable blanco:	
31660	3,7 m (12 ft) / 6 bombillas	35604	3,7 m (12 ft) / 6 bombillas
33307	5,5 m (18 ft) / 9 bombillas	36803	7,3 m (24 ft) / 12 bombillas
31662	7,3 m (24 ft) / 12 bombillas	35608	14,6 m (48 ft) / 24 bombillas
31663	11 m (36 ft) / 18 bombillas		
31664	14,6 m (48 ft) / 24 bombillas		

Cable negro:		Cable blanco:	
35626	3,7 m (12 ft) / 6 bombillas	35643	3,7 m (12 ft) / 6 bombillas
35629	7,3 m (24 ft) / 12 bombillas	35646	7,3 m (24 ft) / 12 bombillas
35631	14,6 m (48 ft) / 24 bombillas	35648	14,6 m (48 ft) / 24 bombillas

Cable negro:		Cable blanco:	
37791	7,3 m (24 ft) / 12 bombillas	39511	7,3 m (24 ft) / 12 bombillas
37790	14,6 m (48 ft) / 24 bombillas	39092	14,6 m (48 ft) / 24 bombillas