



RECHARGEABLE ANTI BARK AND DOG TRAINING COLLAR

(ONE REMOTE + ONE RECEIVER COLLAR)

PPANTIBDTCA

Safety & Warnings	3
Component List	5
Overview	5
Operation	7
FAQ	15
Specifications	17
Notes	18

SAFETY & WARNINGS

- Before using, carefully read and understand all instructions. Failure to do so may result in improper use and potential harm to your pet. Retain this user guide for future reference.
- The waterproof feature protects the receiver from getting wet. However, the receiver cannot be submerged in water for a long period of time.
- Ensure the charging port is completely covered when using the receiver in wet environments.
- Misusing the dog training collar may injure your pet. Read all instructions carefully before using it and contact **help.Kogan.com** if you have any questions.
- DO NOT use on puppies younger than 6 months. This product is recommended for use with medium/large dogs.
- Training collars should be used to help fix behavioural issues, NEVER for punishing/abusing animals.
- Ensure that the collar fits your dog properly. A snug fit is essential for effective and safe operation.
- Avoid leaving the collar on your dog for extended periods. Continuous wear may lead to skin irritation or discomfort. Use the collar as directed and remove it when not in use for training purposes.
- Regularly inspect the collar and its components for any signs of wear or damage. Replace worn or damaged parts immediately to prevent malfunction or injury to your pet.
- When using the training feature of the collar, start with the lowest intensity level and gradually increase as needed. Avoid using high-intensity settings unnecessarily, as they may cause distress to your dog.
- Pay close attention to your dog's behaviour when using the anti-bark and training collar. Discontinue use if you notice any signs of stress, fear, or discomfort in your pet.
- Supplement the use of the collar with positive reinforcement techniques such as treats, praise, and affection. This helps to create a positive association with training and encourages desired behaviour.
- If you are unsure about using the anti-bark and training collar or if your dog exhibits any behavioural issues, consult with a qualified dog trainer or veterinarian for guidance.
- This collar is intended for training and behavioural correction purposes only. Avoid using it for any other purpose or on any other animal besides dogs.

- Use the anti-bark and training collar responsibly and ethically. Never use it to inflict unnecessary pain or distress on your pet. Always prioritise your dog's well-being and welfare.
- Ensure compliance with local laws and regulations regarding the use of training devices on animals. Use the collar in accordance with applicable laws and guidelines.
- Keep the collar and its components out of reach of children. The collar contains small parts that may pose a choking hazard if swallowed.
- In the event of an emergency or if your dog experiences any adverse reactions while using the collar, remove it immediately and seek veterinary assistance if necessary.

COMPONENT LIST

- Remote Transmitter (x1)
- Receiver (x1)
- Nylon Collar Strap (x1)
- Wrist Strap (x1)
- USB Charging Cable (x1)


OVERVIEW

Receiver



1	Power button: Press to turn receiver on and off. Contact signal to the remote transmitter.
2	Indicator: Flashes while charging. Solid when fully charged.
3	Charing port: Connect to charging cable to charge receiver.

Remote Transmitter

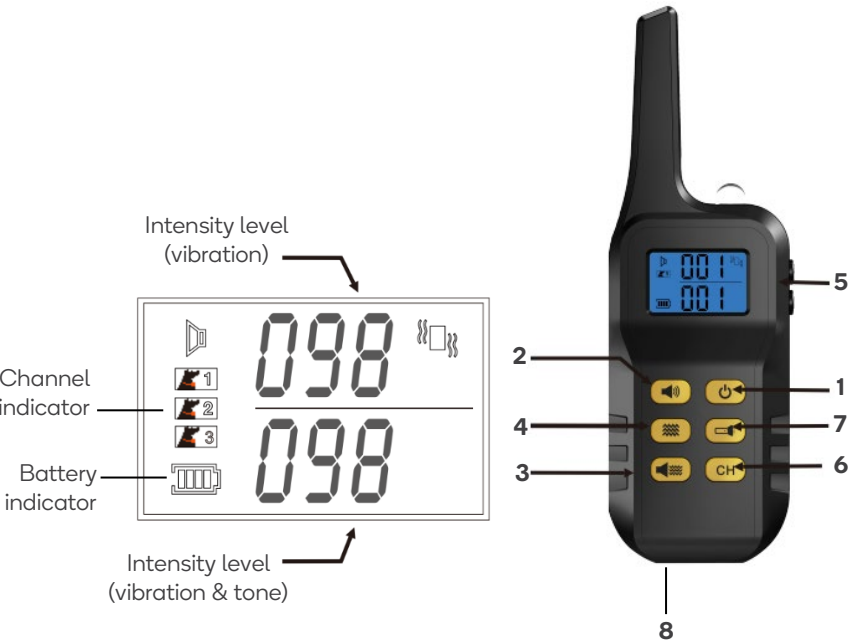

1	Power button: <ul style="list-style-type: none">• Turn the transmitter on/off.• Press and hold for 3 seconds during operation to turn anti bark mode on/off.	
2	Training buttons	Tone button: Press the tone button and the receiver beeps once. Tone level is not adjustable.
3		Tone & Vibration button: Press the button, the receiver beeps once and emits a vibration at same time.
4		Vibration button: Press the vibration button and the receiver emits a vibration once.
5	The +/- buttons: Adjust the intensity of vibration from 1-100	
6	Channel button: Press to select between receiver 1, 2 & 3 (sold separately)	
7	LED light button: Press to turn the LED light on/off.	
8	Charing port: Connect to charging cable to charge transmitter.	

OPERATION

Reinforce Learning Behaviours

If your dog understands command but responds slowly or inconsistently, the training collar can help reinforce learning behaviours.

For example, if you've trained your dog's recall, but over time the response time becomes slower. You can use the training collar to reinforce your commands.

1. Set the receiver collar to initial stimulation level and test it.
2. Fit the receiver collar on your dog's neck along with their regular collar.
3. Let your dog walk around the training area. Give the command and simultaneously press one of the three training buttons.
4. As soon as your dog moves toward you, release the training button and reward your dog's behaviour with praise.
5. If your dog stops before they reach you or turns away repeat the command and continue the vibration/beep. Again, stop immediately as your dog runs to you and reward them by praising him or feeding them a treat. Repeat this for 3 or 4 times.

Tips:

1. If your dog doesn't respond after the first few times, do not give up and do not increase the stimulation. Instead continue the training a couple of times per day.
2. During the training period never give commands if you are not able to enforce it with the training collar. Your dog must make the mental connection between the vibration/ beep to his behaviour (this may take a week or more depending on your dog).
3. Train up to 3 dogs with one remote transmitter (additional receiver sold separately).

Note:

Training collars are used to train the dogs and not for punishment. Used properly and with care, the collar is a safe and effective tool to train, build communication and strengthen your bond with your dog.

Charging the Remote Transmitter

1. Connect the charging cable to the charging port.
2. Connect the charger to a USB power adapter (not supplied).
3. The battery indicator will flash during charging and be solid when charging is complete.

Note:

Both the remote transmitter and the receiver will need to be charged for 2 hours before first use.

Charge the Receiver

1. Open the charging port cover, connect the charging cable to the charging port.
2. Connect the charger to a USB power adapter (not supplied).
3. The indicator will flash red, slowly during charging and turn solid red when fully charged.



Turn the Transmitter On/Off

- 1. Press power button to turn the transmitter on. The back light will turn on. If there is no user input for 30 seconds, the backlight will turn off.
- 2. Press the power button to turn the transmitter off.

Turn the Receiver Collar On

Press the power button once, the receiver will emit a short “beep” indicating the receiver is turned on. The indicator will flash red once every 8 seconds.

Check Receiver Battery Level

With the receiver turned on, press the power button twice quickly to check the battery level.

Receiver	Battery Level
Beeps 5 times	100-800%
Beeps 4 times	80-60%
Beeps 3 times	60-40%
Beeps 2 times	40-20%
Beeps 1 times	20-1%

Turn the Receiver Collar Off

Press the power button once, the receiver will emit a short “beep” and the indicator will stop flashing. The receiver is now off.

Tips:

- The collar cannot receive any signals from the remote transmitted while it is charging.
- When the receive battery is low, it will “beep” for 10 seconds and then automatically turn off. The receiver will need to be charged.
- If not being used for an extended period, ensure the receiver is charged at least once a month.

Pairing the Transmitter and Receiver

1. Turn on the transmitter and select one of the channels by pressing the CH button.
2. Adjust the intensity levels by pressing the “+” and “-” buttons (ensure the level is above 1).
3. Turn the receiver on, the receiver will emit a short “beep”. The indicator will flash red once every 8 seconds.
4. Press and hold the power button on the receiver for 2 seconds, the indicator will begin flashing rapidly for 10 seconds, press one of the training buttons (tone & vibration/vibration/ tone) within 10 seconds.
5. Press one of the training buttons again, the receiver will emit the corresponding sound/vibration confirming the pairing is successful.
6. To pair another receiver (sold separately), choose a different channel and repeat steps 2-5.



Test the Training Collar

Once the remote and receiver(s) are paired. Test each of the functions before attaching the collar to your pet.

Test the Vibration function:

Press the vibration button (ensure the intensity level above 01), the receiver should vibrate.



Test the Tone function:

Press the tone button the receiver should emit a beeping sound.

Test the Light function:

Press the light button and the white LED on the transmitter will turn on.

Tips:

1. Ensure the correct channel is selected otherwise the signal from the transmitter will be invalid.
2. Pair remote transmitter and receiver before use.
3. The transmitter will go into sleep mode after 30 seconds without user input. Reactivate it by pressing any button.
4. When the transmitter is turned off, all buttons except for the LED light will be invalid.

Training & Automatic Anti Bark Modes

This product also features an Anti Bark mode. By default, it will be in training mode.

- To turn Anti Bark mode on, with the transmitter turned on, press and hold the remote power button for 3 seconds, the receiver will “beep” once indicating Anti Bark mode is enabled.
- To turn the Anti Bark mode off, with the transmitter turned on, press and hold the remote power button for 3 seconds, the receiver will “beep” twice indicating Anti Bark mode is disabled.

Anti bark mode:

- When the dog barks, the receiver will produce a 2-second warning sound.
- If a second bark occurs within 30 seconds, the receiver will produce a 3-second warning sound.
- If a third bark occurs within 30 seconds, the receiver will play a warning sound for 5 seconds along with a weak vibration. This will help train your dog to not bark upon hearing the warning sound.
- This cycle repeats up to 7 times. Initially, the warnings consist of sound only for the first two instances. If barking persists, subsequent triggers activate the sound & vibration mode for cycles 3 through 7. The intensity of the vibration gradually increases to guide your dog’s behaviour effectively.



Automatic protection:

- Regardless of how frequently the barking device is triggered, it automatically resets and reverts to its initial standby state once the dog ceases barking for 30 seconds.
- As a safeguard for your dog, the indicator light switches to rapid flashing mode if the device is activated 7 times consecutively. Subsequently, the barking device pauses for 1 minute before returning to its initial standby mode, ensuring your dog’s well-being.

Fitting the Collar

1. Proper positioning is crucial for effective and safe pet training. Position the receiver on the bottom of your pet's neck.
2. Maintain a space between the receiver collar and your pet's neck that allows for the insertion of one finger. Avoid making it too loose, as this could significantly impact the effectiveness of the vibration.
3. The receiver collar can be trimmed to ensure a comfortable, safe fit for your dog.



Setting the Initial Training Level Intensity

Knowing the intensity of each mode will be helpful to control the stimulation.

To set the initial training intensity level you must first determine the lowest stimulation that will clearly get your dog's attention by the following steps:

1. Set intensity to at zero using the “-” button.
2. Fit the collar properly on your dog's neck and start the training.
3. If the dog does not focus on you, begin the stimulation and progressively increase the levels until your dog responds to the beep/vibration.

Note:

Every dog is individual and unique. Some are more sensitive than others and some learn more slowly or quickly. Be sure to test out each level on each individual dog.

WARNING: If your dog yelps or jumps, this indicates that the level is too high.

Stopping Unwanted Behaviour

For this type of training, you need to set the collar at a predetermined stimulation level as outlined in the “Setting the Initial Training Level Intensity” section.

1. Let your dog roam in the area where they might misbehave, for example eating from the rubbish.
2. Get yourself out of sight or at a discreet distance and wait.
3. When the dog misbehaves, press one of the training buttons. This will cause your dog to associate the signal with their misbehaviour. If your dog doesn't respond, you can increase the level.

Note: Timing is crucial. Catching the unwanted behaviour and sending the signal at the precise moment can drastically shorten training time.

Training Advice

Collar Wise: It is important that your dog is NOT aware that the correction is coming from the collar. Otherwise, they will not misbehave when wearing the collar but continue the unwanted behaviour when the collar is off. This is referred to as “collar-wise”.

Note: Before training let your dog wear the collar for 5-7 days (no more than 8 hours per day) so that he can be accustomed to the weight of the collar and believe it is just another normal collar.

Positive Reinforcement: It will be helpful if you praise your dog as soon as it responds to the collar. Reward is with a pat, verbally or with a treat.

Note: Do not let your dog become aware that it is you causing the stimulation around its neck. Rather, let your dog associate the sensation with bad behaviour.

FAQ

Q: How old can my pet be to use training collar?

A: Avoid using on puppies younger than 6 months.

Q: Once my pet is trained and obedient, is it still necessary for my pet to wear the receiver collar?

A: It may be beneficial to periodically use the receiver collar to reinforce your pet's training.

Q: Can I use this product with more than one pet?

A: Yes, you can add 1 or 2 receiver collars to train 2 or 3 pets, as the remote transmitter supports 3 dog channels.

Q: What is the effective distance the receiver collar?

A: The effective distance can reach up to 1km between the remote transmitter and receiver collar without obstacles. However, various factors such as signal strength, obstacles, and environmental conditions can affect the actual effective range.

Q: How will I know when to charge the batteries?

A: For the remote transmitter, a battery symbol will appear on the LCD screen. For the Receiver Collar, a 10-second beep indicates low battery.

Q: How long can I leave the receiver collar on my dog?

A: The receiver collar should not be worn constantly. It's recommended not to exceed 12 hours of wear within a 24-hour period. Regularly check your pet if worn for longer durations.

Q: How long should I conduct training sessions for my pet?

A: Keep training sessions positive and brief, ideally lasting 10-15 minutes each time.

Q: What are the appropriate levels of intensity for my pets?

A: Start with the lowest level of intensity and adjust accordingly. Excessive stimulation may elicit a strong response from your pet.

Q: Are there any other effective training methods?

A: Using dog food as a training incentive can yield better results. Consistently reinforce desired behaviour and correct misbehaviour. With repetition, your pet will understand your expectations.

Q: How long will it take to train my pet effectively?

A: Training takes time and patience. Quick training sessions may not lead to desired results. Be patient and consistent with your training approach.

Q: What should I do if this training collar does not work or my pet?

A1: Ensure both the transmitter and receiver collar have sufficient power.

A2: Confirm that the receiver collar is turned on.

A3: Check that the channels on the transmitter are correctly configured.

A4: Try re-pairing the transmitter and receiver collar.

A5: Test all functions with the receiver collar removed.

A6: Ensure the receiver collar is properly fitted and not too loose.

A7: Trim your pet's fur where the contact points touch the neck or switch to longer contact points if needed.

SPECIFICATIONS

Range	Up to 1km
Training modes	Tone only/Vibration only /Beep & Vibration together/Light; 1-100 Adjustable Intensity Levels for Vibration
Waterproof level	Receiver Collar IPX6
	Transmitter IPX5
Receiver battery	650mAh lithium

NOTES

[illegible]

[illegible]

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com