 


How to wear your TOZO earbuds

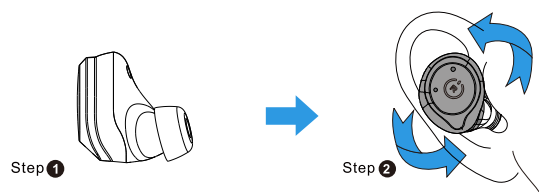

 
Step1: Ensure ear cap downward, then place earbuds into ear.
Step2: Rotating back earbuds to auricle side to fit snugly.



Thank you for purchasing the TOZO authentic product.
For more latest products, parts and accessories,
please visit: www.tozostore.com
For any assistance please contact Email: info@tozostore.com



TOZO®
www.tozostore.com

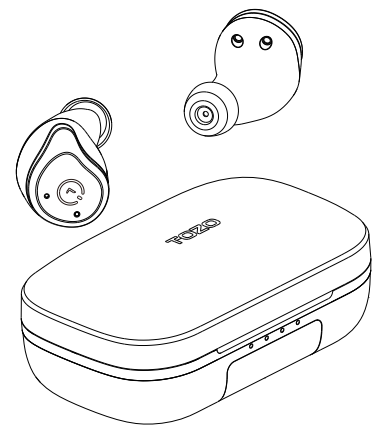

NC9Plus
ANC Wireless Earbuds

 
How To Pair

TWS Auto Pairing

- 1 Open the charging case, they will power on automatically and will connect each other automatically within 10 seconds.




- 2 If the earbud is full charge, the earbud will flash blue light for 5 seconds, then disappear. If the earbud is not full charge, it will keep red light until full charge.

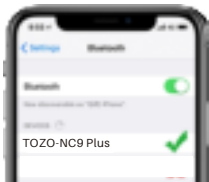

- 3 Search for pairing name [TOZO-NC9 Plus], and select it in your phone.

 MFB Touch Pannel



Reset

If you accidentally get only one earbud work, or fails to pair each other, please reset it:
1. Delete all TOZO-NC9 Plus records on the phone, then turn off the Bluetooth.
2. Holding both earbuds button for 5 seconds till red lights on to turn off earbuds.
3. Holding the MFB Touch Pannel on each of earbuds for another 5 seconds till blue light turn on and off, and then clicking the MFB Touch Pannel on each of earbuds twice quickly, the reset process will be done when the Purple light on for 1s, then two earbuds flash red and blue alternately, reset is complete.
NOTE: In case there is [Connection Unsuccessful] in your devices, please consider to delete all historical records of [TOZO-NC9 Plus] and try the paring process again.

Left Earbud

EN DE FR IT ES JP CN



Power on: Hold or pick up earbuds from battery case to power on automatically. Power off: Hold or put earbuds into battery case to power off & charging automatically. | Einschalten: Halten Sie die Ohrhörer am Batteriefach fest oder nehmen Sie sie mit, um sie automatisch einzuschalten. Ausschalten: Halten Sie die Ohrhörer fest oder stecken Sie sie in das Batteriefach, um sie automatisch auszuschalten und aufzuladen. | Mise sous tension: Tenez ou ramassez les oreillettes du boîtier de la batterie pour les allumer automatiquement. Mise hors tension: maintenez ou placez des oreillettes dans le boîtier de la batterie pour le mettre hors tension et le charger automatiquement. | Accensione: tieni o raccogli gli auricolari dal vano batteria per accenderli automaticamente. Spegnimento: tenere o inserire gli auricolari nel vano batteria per spegnere e caricare automaticamente. | Encendido: sostenga o recoja los auriculares de la caja de la batería para encenderlos automáticamente. Apagado: sostenga o coloque los auriculares en la caja de la batería para apagar y cargar automáticamente. | 電源を入れる: 電池ケースからイヤホンを持ち上げたりすると、自動的に電源が入ります。電源を切る: 電池ケースにイヤホンをかざすか入れると、自動的に電源が切れて充電されます。 | 开机: 从电池盒中取出或长按耳机, 自动开机。关机: 长按耳机或放入电池盒中, 自动关机并充电。

1x ANC Mode(Active Noise Cancellation) / Transparency Mode | ANC-Modus (Active Noise Cancellation) / Transparenzmodus | Mode ANC (suppression active du bruit) / mode transparence | Modalità ANC (Cancellazione attiva del rumore) / Modalità Trasparenza | Modo ANC (cancelación activa de ruido) / modo de transparencia | ANCE-モード(アクティブノイズキャンセレーション)/透過モード |



2x Previous | Vorheriger Titel | Précédent | Anterior | 前の | 上一首



Hold Adjusting the volume | Lautstärke einstellen | Régle le volume | Regolazione del volume | Ajustando o volumen | 音量を設定する | 調整音量



Hold End | Beenden | Terminer | Fine | Fin | 終了 | 結果



1x Accept | Akzeptieren | Acceptez | Accettare | Acceptar | 受け入れる | 接听



Hold Reject | Ablehnen | Refuser | Rifiutare | Rechazar | 拒否する | 拒接



3x Activating the voice assistant | Sprachassis-tent aktivieren | Activer l'assistant vocal | Attivazione dell'assistente vocale | Activando el asistente de voz | 语音アシスタントのアクティバ化 | 启动语音助手



Siri, Google Assistant, Baidu, depending on mobile phone.

Right Earbud

EN DE FR IT ES JP CN



1x Play/Pause | Wiedergabe/ Pause | Lecture/Pause | Reproducir/Pausa | 再生/一時停止 | 播放/暂停



2x Next | Nächster Titel | Suivant | Il prossimo | Siguiente | 次へ | 下一首



Hold Adjusting the volume | Lautstärke einstellen | Régle le volume | Regolazione del volume | Ajustando o volumen | 音量を設定する | 調整音量



1x Accept | Akzeptieren | Acceptez | Accettare | Acceptar | 受け入れる | 接听



Hold End | Beenden | Terminer | Fine | Fin | 終了 | 結果



Hold Reject | Ablehnen | Refuser | Rifiutare | Rechazar | 拒否する | 拒接



3x Activating the voice assistant | Sprachassis-tent aktivieren | Activer l'assistant vocal | Attivazione dell'assistente vocale | Activando el asistente de voz | 语音アシスタントのアクティバ化 | 启动语音助手



Siri, Google Assistant, Baidu, depending on mobile phone.

品名: NC9 Plus
规格: 285*100mm (三折页)