



Portable BT Speaker
NEB COUNTY PRO 12



User Manual

www.zebronics.com



Thank you for purchasing **ZEB-COUNTY PRO 12** Portable BT Speaker. Please read this user manual carefully before operation & save it for future reference.

Note:

- *Avoid the use of this product at the high temperature and high humidity environment.*
- *Avoid self-disassembly of the products or it results in the voiding the product's Warranty.*
- *Turn off the speaker if the speaker is not being used for a long for a long period of time.*

<https://zebronics.com/pages/warranty-policy>

Features:

20W RMS Output

Up to 18h* Backup

Dual 10.16cm Drivers

TWS Function

BT v5.4 | USB | mSD | AUX | FM

6.3mm Microphone Input

Multicolor LED Lights

Carry handle

Media / Volume control

Built-in Rechargeable battery

Specifications:


Model	: ZEB-PSPK 56
Output Power (RMS)	: 20W
BT Version	: v5.4
Driver Size	: 10.16cm X 2
Speaker Impedance	: 2Ω
Frequency Response	: 40Hz-20kHz
S/N Ratio	: ≥70dB
Max. Supported USB/mSD Memory Size	: 32GB
Supported Audio Formats	: MP3
Charging Time	: 4h
Playback Time	: 18h*
Product Dimension (Dia x H)	: 16 x 38.7 cm
Net. Weight	: 1.2Kg

** at 50% Volume (LED off)*

Package Contents

Speaker	: 1 U
Charging Cable	: 1 U
Input Cable	: 1 U
QR Code Guide	: 1 U

Buttons and Ports Description

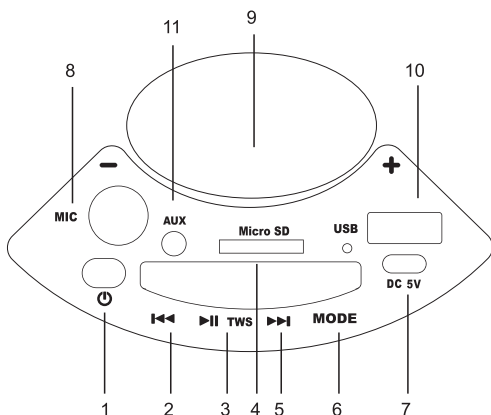

1. Power ON/OFF
2. Previous Track
3. Play/Pause & TWS(*Single press to play/pause the music. In BT mode, double press the TWS button to start pairing with another **ZEB-COUNTY PRO 12** speaker.*)
4. mSD card slot
5. Next Track
6. Mode Switch
7. Charging input port
8. Microphone input
9. Volume control button
10. USB input port
11. AUX input port

Button Function:

Power On/off

Use the power ON/OFF slider switch to Turn ON/OFF the speaker.

BT Connectivity :

- Once the Speaker is ON, Please make sure that the speaker is in BT mode.
- Now, search for nearby BT device in your mobile and tap on the BT name "**ZEB-COUNTY PRO 12**" to connect.
- The volume can be adjusted using the volume control button.
- Short press "Play/Pause" to Play/Pause the music.
- Short press ⏮ or ⏭ to control the media.

USB/Micro SD card Mode :

- Once the speaker is ON, Insert a USB pendrive / Micro SD card to the respective port of the speaker.
- The Speaker will automatically detect the songs from the USB/ Micro SD card and the supported audio content will be played from it.

Note: This mode isn't selectable on the speaker unless a USB/mSD flash card is connected.

- Short press "Play/Pause" to Play/Pause the music.
- The volume can be adjusted using the volume control button.
- Short press ⏮ or ⏭ to control the media.

FM Radio :

- Once the speaker is ON, Please switch the speaker to FM mode using the mode button.
- Long press the "Play/Pause" key to auto scan the available FM channels.
- Short press ⏮ or ⏭ to change the scanned FM channels.

TWS Function :

- Turn on two **ZEB-COUNTY PRO 12** speakers you want to pair.
- Double click "TWS" button on any one speaker to activate TWS mode.
- After few seconds, both the speakers will be connected successfully.
- Now, Search for nearby BT device in your mobile and Tap on the BT name "**ZEB-COUNTY PRO 12**" to connect.

Note: User need to make TWS connection first, then make Bluetooth connection with the mobile phone. Requires two ZEB-COUNTY PRO 12 speakers for using TWS feature.

AUX-In :

Switch the speaker to AUX Mode, Connect one end of the AUX cable to the speaker & connect the other end to an audio source. The songs played from the audio source can be heard through the speaker.

RGB Light Control switch:

When the speaker is turned on, the RGB light automatically turns on. The user can switch the light ON/OFF by long-pressing the mode button.

Charging instruction :

Connect the charging cable to the speaker. The red LED indicates that the speaker is charging. The red light turns off once the speaker is fully charged.

