

# INSTRUCTIONS



4+


 


## HW MEGA WREX ALIVE RC™

HVIN: HWW53R (  ), HWW53T (  )



### BEFORE YOU START

Slide the vehicle's power switch to OFF (  ) then to ON (  ) again to exit the preset Try Me Mode before you start playing.



I 0/4



# CONTENTS



Colors and decorations may vary.

Adult supervision is recommended when the vehicle is being operated.

Keep these instructions for future reference as they contain important information.

**IMPORTANT:** Please read all instructions before operating your vehicle.



**HOTWHEELS.COM**


©2023 Mattel. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Limited, The Porter Building, 1 Brunel Way, Slough SL1 1FQ, UK. Mattel Australia Pty. Ltd., 658 Church St., Richmond, Victoria, 3121. Consumer Advisory Service - 1300 135 312. Mattel South Africa (PTY) LTD, Office 102 13, 30 Melrose Boulevard, Johannesburg 2196. Chinese mainland: Mattel Barbie (Shanghai). Trading Co., Ltd. Room 2005, 20th Floor, 899 Ruining Road, Xuhui District, Shanghai, 200232, PRC. Customer Care Line: 400-819-8658. Hong Kong SAR: Kids Kingdom Limited, Room 1908-9, Gala Place, 56 Dundas Street, Mongkok, Kowloon, Hong Kong, P.R.C. Customer Care Line: (852)2782-0766. Taiwan region: CHICKABIDDY CO., LTD, F5, No. 186, Sec. 4, Nanjing E. Rd., Taipei 10595, Taiwan region. Customer Care Line: 0800 001 256. Diimport & Diedarkan Oleh: Mattel Continental Asia Sdn Bhd. Level 19, Tower 3, Avenue 7, No. 8 Jalan Kerinchi, Bangsar South, 59200 Kuala Lumpur, Malaysia.

HWW53-0970\_DOM




# SETUP

## 1: FEATURES

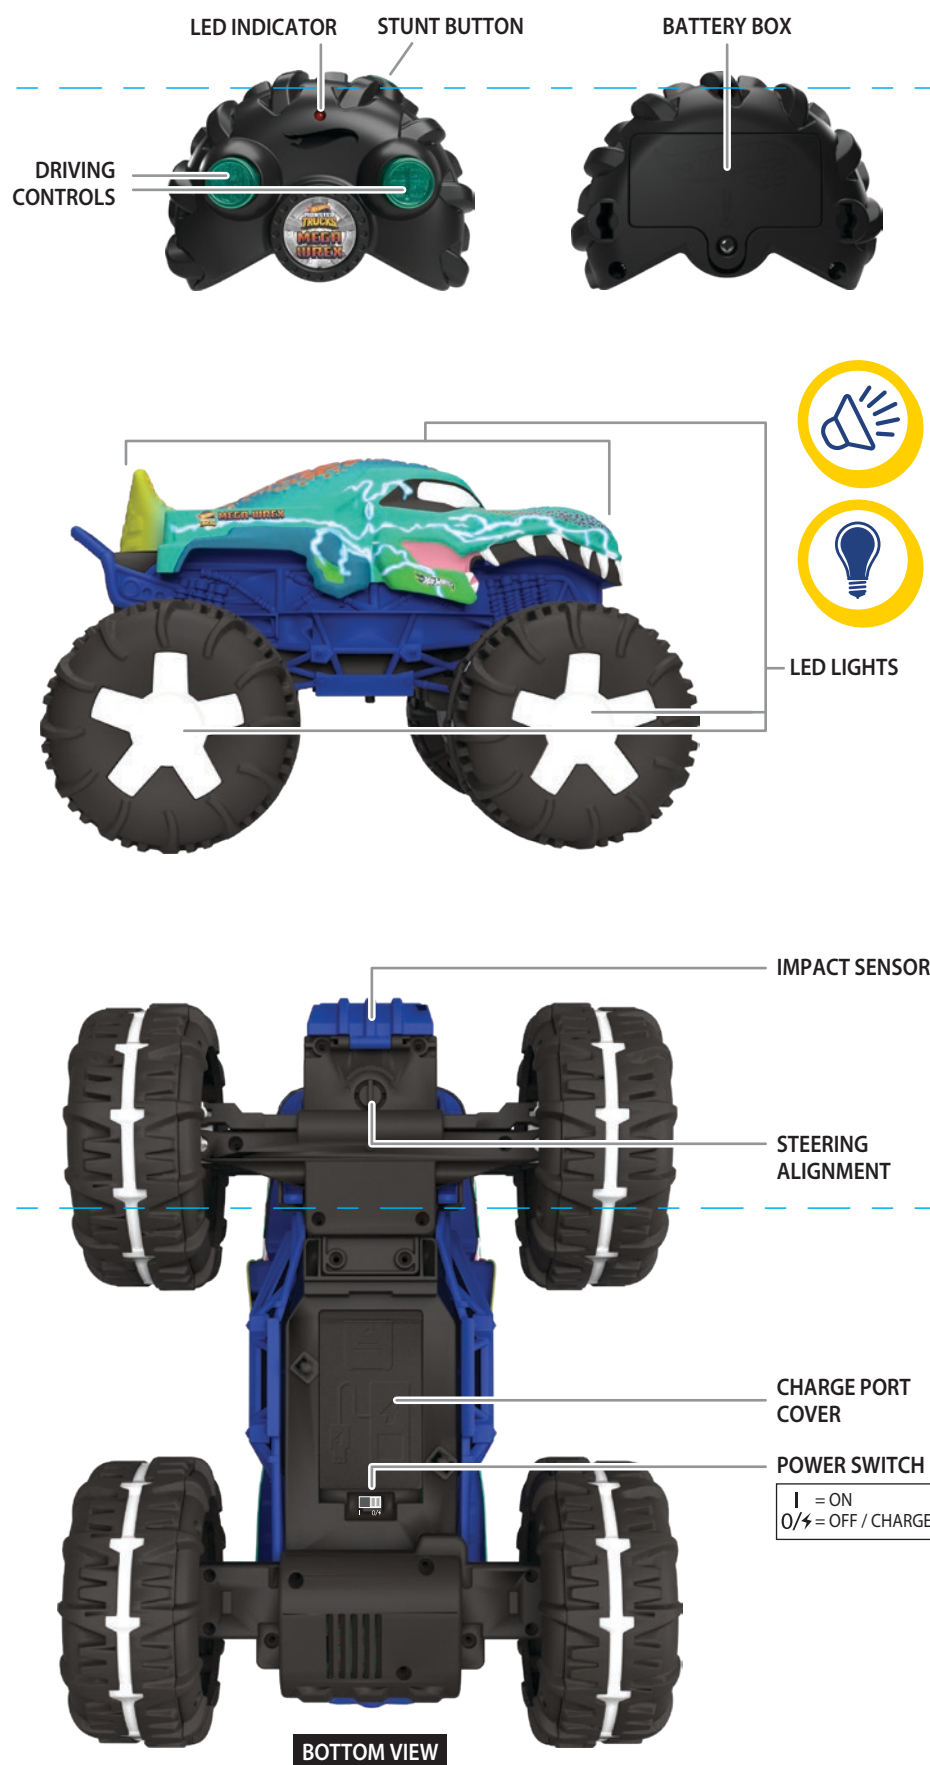

## 2. REMOTE CONTROLLER BATTERY INSTALLATION


1. Unscrew the battery cover with a Phillips head screwdriver (not included).
2. Install 2 AAA (LR03) 1.5V alkaline batteries (not included) with polarity (+/-) as shown inside the battery compartment. For longer life, use alkaline batteries.
3. Close the battery cover and tighten the screw.
4. Replace batteries in the remote controller if the LED on the remote controller does not go on during playing or if the vehicle does not respond well after a recharge.

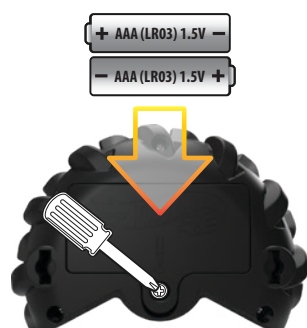


## 3. GUARD MODE™

Mega-Wrex™ will illuminate and guard the room as it recharges!

Switch off the vehicle and plug in the charge cord to charge and enter "Guard Mode". The eyes will light up when it is fully charged.

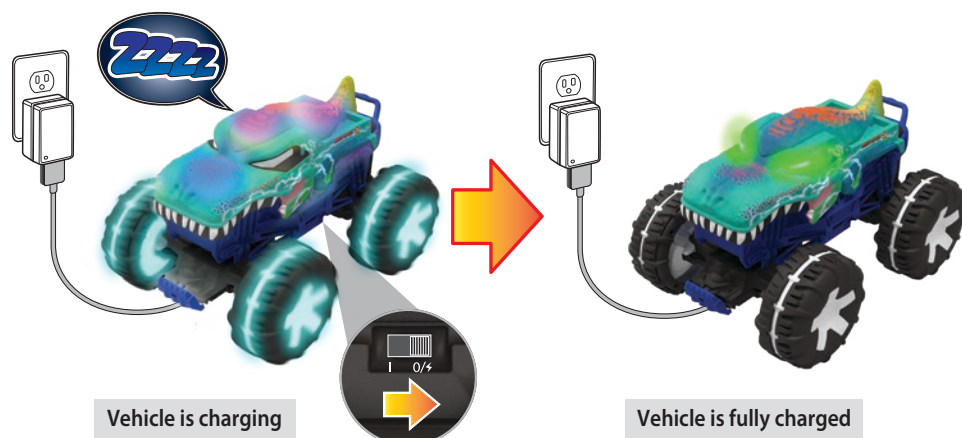

## HOW TO CHARGE THE VEHICLE

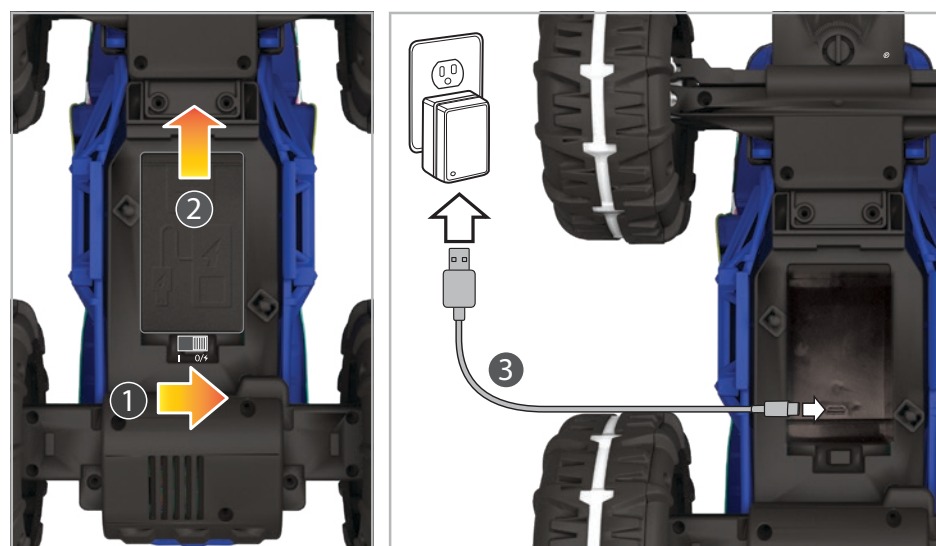


The vehicle is powered by a permanently installed Lithium-ion (Li-ion) battery, and it must be fully charged before first use.

1. Slide the power switch to OFF (O/⚡).
2. Open the charge port cover.
3. Connect one end of the charge cord to the vehicle's charge port and plug the other end in to a 5V/2A USB power adapter (not included).
4. Charging will begin when the cord is connected. Mega-Wrex's body will light up as it is charging.
5. Mega-Wrex's eyes will light up when it is fully charged. Unplug the charge cord when charging is complete. A full charge will usually take approximately 120 minutes. Charging time may vary.
6. Close the charge port cover.
7. Recharge the vehicle if the vehicle begins to run slowly or does not respond.

**NOTE:** Power switch must be in the OFF (O/⚡) position when charging the vehicle.

## 4. PAIRING THE REMOTE CONTROLLER AND VEHICLE

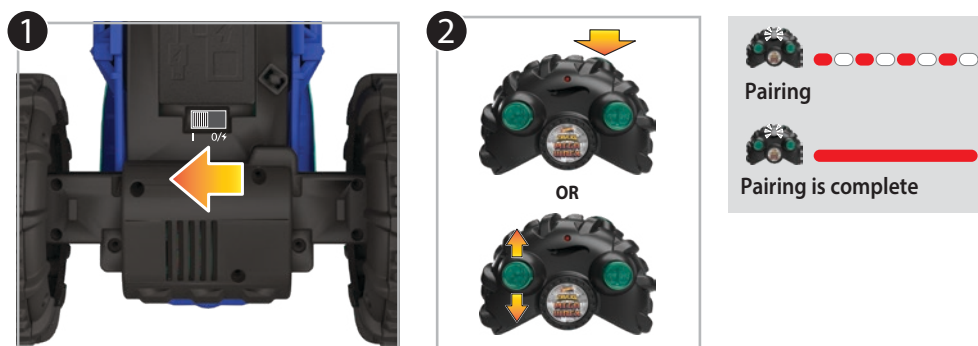

1. Slide the power switch to ON (I) on the vehicle.
2. Press the stunt button or push the remote controller's driving control joystick forward/backward after switching on the vehicle.
3. Pairing is complete when the LED changes from flashing red to solid red on remote controller.

**NOTE:** If the vehicle does not respond to the remote controller after pairing, switch the vehicle off then back on to try pairing again or replace the batteries in the remote controller if the batteries are drained.



# LET'S PLAY!




## DRIVING

STUNT BUTTON

FORWARD/BACKWARD

LEFT/RIGHT STEERING

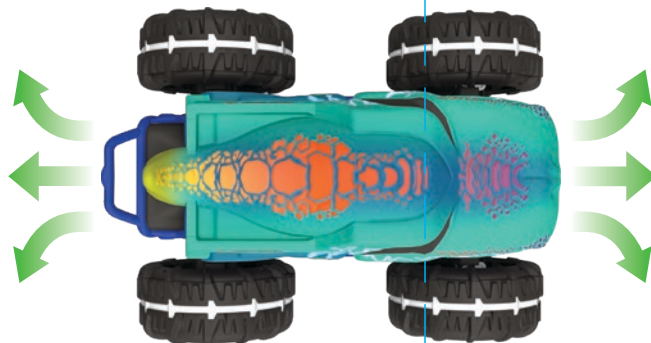

**NOTE:** Operating range of the remote controller is up to 30 m (98 ft).



### SKILL CHECK!

Remember, steering directions are flipped on the remote controller when you are driving backward!

## HUNT MODE

### 1. HUNT MODE

The vehicle will start off in "Hunt Mode" once it is paired with the remote controller. Drive, roar, and smash everything in sight to charge up its "Rage meter" until its eyes and teeth are flashing red.



## SMASHER MODE

### 2A. SMASHER MODE

Unleash extra speed and sounds in "Smasher Mode"!

When the eyes and teeth are flashing red, press the stunt button on the remote controller to activate "Smasher Mode"!



### 2B. SMASHER MODE - WHEELIE ACTION.

Tap to smash!



Hold to wheelie!



Mega-Wrex™ will automatically exit Smasher Mode after a while to cool down. Charge up its rage meter again in Hunt Mode!

## STORAGE

Store the remote controller under the vehicle.



## VOLUME CONTROL

**NOTE:** Mega-Wrex™ must be in hunt mode to adjust volume.

Tap 3 times and hold for approximately 5 seconds.




Repeat to revert the volume level from "LOW" to "HIGH".



STORAGE

Store the remote controller under the vehicle.

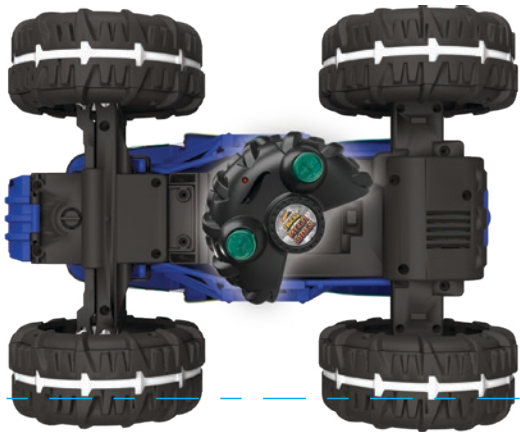

VOLUME CONTROL

**NOTE:** Mega-Wrex™ must be in hunt mode to adjust volume.

Tap 3 times and hold for approximately 5 seconds.



Repeat to revert the volume level from "LOW" to "HIGH".




TROUBLESHOOTING

CHECKLIST

- ☐ Is the vehicle fully charged?
- ☐ Is the remote controller equipped with fresh batteries?
- ☐ Is the remote controller paired with the vehicle?
- ☐ Has the vehicle's steering been aligned?

STEERING ALIGNMENT

1. Check the vehicle's steering alignment before playing by driving it forward to see if it is driving straight.
2. If the vehicle automatically steers toward the right/left, turn the steering adjuster dial to the opposite direction and adjust until it runs in a straight line.

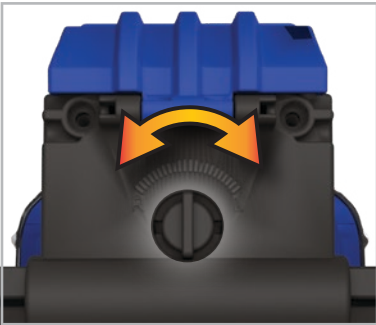


TIME OUT

The vehicle will go into sleep mode if left idle for approximately 10 minutes to preserve battery life. To resume normal play, slide the vehicle's power switch to OFF then ON again, and then push the remote controller's driving control joystick forward/backward to pair the vehicle and remote controller.

BATTERY REMOVAL INSTRUCTIONS

**NOTE TO ADULTS:**

Please follow these steps to remove the Li-ion rechargeable battery pack before disposing of the product.

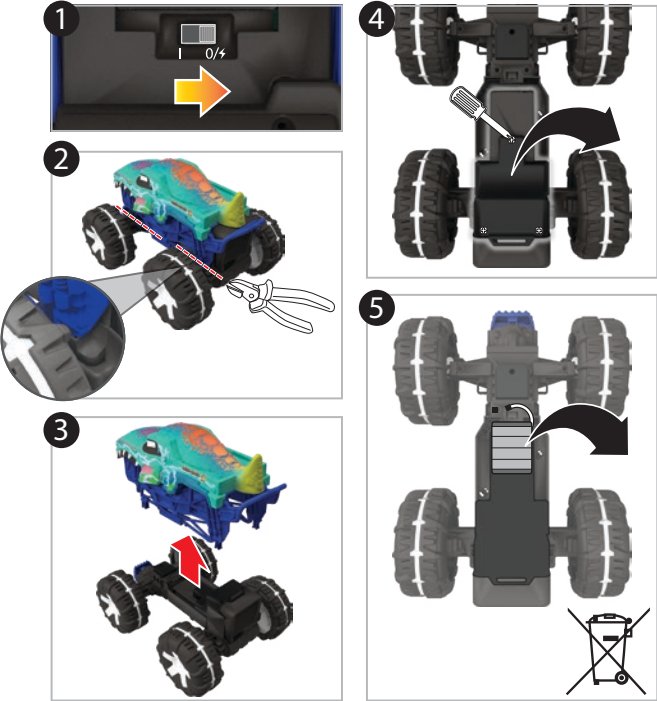

1. Slide the power switch to OFF (0/4).
2. Cut the suspension bars of the truck body with pliers (not included).
3. Remove the truck body to access the battery box.
4. Unscrew and remove the battery box cover with a Phillips head screwdriver (not included).
5. Unplug the Li-ion battery pack and dispose of it in accordance with your local battery collection and recycling regulations.