


NETFLIX  
**STRANGER  
THINGS**

VICTROLA  
**WSQK RECORD PLAYER**  
· TURNTABLE SYSTEM WITH SPEAKERS

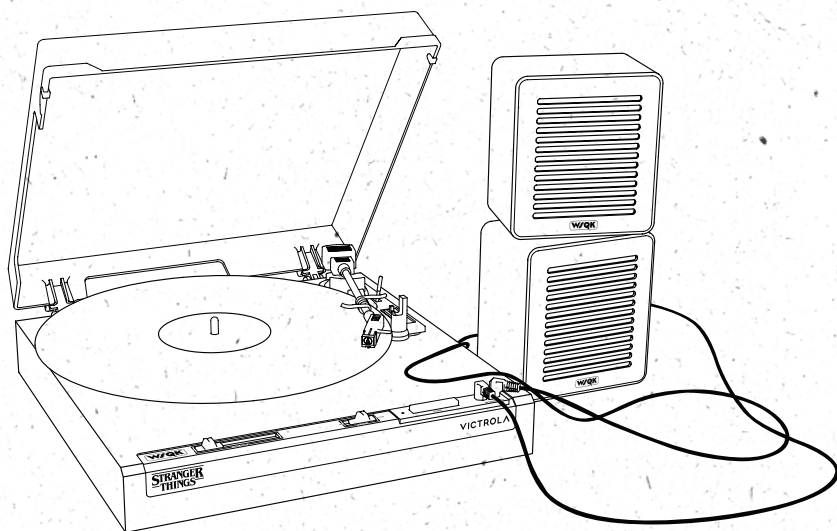

ASSEMBLY AND OPERATING INSTRUCTIONS  
VTS-11ST


## **Victrola: Spinning WSQK's Top Hits!**

Since 1906, Victrola has helped find escape through music.

Now, that legacy crosses into another dimension with the Limited Edition WSQK Record Player — echoing the chaotic energy of The Squawk control room, where The Hawkins Hitmaker rules the airwaves.

Follow along as we guide you through setup. Play at your own risk, and remember...music may be your only way out.

– Victrola

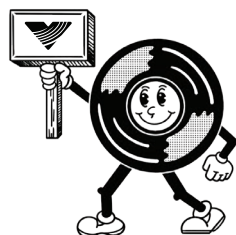



# IN THE BOX




1. Turntable

2. Speakers

3. Speaker Cables
4. WSQK Slipmat

5. Power Adapter


6. Instruction Manual

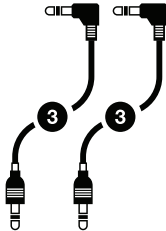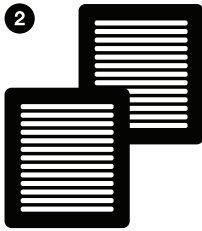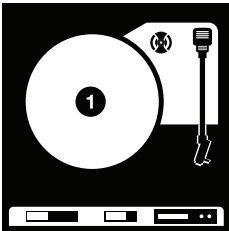


# OVERVIEW

## TURNTABLE
 
### CONTROL PANEL




### BACK PANEL

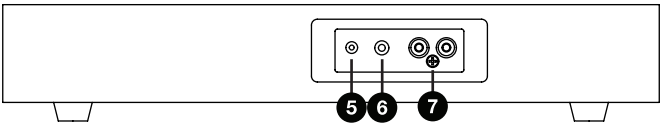

## SPEAKERS

### BACK

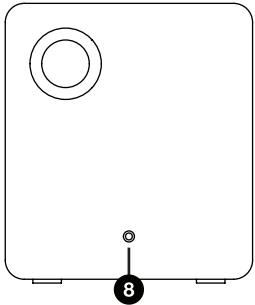

1. Power Button

2. Source Slider

3. Volume Slider

4. Speaker Outputs
5. Power Input

6. Headphone Output





7. RCA Output

8. Speaker Input

# 1 PREPARE TURNTABLE



## TURNTABLE SETUP - PLACE TURNTABLE ON A FLAT AND LEVEL SURFACE

1. Remove all packaging materials.
2. Remove tonearm twist tie.
3. (Optional) Add some WSQK styling to your turntable and wrap the twist tie around the tonearm, ensuring the ends don't scratch your records.  
*You never know when it may come in handy.*
4. Remove tape and clear stylus cover.  
*Note: Gently pull stylus cover forward to remove.*
5. (Optional) Install the WSQK slipmat:  
Remove the three rubber plugs from the platter, place slipmat on platter.

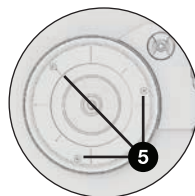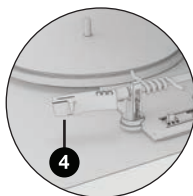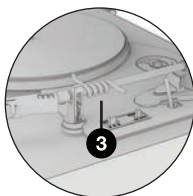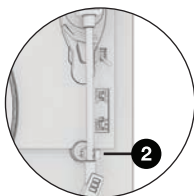

# 2 CONNECT SPEAKERS

1. Using the included speaker cables, connect the ends with the right-angle plugs into the **WSQK SPEAKERS ONLY** ports located on the front panel of the turntable.
2. Connect the straight ends of the speaker cables into the ports on the back of each speaker.

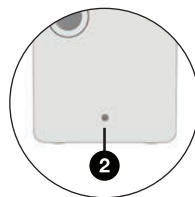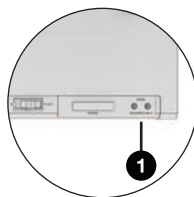

# 3 PLACE SPEAKERS

Use one of our recommended placements below for inspiration, or create your own setup! Place your speakers however you like, there are no rules here. Stack them, stagger them, or even flip them...*Upside Down!*

Take a photo of your personalized setup and tag **Victrola** on social. We'll be watching!



CLEAN



CHAOTIC



STACKED






ASYMMETRICAL

# 4

## USING THE WSQK RECORD PLAYER

### GENERAL OPERATION

1. Press and hold the power button for 1 second to power the turntable on/off.
2. Use the source slider to select operation mode.
3. Use the volume slider to adjust volume.

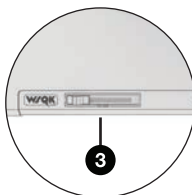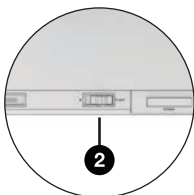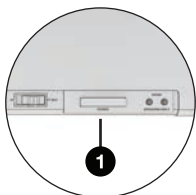

### VINYL MODE

1. Slide the source slider to VINYL.
2. Place the record on the platter and begin playing.  
*See Section 5 (next page) for more details on playing records.*

### BLUETOOTH (INPUT) MODE

1. Slide the source slider to BT to enter BLUETOOTH mode, the LED will begin flashing blue, indicating pairing mode.
2. On your device, turn Bluetooth on and select **Victrola WSQK Record Player** in the available device list.
3. Once paired, the LED will turn solid blue.

### VINYLSTREAM™ (BLUETOOTH OUTPUT) MODE

1. Slide the source slider to BT OUT to enter VINYLSTREAM mode to play vinyl to external Bluetooth speakers or headphones.
2. The LED will begin flashing green, indicating pairing mode.
3. Make sure your external Bluetooth device is in pairing mode and near the turntable.
4. Once paired, the LED will turn solid green.  
*Volume is controlled by the external Bluetooth device.*



## 5 PLAYING A RECORD

### BASIC OPERATION

1. Unlatch the tonearm.
2. Raise the tonearm using the lift lever.
3. Use the finger lift to align the stylus over the record.
4. Lower the tonearm using the lift lever to begin playing.

### NOTES:


- *At the end of the record, turntable will automatically stop spinning (if auto-stop is enabled). Use the lift lever to return the tonearm to the resting position.*

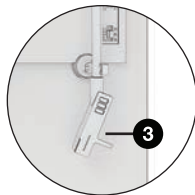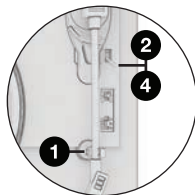

---

### ADJUSTING RECORD SPEED

1. Use the speed switch next to the tonearm to adjust the record speed between **33 1/3 RPM** (default), **45 RPM**, and **78 RPM**.

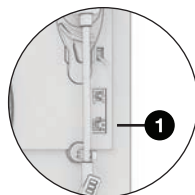


---

### AUTO-STOP OPERATION

1. Use the auto-stop switch next to the tonearm to enable & disable the auto-stop function.

**AUTO-STOP Enabled (default):** Turntable will only spin when the tonearm is positioned above record grooves.

**AUTO-STOP Disabled:** Turntable will spin continuously when in VINYL or VINYLSTREAM mode.

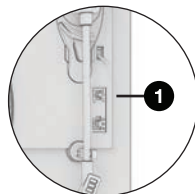

---

### PLAYING A 7" RECORD

1. Locate the **45 RPM** adapter.
2. Place the adapter over the center spindle.
3. Select correct speed.
4. Place record over adapter, begin playback.



## REMOVING THE DUST COVER



1. With the dust cover open, firmly grasp both sides of the dust cover near the hinges.
2. Pull the dust cover straight up and away from the turntable, hinges will come off with dust cover.



## REPLACING THE STYLUS


### REMOVING THE STYLUS FROM THE TONEARM:

1. Place your fingers at the tip of the stylus and push down to the direction "A".
  - **WARNING:** When applying force to stylus, too much may damage or break the cartridge.
2. Pull the stylus out toward the direction "B".

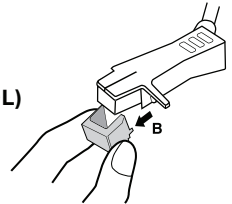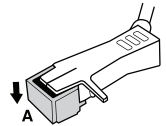

### INSTALLING THE STYLUS: (REPLACEMENT STYLUS # ATN3600L)

 1. Hold the tip of the stylus and insert the other edge by pressing toward direction "C".
2. Push the stylus up toward direction "D" until it locks at the tip.



### CAUTION:

- Do not bend or force the stylus into the cartridge.
- Do not touch the stylus needle to avoid injury to your hand.
- Turn off the unit's power before you replace the stylus.
- Keep out of reach of children.

### NOTES:

- The stylus should last about 300 hours under normal use. It is recommended that the stylus be replaced as soon as you notice a change in sound quality. 78 RPM records may accelerate stylus wear and may have to be changed sooner.

## STEREO/MONO MODE

Depending on your speaker placement, your speakers may sound better in MONO mode instead of the default STEREO mode. To switch between MONO and STEREO modes, quick press the power button 5 times. The LED will flash green 1 time when entering MONO mode and green 2 times when entering STEREO mode.

## FACTORY RESET

Quick press the POWER button 3 times to factory reset the unit and forget any previously paired Bluetooth devices. The LED will flash red.

# SPECIFICATIONS

|                              |                                                                                            |
|------------------------------|--------------------------------------------------------------------------------------------|
| DIMENSIONS (Turntable)       | 13.54" W x 14.06" D x 4.29" H                                                              |
|                              | 344mm W x 357mm D x 109mm H                                                                |
| DIMENSIONS (Speakers - Each) | 5.11" W x 3.44" D x 5.83" H                                                                |
|                              | 130mm W x 87.5mm D x 148mm H                                                               |
| WEIGHT (total)               | 9.00 lbs / 4.08 kg                                                                         |
| POWER SUPPLY                 | 12V  3.0A |
| POWER CONSUMPTION            | 36W                                                                                        |
| BLUETOOTH VERSION            | 5.0                                                                                        |
| BLUETOOTH PROFILE            | A2DP, AVRCP, HFP                                                                           |
| MAXIMUM POWER TRANSMITTED    | <8dBm                                                                                      |
| FREQUENCY BANDS              | 2402Hz~2480MHz                                                                             |

**INCLUDED:**

WSQK Turntable, WSQK Speakers (Pair), Speaker Cables (2),  
WSQK Slipmat, Instruction Manual.

V01-070125

Please note: As a result of continual improvements, the design and specifications of this product are subject to change without notice.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.  
Any use of such marks by Innovative Technology Electronics, LLC is under license.  
Other trademarks and trade names are those of their respective owners.

STRANGER THINGS™/© Netflix. Used with permission. Upside Down Pictures™ Monkey Massacre Productions 21 Laps™ Shawn Levy.

Made in China.

This product has been manufactured and sold under the responsibility of Innovative Technology Electronics, LLC. Victrola is a trademark used under license by Innovative Technology Electronics, LLC.



# SAFETY WARNINGS

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near large bodies of water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as naked flames, lighted candles, radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. Unplug the apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified personnel, to reduce the risk of electric shock. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

# FCC & IC WARNINGS

## FCC STATEMENTS

Caution: the user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC rules and Innovation, Science and Economic Development Canada's license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## FCC & IC RADIATION EXPOSURE STATEMENT:

This equipment complies with FCC and Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## DÉCLARATION D'IC SUR L'EXPOSITION AUX RADIATIONS:

Cet équipement est conforme aux limites d'exposition aux radiations définies par le Canada pour des environnements non contrôlés. Cet équipement doit être installé et utilisé à une distance minimum de 20cm entre l'antenne et votre corps. Cet émetteur ne doit pas être installé au même endroit ni utilisé avec une autre antenne ou un autre émetteur.

# WEEE AND CE STATEMENTS



### Declaration of Conformity

This device complies with the essential requirements and other relevant provisions of below:

1. RED directive: 2014/53/EU
2. Low voltage directive: 2014/35/EU
3. ROHS directive: 2011/65/EU

You can download the complete EU conformity declaration from [www.victrola.com/eu/doc](http://www.victrola.com/eu/doc)



The New Recast WEEE Directive (DIRECTIVE 2012/19/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 4 July 2012 on waste electrical and electronic equipment (WEEE).

1. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
2. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
3. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service.

### Intended Use

This audio device is only intended for playing circuit boards. Any further use is considered improper. It is only suitable for use in dry interiors. The device is not intended for commercial use, but exclusively for use in private households. Any other use or modification of the device is not intended and is strictly prohibited. No liability can be assumed for damage caused by improper use or incorrect operation.

This device can be used by children from the age of 8 and by persons with reduced physical, sensory or mental capabilities or a lack of experience and knowledge if they are supervised or have been instructed in the safe use of the device and understand the resulting dangers. Children are not allowed to play with the device. Cleaning and user maintenance must not be carried out by children unless they are older than 8 years and supervised. Also keep the packaging film away from children. There is a risk of suffocation.

Children younger than 8 years are to be kept away from the device and the connection cable.

# LIMITED WARRANTY

**Victrola is a registered trademark of Innovative Technology Electronics, LLC.**

## **United States**

For detailed information about our warranty policy and limitations visit  
**[victrola.com/pages/warranty](http://victrola.com/pages/warranty)**

## **Canada and US Territories**

The Warranty on this product shall comply with applicable law when sold to a consumer in Canada or a US Territory. To obtain any applicable warranty service, please contact the dealer from which you purchased the product, or the distributor that supplied the product, with your original receipt.

If assistance from the dealer from which it was purchased is not possible, you may contact our customer service for warranty assistance at [victrola.com/contact](http://victrola.com/contact).

## **Outside the U.S., Canada, and US Territories**

The Warranty on this product shall comply with applicable law when sold to a consumer outside of the United States, Canada, and US Territories. To obtain any applicable warranty service, please contact the dealer from which you purchased the product, or the distributor that supplied the product, with your original receipt.

# CUSTOMER SUPPORT

**VICTROLA.COM/PAGES/CUSTOMER-CARE**

[support@victrola.com](mailto:support@victrola.com)  
(877)483-2497

## **EU Importer:**

Innovative Technology Electronics, LLC  
Ionweg 3, 4706 RB Roosendaal, NL  
NL827772956

## **EU authorized representative:**

REP Europe GmbH  
Prinzenallee 7, 4th floor 40549  
Düsseldorf, Nordrhein-Westfalen, Germany

[www.victrola.com/importer](http://www.victrola.com/importer)

THERE'S A NEW RADIO IN TOWN

# WSQK

## THE SQUAWK <sup>94.5 FM</sup>

★ HAWKINS HITMAKER! ★

PLAYING THE 80S BEST HITS



PLAYING THE 80S BEST HITS

HOSTED BY

► **ROCKIN' ROBIN** ◀



HAVE A REQUEST? CALL US!

**765-754-WSQK**



OUR MUSIC SELECTION WILL TURN YOU UPSIDE DOWN