


REPLACEMENT PARTS - MODEL TB575EC

4-CYCLE GAS TRIMMER

PPN 41ADT57C766

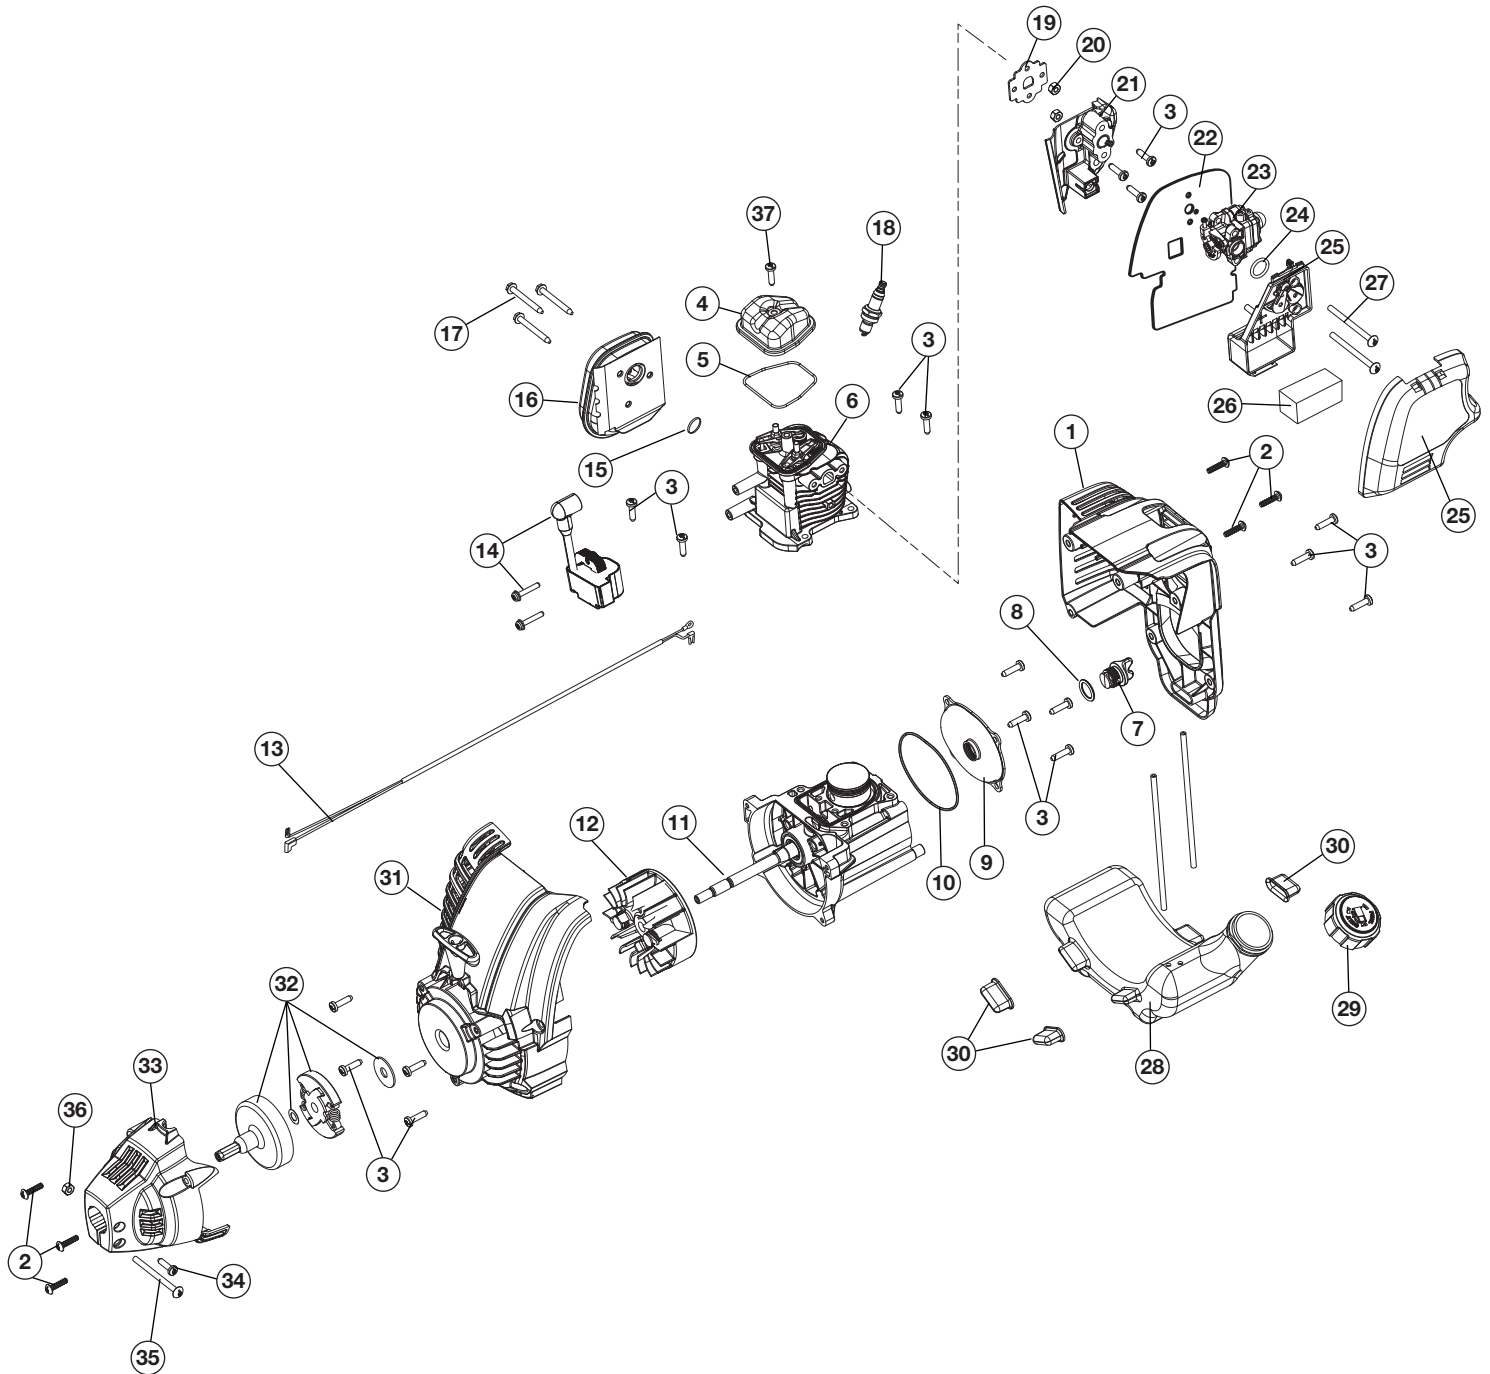

REPLACEMENT PARTS - MODEL TB575EC

4-CYCLE GAS TRIMMER

PPN 41ADT57C766

<u>Item</u>	<u>Part No.</u>	<u>Description</u>
1	753-06134	Engine Cover Assembly (includes 2 & 3)
2	753-04595	Cover Screw
3	791-181003	Screw
4	753-05901	Rocker Cover
5	753-05902	Rocker Cover O-Ring
6	753-06311	Cylinder Assembly (includes 3 & 5)
7	753-05408	Oil Plug (includes 8)
8	791-182290	Oil Plug O-Ring
9	753-06111	Crankcase Cover
10	753-05238	Crankcase Cover O-ring
11	753-06313	Crankcase Assembly (includes 10)
12	753-06221	Flywheel Assembly
13	753-05264	Lead Wires
14	753-05243	Module Assembly
15	753-05244	Muffler Gasket
16	753-05245	Muffler Assembly (includes 15 & 17)
17	753-05246	Muffler Screw
18	753-05784	Spark Plug
19	753-05247	Insulator Gasket
20	753-05248	Nut
21	753-05249	Insulator
22	753-05366	Carburetor Gasket
23	753-06220	Carburetor


<u>Item</u>	<u>Part No.</u>	<u>Description</u>
24	791-181751	O-Ring
25	753-05252	Air Cleaner Cover Assembly (includes 26)
26	753-05254	Air Filter
27	753-05253	Screw
28	753-06240	Fuel Tank Assembly w/Fuel Lines (includes 29)
29	753-1229	Fuel Cap
30	753-05259	Fuel Tank Pads
31	753-06314	Starter Housing Assembly (includes 3)
32	753-06281	Clutch Assembly
33	753-05263	Clutch Cover (includes 2)
34	791-182519	Anti-Rotation Screw
35	753-04003	Clamp Screw
36	791-180217	Nut
37	791-181025	Rocker Cover Screw
*	753-05297	Spark Arrestor Assembly
*	753-06317	Shortblock Assembly (includes 3-6, 8, 10, 11 & 18)

* Items Not Shown

REPLACEMENT PARTS - MODEL TB575EC

4-CYCLE GAS TRIMMER

PPN 41ADT57C766

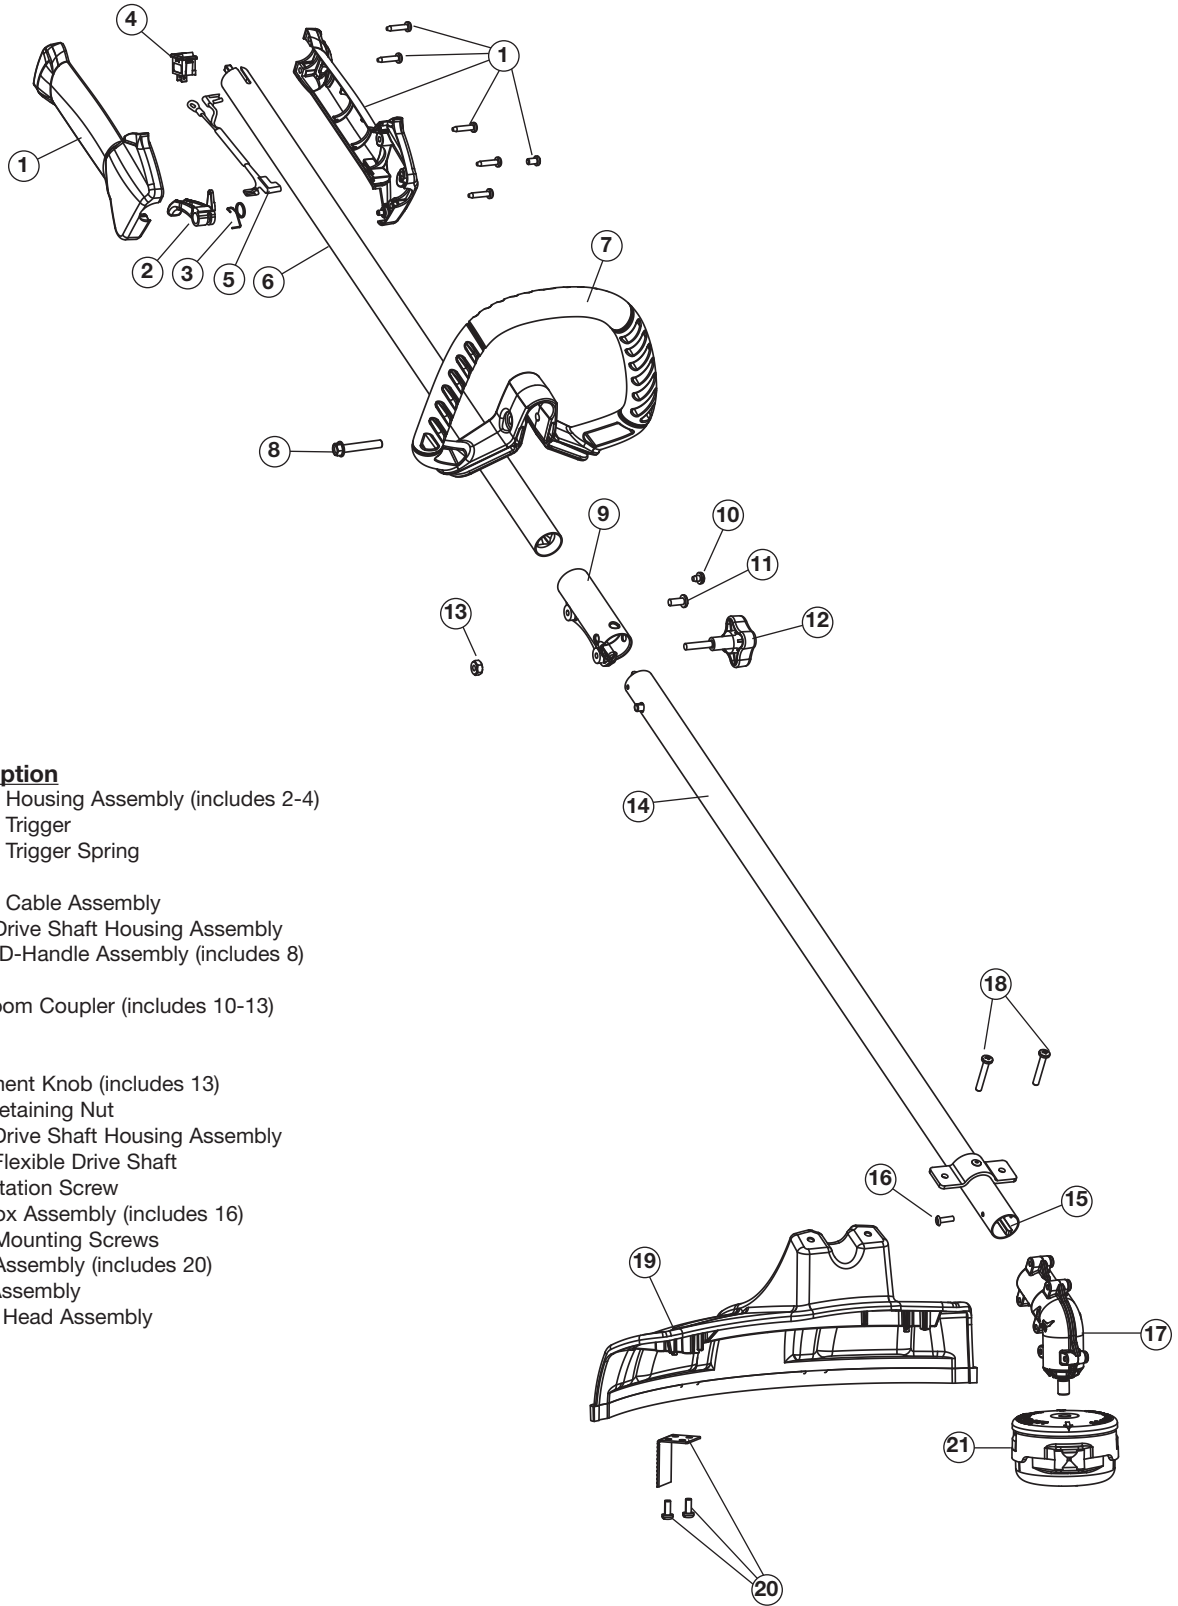

Item	Part No.	Description
1	753-04234	Throttle Housing Assembly (includes 2-4)
2	753-04119	Throttle Trigger
3	791-182690	Throttle Trigger Spring
4	791-182405	Switch
5	753-05266	Throttle Cable Assembly
6	753-04236	Upper Drive Shaft Housing Assembly
7	753-06039	Deluxe D-Handle Assembly (includes 8)
8	753-06040	Bolt
9	753-1190	Split Boom Coupler (includes 10-13)
10	791-182057	Screw
11	791-181617	Bolt
12	791-181951	Adjustment Knob (includes 13)
13	753-04386	Knob Retaining Nut
14	753-06139	Lower Drive Shaft Housing Assembly
15	753-05267	Lower Flexible Drive Shaft
16	753-05698	Anti-Rotation Screw
17	753-06124	Gear Box Assembly (includes 16)
18	753-06125	Shield Mounting Screws
19	753-06123	Shield Assembly (includes 20)
20	753-06126	Blade Assembly
21	753-06129	Cutting Head Assembly

* Items Not Shown