

# KitchenAid

## PASTA ROLLER AND CUTTER SET ATTACHMENT 5KSMPRA 5KSMP5A, 5KSMP5CA OWNER'S MANUAL

|    |                           |     |
|----|---------------------------|-----|
| EN | Owner's Manual            | 2   |
| DE | Bedienungsanleitung       | 10  |
| FR | Le manuel d'utilisation   | 18  |
| IT | Manuale del proprietario  | 27  |
| NL | Gebruikershandleiding     | 34  |
| ES | El manual del propietario | 41  |
| PT | Manual do proprietário    | 49  |
| EL | Εγχειρίδιο Κατοχού        | 57  |
| SV | Användarhandbok           | 65  |
| NO | Brukerhåndbok             | 72  |
| FI | Omistajan Opas            | 79  |
| DA | Brugervejledning          | 85  |
| IS | Notandahandbók            | 92  |
| RU | Руководство Пользователя  | 99  |
| PL | Instrukcja Obsługi        | 113 |
| CS | Uživatelská Příručka      | 120 |
| TR | Kullanıcı Kilavuzu        | 127 |
| UA | Посібник з експлуатації   | 134 |
| AR | دليل المالك               | 1   |

# PRODUCT SAFETY

## Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

**⚠ DANGER**

**You can be killed or seriously injured if you don't immediately follow instructions.**

**⚠ WARNING**

**You can be killed or seriously injured if you don't follow instructions.**

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

## IMPORTANT SAFEGUARDS

**When using electrical appliances, basic safety precautions should always be followed, including the following:**

1. Read all instructions. Misuse of appliance may result in personal injury.
2. To protect against risk of electrical shock, do not put Stand Mixer in water or other liquid.
3. Unplug Stand Mixer from outlet when not in use, before putting on or taking off parts, and before cleaning.
4. European Union Only: Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
5. European Union Only: This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

## PRODUCT SAFETY (CONTINUED)

6. This appliance is not intended for use by persons, including children, with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance in a safe way and understand the hazards involved.
7. The appliance is not to be used by children. The appliance and cord should be out of reach of children.
8. Children should be supervised to ensure that they do not play with the appliance.
9. Avoid contacting moving parts. Keep fingers out of discharge opening.
10. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest Authorised Service Facility for examination, repair, or electrical or mechanical adjustment.
11. The use of attachments/accessories not recommended or sold by KitchenAid may cause fire, electric shock, or injury.
12. Turn the appliance OFF (0), unplug from outlet and detach the Pasta Roller and Cutter Set Attachment from appliance before cleaning and when not in use. Turn the appliance OFF (0) and make sure the motor stops completely before putting on or taking off parts.
13. Do not use the Stand Mixer outdoors.
14. Do not let the Stand Mixer cord hang over the edge of table or counter.
15. Do not let the Stand Mixer cord contact hot surfaces, including the stove.
16. Never leave the appliance unattended while it is in operation.
17. Also, see Important Safeguards included in the Stand Mixer “Owner’s Manual”.
18. Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.
19. Refer to the “Care and Cleaning” section for instructions on cleaning the surfaces in contact with food.

## PRODUCT SAFETY (CONTINUED)

**20.** This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farmhouses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

## SAVE THESE INSTRUCTIONS

For complete details on product information, instructions and videos, including Guarantee information, visit [www.KitchenAid.co.uk](http://www.KitchenAid.co.uk) or [www.KitchenAid.eu](http://www.KitchenAid.eu). This may save you the cost of a service call. To receive a free printed copy of the information online, call **00 800 381 040 26**.

## SPEED SELECTION GUIDE

| ATTACHMENT        | SPEED | NOODLE WIDTH |
|-------------------|-------|--------------|
| Pasta Roller      | 2     | up to 140 mm |
| Lasagnette Cutter | 3     | 12 mm        |
| Fettuccine Cutter | 5     | 6.5 mm       |
| Spaghetti Cutter  | 7     | 2 mm         |
| Capellini Cutter  |       | 1.5 mm       |

## PRODUCT ASSEMBLY

### ATTACHING THE PASTA ROLLER AND CUTTERS

#### Before first use

Before using your Pasta Roller and Cutters Attachment for the first time, clean all parts and accessories by hand (see the “Care and Cleaning” section).

To avoid damage, do not wash or immerse Attachments in water or other liquid. Do not wash in dishwasher.

**NOTE:** These Attachments are designed to be used with pasta dough only. To avoid damaging your Pasta Roller and Cutters, do not cut or roll anything other than pasta.

1. Turn the Stand Mixer OFF (0) and unplug.
2. **For Stand Mixers with a hinged attachment hub cover:** Flip up to open.

**For Stand Mixers with a removable attachment hub cover:** Turn the attachment knob counterclockwise to remove attachment hub cover.

## PRODUCT ASSEMBLY (CONTINUED)

3. Insert attachment shaft housing into the attachment hub, making certain the power shaft fits into the square hub socket. If necessary, rotate the Pasta Roller or Cutter back and forth. The pin on the attachment housing fits into the notch of the hub rim when in the proper position.
4. Tighten the Stand Mixer attachment hub knob until the Attachment is completely secured to the Stand Mixer.

## PRODUCT USAGE

### MAKING PASTA

**IMPORTANT:** When using the Pasta Roller and Cutters, do not wear ties, scarves, loose clothing or long necklaces; gather long hair with a clasp.

1. Prepare pasta dough (see “Recipes” section in online Product Guide). Cut dough into sections that fit in the Pasta Roller.
2. Pull the Roller Adjustment Knob straight out and turn to setting 1. Release the Knob, making certain the pin on the Roller Housing engages the opening on the back of the Adjustment Knob, allowing the knob to fit flush against the Roller Housing.
3. Turn Stand Mixer to speed 2. Feed flattened dough into Rollers to knead. Fold dough in half and roll again. Repeat until dough is smooth and pliable and covers the width of the Roller. Lightly dust pasta with flour while rolling and cutting to aid in drying and separation.
4. Feed dough through Rollers to further flatten the sheet of dough. Change the Roller to setting 3, and repeat the rolling process. Continue to increase Roller Setting until desired thickness is reached. Do not fold the dough during this step.
5. To make noodles, exchange the Pasta Roller for the Pasta Cutter of your choice. Feed the flattened sheets of dough through the Cutter. See the “Roller settings chart” in the online product guide to determine the correct thickness for each type of pasta.

### **⚠ WARNING**

#### **Food Poisoning Hazard**

**Do not let foods that contain perishable ingredients such as eggs, dairy products, and meats remain unrefrigerated for more than one hour.**

**Doing so can result in food poisoning or sickness.**

6. Pasta may be cooked immediately. If drying, place long noodles on KitchenAid Drying Rack (5KPDR), or dry in a single layer on a towel placed on a flat surface.

# PRODUCT DISASSEMBLY

## DISASSEMBLING THE PASTA ROLLER AND CUTTERS

---

1. Turn the Stand Mixer OFF (0) and unplug.
2. Remove the Pasta Roller or Cutter from the Stand Mixer.  
**IMPORTANT:** After removing the Pasta Roller or Cutter from the Stand Mixer, be sure to clean any dried dough. See "Care and Cleaning" for details.
3. After finishing with the Pasta Roller and Cutters, replace the hub cover and tighten the Attachment Knob on the Stand Mixer.  
**NOTE:** Allow Stand Mixer to rest for at least 1 hour after extruding 2 consecutive pasta dough recipes.

## CARE AND CLEANING

### CLEANING THE PASTA ROLLER AND CUTTERS

---

These accessories are designed to be used with pasta dough only. To avoid damaging your Pasta Roller and Cutters, do not insert anything other than pasta dough.

**IMPORTANT:** Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.

**IMPORTANT:** Do not use metal objects to clean out the Pasta Roller and Cutters. Do not wash the Pasta Roller and Cutters in the dishwasher, or immerse in water or other liquids. The Pasta Roller and Cutters should be hand washed.

1. Turn the Stand Mixer OFF (0) and unplug.
2. Completely disassemble Pasta Roller and Cutters. Use the directions from the "Disassembling the Pasta Roller and Cutters" section.
3. After cutting pasta, let Pasta Roller and Cutters air dry for one hour, then remove any dried dough using a Cleaning Brush. If dried dough is difficult to remove, try tapping the Attachment with your hand. Use a toothpick if necessary.

**NOTE:** Never use a knife or any other sharp object to remove excess dough. Do not run a dish towel or any other cloth through the Rollers to clean them.

4. After cleaning out all remaining dried dough, polish the Pasta Roller and Cutters with a soft, dry cloth and store in a dry place at room temperature. Do not wash the Pasta Roller and Cutters in the dishwasher.

## ELECTRICAL EQUIPMENT WASTE DISPOSAL

### DISPOSAL OF PACKING MATERIAL

---

The packing material is recyclable and is marked with the recycle symbol . The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

### RECYCLING THE PRODUCT

---

- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

# DECLARATION OF CONFORMITY

## FOR UNITED KINGDOM

This appliance has been designed, constructed and distributed in compliance with the safety requirements of UK Legislation: Electrical Equipment (Safety) Regulations 2016, Electromagnetic Compatibility Regulations 2016. The Ecodesign for Energy-Related Products and Energy Information (Amendment) (EU Exit) Regulations 2019. The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012.

## FOR EUROPEAN UNION

This appliance has been designed, constructed, and distributed in compliance with the safety requirements of EC Directives: Low Voltage Directive 2014/35/EU, Electromagnetic Compatibility Directive 2014/30/EU, Ecodesign Directive 2009/125/EC, RoHS Directive 2011/65/EU and following amendments.

## TERMS OF KITCHENAID GUARANTEE ("GUARANTEE")

### Covering U.K. - Ireland - South Africa - UAE

KitchenAid Europa, Inc., Nijverheidslaan 3, Box 5, 1853 Strombeek-Bever, Belgium ("Guarantor") grants the end-customer, who is a consumer, a Guarantee pursuant to the following terms.

#### FOR U.K.:

The Guarantee applies in addition to and does not limit or affect the statutory warranty rights of the end-customer against the seller of the product. In summary, the Consumer Rights Act 2015 says products must be as described, fit for purpose and of satisfactory quality. During the expected lifespan of your product your legal rights entitle you to the following:

- Up to 30 days: if your product is faulty, then you can get an immediate refund.
- Up to six months: if your product can't be repaired or replaced, then you're entitled to a full refund, in most cases.
- Up to six years: if your product does not last a reasonable length of time you may be entitled to some money back.

These rights are subject to certain exceptions. For detailed information please visit the Citizens Advice website [www.adviceguide.org.uk](http://www.adviceguide.org.uk) or call **03454 04 05 06**.

#### FOR IRELAND:

The Guarantee applies in addition to and does not limit or affect the statutory warranty rights of the end-customer against the seller of the product under the European Communities (Certain Aspects of the Sale of Consumer Goods and Associated Guarantees) Regulations 2003 (S.I. No. 11/2003)) and other enactments governing the sale of consumer goods.

#### FOR SOUTH AFRICA:

The Guarantee applies in addition to and does not limit or affect the statutory warranty rights of the end-customer against the seller of the product. In summary, the Consumer Protection Act, 2008 says that products must be: (i) reasonably suitable for the purpose for which they are intended; (ii) in good working order, of good quality and free of any defects; (iii) useable and durable for a reasonable period of time, having regard to the use to which they would normally be put and to all the surrounding circumstances; and (iv) in compliance with any applicable standards or any other public regulations.

During the expected lifespan of your product and where the products are not purchased online, your legal rights will entitle you to the following:

- You will be entitled to a full refund, if you did not have the opportunity to examine the product before delivery and if you rejected delivery of the product on the basis that the type and quality of the product was not as reasonably expected or did not reasonably conform to the material specifications.
- Within 5 business days after delivery: you may rescind your purchase and request a refund, if your purchase resulted from direct marketing.
- Within 10 business days after delivery: you will be entitled to a full refund, if it is found that the product was unsuitable for a particular purpose specifically communicated to you by the Guarantor.
- Within 15 business days after delivery: you will be entitled to a refund if: (i) the product was not delivered to you; or (ii) if you returned the product to the Guarantor.
- Within 6 months after delivery: you will be entitled to a refund or a replacement product, if the product is defective or fails to operate in terms of its specifications.

# TERMS OF KITCHENAID GUARANTEE ("GUARANTEE") (CONTINUED)

Where you have purchased a product online your legal rights will be governed by the Electronic Communications and Transactions Act, 2002 and you will be entitled to the following:

- Within 7 days after conclusion of the transaction or after delivery: you may cancel your purchase without reason and without penalty.
- Within 30 days of the date of cancellation of the transaction: you will be entitled to receive a refund, if you have already made payment.
- You will only be liable for the direct costs of returning the product to the Guarantor.

## FOR UAE:

The Guarantee applies in addition to and does not limit or affect the statutory warranty rights of the end-customer against the seller of the product.

## 1. SCOPE AND TERMS OF THE GUARANTEE

- The Guarantor grants the Guarantee for the products mentioned under Section 1.b) which a consumer has purchased from a seller or a company of the KitchenAid-Group within the following countries: U.K., Ireland, or South Africa, or the United Arab Emirates (UAE).
- The Guarantee period depends on the purchased product and is as follows:  
**Two Year full guarantee from date of purchase.**
- The Guarantee period commences on the date of purchase, i.e. the date on which a consumer purchased the product from a dealer or a company of the KitchenAid-Group.
- The Guarantee covers the defect-free nature of the product.
- The Guarantor shall provide the consumer with the following services under this Guarantee, at the choice of the Guarantor, if a defect occurs during the Guarantee period:
  - Repair of the defective product or product part, or
  - Replacement of the defective product or product part. If a product is no longer available, the Guarantor is entitled to exchange the product for a product of equal or higher value.
- If the consumer wishes to make a claim under the Guarantee, the consumer has to contact the country specific KitchenAid service centres or the Guarantor directly at KitchenAid Europa, Inc. Nijverheidslaan 3, Box 5, 1853 Strombeek-Bever, Belgium;

Email-Address U.K.: [CONSUMERCARE.UK@kitchenaid.eu](mailto:CONSUMERCARE.UK@kitchenaid.eu)

Email-Address IRELAND: [CONSUMERCARE.IE@kitchenaid.eu](mailto:CONSUMERCARE.IE@kitchenaid.eu)

Toll Free Number U.K. & IRELAND: **00 800 381 040 26**

## FOR SOUTH-AFRICA:

### Our local KitchenAid Distributor:

KitchenAid Africa  
PO Box 52102  
V&A Waterfront  
Cape Town  
8002

### Contact our distributor:

Telephone: +27 21 555 0700

You can contact our Customer Service Centre for Small Domestic Appliances from 8.30 am to 1.00 pm and from 1.30 pm to 5.00 pm or write to us at the following address: [hello@kitchenaidafrica.com](mailto:hello@kitchenaidafrica.com)

## FOR UAE:

### AL GHANDI ELECTRONICS.

POST BOX NO. 9098,  
DUBAI, UNITED ARAB EMIRATES  
Toll free number: +971 4 2570007

- The costs of repair, including spare parts, and any postage costs (if applicable) for the delivery of a defect-free product or product part shall be borne by the Guarantor. The Guarantor shall also bear the postage costs for returning the defective product or product part if the Guarantor or the country specific KitchenAid customer service centre requested the return of the defective product or product part. However, the consumer shall bear the costs of appropriate packaging for the return of the defective product or product part.
- To be able to make a claim under the Guarantee, the consumer must present the receipt or invoice of the purchase of the product.



# TERMS OF KITCHENAID GUARANTEE ("GUARANTEE") (CONTINUED)

## 2. LIMITATIONS OF THE GUARANTEE

- a) The Guarantee applies only to products used for private purposes and not for professional or commercial purposes.
- b) The Guarantee does not apply in the case of normal wear and tear, improper or abusive use, failure to follow the instructions for use, use of the product at the wrong electrical voltage, installation and operation in violation of the applicable electrical regulations, and use of force (e.g. blows).
- c) The Guarantee does not apply if the product has been modified or converted, e.g. conversions from 120 V products to 220-240 V products.
- d) The provision of Guarantee services does not extend the Guarantee period, nor does it initiate the commencement of a new Guarantee period. The Guarantee period for installed spare parts ends with the Guarantee period for the entire product.
- e) **FOR SOUTH-AFRICA & UAE ONLY:**  
Further or other claims, in particular claims for damages, are excluded unless liability is mandatory by law.


After expiry of the Guarantee period or for products for which the Guarantee does not apply, the KitchenAid customer service centres are still available to the end-customer for questions and information.

Further information is also available on our website:

- For U.K. & Ireland [www.kitchenaid.eu](http://www.kitchenaid.eu)
- For South-Africa: [www.kitchenaidafrica.com](http://www.kitchenaidafrica.com)
- For UAE: [www.KitchenAid-MEA.com](http://www.KitchenAid-MEA.com)

## PRODUCT REGISTRATION

Register your new KitchenAid appliance now: <http://www.kitchenaid.eu/register>

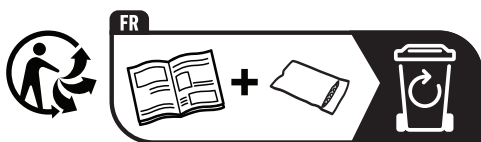

# KitchenAid

©2022 All rights reserved.

KITCHENAID and the design of the stand mixer are trademarks in the U.S. and elsewhere.