

# ViVOpay VP3350 Integration Manual



80178501-001 Rev. D 8 March 2023

> ID TECH 10721 Walker Street, Cypress, CA 90630-4720 Tel: (714) 761-6368 Fax (714) 761-8880 www.idtechproducts.com

#### Copyright © 2023 ID TECH. All rights reserved.

ID TECH 10721 Walker Street Cypress, CA 90630 USA

This document, as well as the software and hardware described in it, is furnished under license and may be used or copied online in accordance with the terms of such license. The content of this document is furnished for information use only, is subject to change without notice, and should not be construed as a commitment by ID TECH. While every effort has been made to ensure the accuracy of the information provided, ID TECH assumes no responsibility or liability for any unintentional errors or inaccuracies that may appear in this document. Except as permitted by such license, no part of this publication may be reproduced or transmitted by electronic, mechanical, recording, or otherwise, or translated into any language form without the express written consent of ID TECH.

ID TECH and ViVOpay are trademarks or registered trademarks of ID TECH.

#### **Warranty Disclaimer**

The services and hardware are provided "as is" and "as-available" and the use of the services and hardware are at its own risk. ID TECH does not make, and hereby disclaims, any and all other express or implied warranties, including, but not limited to, warranties of merchantability, fitness for a particular purpose, title, and any warranties arising from a course of dealing, usage, or trade practice. ID TECH does not warrant that the services or hardware will be uninterrupted, error-free, or completely secure.

#### FCC warning statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The user manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** The grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter and must be installed to provide a separation distance of at least 20cm from all persons.

**Cautions and Warnings** 

	Caution: Danger of Explosion if battery is incorrectly charged. Use only standard USB
	5V power source.
	Device contains a lithium battery. Approved temperature range for storage: -20°C to
	+60°C. Disposal: Contact your local recycling center.
$\wedge$	Warning: Avoid close proximity to radio transmitters, which may reduce the
7	capabilities of the reader.

#### Internal Rechargeable Battery Warning<sup>1</sup>

**Danger:** Do not attempt to replace the internal rechargeable lithium-ion battery. Replacing the original battery with an incompatible type may result in an increased risk of personal injury or property damage due to explosion, excessive heat, or other risks. Do not attempt to disassemble or modify the battery pack. Attempting to do so can cause a harmful explosion or battery fluid leakage.

When disposing of the battery, comply with all relevant local ordinances or regulations. Do not dispose of the battery pack in municipal waste. Dispose used batteries according to the instructions.

The battery pack contains a small amount of harmful substances.

#### To avoid injury:

- Keep the battery pack away from open flames or other heat sources.
- Do not expose the batter pack to water, rain, or other corrosive liquids.
- Do not leave the battery in an environment with extremely low air pressure. It may result in an explosion or the leakage of flammable liquid or gas from the battery.

To extend battery life, we recommend charging the battery to at least 30% to 50% capacity each time and recharging it every three months to prevent over discharge.

<sup>&</sup>lt;sup>1</sup> Note that the VP3350 is a PCI SRED certified device; any attempt to replace the internal Lithium-Ion battery will result in a device tamper, rending the unit inoperable.

# **Revision History**

Date	Rev	Changes	Ву
12/08/2022	А	Initial release.	СВ
02/06/2023	В	Updated LED and Sound State Indicators table and footnote.	СВ
02/16/2023	С	Updated mounting guidelines and diagrams.	СВ
03/08/2023	D	Tag 9F33: Updated byte 2 bit 5 (feature not supported).	СВ

### **Table of Contents**

1. INTRODUCTION	6
2. MAJOR VP3350 FEATURES	6
2.1. Contactless NFC Features and Brand Certifications	6
2.2. Other Agency Approvals and Compliances	7
2.3. Operation and Storage: Environmental Limits	7
2.4. Power Consumption	7
2.5. 24-Hour Device Reboot	
3. VP3350 CONNECTORS AND INTERFACES	8
4. BLUETOOTH PAIRING INSTRUCTIONS	9
4.1. Battery Charging Instructions	10
4.2. Tamper and Failed Self-Check Indicators	10
4.3. VP3350 LED and Sound State Indicators	
4.4. iOS Connectivity: BLE and VP3350	12
5. ID TECH UNIVERSAL SDK	12
5.1. Updating VP3350 Firmware	13
6. UNIVERSAL SDK DEMO APP	13
6.1. Using the Demo Application	13
7. VP3350 LOW-LEVEL COMMANDS	15
7.1. Activate Transaction Command (02-40)	15
7.2. Set CA Public Key (D0-03)	
7.3. Get Processor Type (09-02)	17
7.4. Get Main Firmware Version (09-03)	18
7.5. Get Hardware Information (09-14)	
7.6. Get Module Version Information (09-20)	20
7.7. Get Serial Number (12-01)	
7.8. Contact Set ICS Identification (60-16)	22
7.9. Contact Set Terminal Data (60-06)	
7.10. Contact Set Application Data (60-03)	29
8. BASIC CARD READING DATA FLOW	
8.1. Example: Reading a Card via Firmware Commands	
8.2. Example: Reading a Card via Universal SDK Methods	31
8.3. Example: Reading a Card via the USDK Demo App	31
9. APPLICATION DEVELOPMENT CONSIDERATIONS	
9.1. Performing Key Injection on a VP3350 via Tablet	32
10. VP3350 MOUNTING AND EMV CONTACTLESS LOGO REQUIREMENTS	33
10.1. Contactless Mounting	
10.2. VP3350 Power Requirements and Mounting	33
11. PERIODIC INSPECTION INSTRUCTIONS	35
12. DECOMMISSIONING PCI-CERTIFIED DEVICES	35
13. TROUBLESHOOTING	36
13.1. Tamper Detection Codes	37
14 FOR MORE INFORMATION	38

# 1. Introduction

The ViVOpay VP3350 is ID TECH's latest PCI 6.X SRED-certified and non-SRED mobile reader. The VP3350 supports Magstripe, EMV contact, and contactless transactions using either USB-C, Lighting, and/or Bluetooth connections.

The VP3350's compact form factor and Bluetooth interface make it ideal for mobile applications where smart card reading is required as well as incorporated into a case or stand associated with a countertop POS terminal. As a mobile reader, VP3350 works in conjunction with Android as well as iOS phones and tablets via BLE. The VP3350 is designed to be compatible with a wide range of third-party payment applications, and the ID TECH Universal SDK (described <u>further below</u>) is available for developing applications that communicate with VP3350.

Contact your acquirer, gateway, or POS partner for instructions on setting up and pairing the VP3350 to a compatible payment application and associated host device.

# 2. Major VP3350 Features

- Communicates via Bluetooth BLE (Bluetooth Low Energy)
- Bluetooth communication supports iOS and Android platforms
- Communicates to iPhone host devices via Lightning connector
- Communicates to iPad or Android host devices via USB-C male connector
- USB-C 2.0 female connector supports battery charging or communication with Android or Windows host systems
- Rechargeable battery, no external power necessary
- Supports pass-through charging
- ICC: EMV Level 1 Contact certified and integrated ID TECH's EMV L2 Gen 3 Common Contact kernel
- Front-facing contactless transaction support via Near Field Communication (NFC)
- Magstripe reading
- LED status indicator
- Audio feedback
- Field-upgradable firmware
- Low power consumption when reader is in standby mode
- Compact and ergonomic design to integrate with a variety of mobile devices
- Supports Triple DES, AES128, and TransArmor with DUKPT key management
- Supports 20 contact and 8 contactless AIDs, for a total of 28 AIDs

### 2.1. Contactless NFC Features and Brand Certifications

- ISO 14443 Type A&B
- ISO 18092 (P2P)
- MasterCard® MChip (Formerly PayPass)
- Discover® DPAS
- American Express® ExpressPay
- Interac
- Interac Transit
- MIFARE native support

- Apple Pay
- Apple VAS
- Samsung Pay NFC
- Android Pay
- Google Pay / Softcard Smart Tap 2.1

# 2.2. Other Agency Approvals and Compliances

- CE (EN55032/EN55035, Class- B)
- FCC (Part 15, Class-B)
- RoHS (DIRECTIVE 2015/863/EU)
- UI
- REACH
- EMV Contact L1&L2
- EMV Contactless L1 and majority of Contactless 2
- TQM
- PCI PTS 6.X SRED

# 2.3. Operation and Storage: Environmental Limits

ltem	Specification	Note
Operating Temperature	0 °C to 55 °C or 32°F to 131°F	Non-condensing.  Product operation temperature is limited to this range due to constraints of the Li-Battery specification.
Storage Temperature	-20 °C to 60 °C	Non-condensing.  Product storage temperature is limited to this range
	-4°F to 140°F	due to constraints of the Li-Battery specification.
Operating Humidity	Up to 95%	Non-condensing.
Storage Humidity	Up to 95%	Non-condensing.

# 2.4. Power Consumption

- Minimum 800 MSR transaction per charge (with 30 second interval)
- Minimum 500 contact transactions per charge (with 30 second interval)
- Minimum 400 contactless transactions per charge (with 30 second interval)
- Minimum 200 contactless + 200 contact + 100 MSR transactions per charge (with 30 second interval)

Maximum power draw: 500mA for battery charging when input power is over 1A.

### 2.5. 24-Hour Device Reboot

Per PCI Requirements, this device reboots every 24 hours. Please contact your device integrator if you need to check the reboot time for your unit.

# 3. VP3350 Connectors and Interfaces

The VP3350 is designed to work Windows, Android, and iOS via a physical USB-C, Lightning, and Bluetooth communication.

- USB-C communicates with popular Android mobile phones and tablets.
- Lightning connectors communicate with popular mobile iOS devices.
- Bluetooth connection supports both Android and iOS.
- USB-C allows communication to an Android, iOS, or Windows host or allows for pass-through charging to the host device.

When communicating over USB, the VP3350's default emulation mode is USB HID; the reader can also emulate a USB HID-KB interface<sup>2</sup>.

-

<sup>&</sup>lt;sup>2</sup> In development.

# 4. Bluetooth Pairing Instructions

In addition to the following instructions, see the section on <u>iOS Connectivity</u> for more information on using an iPad or iPhone in conjunction with the VP3350.

- 1. Enable the Bluetooth device search function on the host device (smart phone or tablet).
- 2. Make sure the VP3350 is charged or connected to a power source via USB.
  - When connected to a power source, the VP3350 automatically activates Bluetooth.
- 3. When not connected to a power source, press the VP3350's power button to automatically activate Bluetooth.
- 4. Find a Bluetooth device named **IDTECH-VP3350-XXXXX** on the host smart phone or tablet and select **Pair**.
- 5. Enter the password for pairing. The default password is **123456**.
- 6. Follow the payment transaction instructions provided by a compatible payment application maker to complete a transaction.

The VP3350 will remain connected via Bluetooth to the host device indefinitely when powered via the USB cable. If the unit is operating on battery power, it will go to sleep after 20 seconds of idling to extend battery life. To perform a transaction again, press the power button to reestablish the Bluetooth connection.

When connecting to an iOS device, please install a compatible payment application and follow the instructions provided by that application's maker. See <u>iOS Connectivity: BLE and VP3350</u> below for more information.

# 4.1. Battery Charging Instructions

VP3350 Lighting and Bluetooth readers are powered by a lithium-ion polymer battery and are delivered in a partially charged state. Be sure to fully charge the VP3350 before using it for the first time. Allow two to three hours for the initial charge.

Use a standard USB to USB-C cable to charge the unit. An LED battery indicator displays the current battery charging status<sup>3</sup>.

**Warning:** Do not use "fast chargers" with VP3350 readers. Only use a standard USB to USB-C cable.

# 4.2. Tamper and Failed Self-Check Indicators

The VP3350 displays the following indicators when it has been tampered or has any of the other following internal issues, such as an expired certificate, missing key, or similar fault discovered during a self-check.



Indicator	Tampered Status	Other Issue Status		
Front Four LEDs	All LEDs blink red	All LEDs blink red		
Buzzer	Alarm tone	Alarm tone		

<sup>&</sup>lt;sup>3</sup> Use the **Get Battery Level (F0-02)** command to retrieve battery level.

### 4.3. VP3350 LED and Sound State Indicators

The VP3350 uses the following LEDs and sounds to indicate various statuses, including power management, Bluetooth, transactions, and security.

Device State	LED1	LED2	LED3	LED4	Sound
Battery Charging Full <sup>4</sup>					None
Dattery charamar an	on	on	on	on	
Low Battery (Power under 25%) <sup>3</sup>		0	0	0	None
2511 Battery (1 511ch ander 2516)	on	off	off	off	
Bluetooth Connected					Unit beeps once
Bidetootii comiected	on	on	on	on	o.me beeps once
Bluetooth Connection Failed					Unit beeps twice
Biactootii connection i anca	on	on	on	on	oe beeps evilee
Bluetooth Working		0		0	
Bidetootii Working	blink	off	blink	off	
Unit Ready		0	0	0	None
omencady	blink	off	off	off	ruone
Transaction Started		0	0	0	None
Transaction Started	on	off	off	off	ruone
Transaction Successful	blink	blink	blink	blink	Unit beeps once
	once	once	once	once	
Transaction Failed	0	0	0	0	Unit beeps twice
	off	off	off	off	
Unit Tampered					Unit beeps
	blink	blink	blink	blink	
Device Deactivated					Unit beeps
	blink	blink	blink	blink	•
Power Off/Low-Power	0	0	0	0	None
Consumption Mode	off	off	off	off	

<sup>&</sup>lt;sup>4</sup> Use the **Get Battery Level (F0-02)** command to retrieve battery level. When charging, the reader displays three greed LEDs to indicate 75% charge, two green LEDs to indicate 50% charge, and one red LED to indicate a charge under 25%.

### 4.4. iOS Connectivity: BLE and VP3350

The VP3350 uses Bluetooth 5.0, also known as Bluetooth BLE (Bluetooth Low Energy). Unlike previous versions of Bluetooth, BLE does not require users to first pair their devices through the Bluetooth Settings in Apple iOS. If a payment application provider has enabled BLE scanning in their application, Apple iOS scans and locates all BLE devices in range to automatically connect with the VP3350.

It is critical to note that if the VP3350 is paired via the iOS Settings page, it will display as a connected device but not function with a payment app.

Unlike other operating systems that can detect or specify a BLE device by its MAC address, Apple does NOT allow users to specify a BLE device by MAC address for security reasons. Instead, after a device is selected by its "friendly" name (see the next paragraph), the Apple iOS calculates a unique identifier to allow any that device to make further connections directly.

The VP3350 has a default friendly name of **IDTECH-VP3350-XXXXX**. This is the default name the ID TECH Universal SDK uses to connect to the first VP3350 it encounters if no other friendly name is set in the SDK, or when the iOS-generated device identifier is not provided. See links given near the end of this document for information about the Universal SDK.

**Note:** The Universal SDK is primarily of interest to developers. If an application provider or POS software partner has already provided software to use with the VP3350, you do not need to obtain the SDK.

#### 5. ID TECH Universal SDK

By virtue of its EMV L2 kernel, VP3350 is designed to be compatible with a wide range of third-party payment applications. ID TECH offers a Universal SDK (available for iOS, Android, or Windows) to enable rapid application development using VP3350 as the target device. The languages supported include Objective C (on iOS), Java (on Android), and C# (on Windows). The Universal SDK includes rich, powerful libraries that make sending commands to the VP3350 comparatively easy while greatly facilitating debugging and event handling.

To obtain the Universal SDK free of charge, visit ID TECH's VP3350 product page and select the version of the SDK that applies to your desired host platform (Android, iOS, Linux, MacOS, or Windows).

Normally, development of applications that take advantage of VP3350's capabilities can be done in a high-level language like C# or Java (using convenience objects and data structures defined in the Universal SDK), obviating the need to send byte commands directly. Nevertheless, it is possible to communicate with the device at a low level if necessary. For a command reference for VP3350, request the *NEO Interface Developers Guide* (IDG), P/N 80139403-001. This document includes not only low level (firmware) commands but error codes, response codes, and information on various default settings.

# 5.1. Updating VP3350 Firmware

ID TECH strongly recommends updating firmware via the Universal SDK. Consult the Universal SDK Guide for your desired platform (included in the ZIP file downloaded from the VP3350 product page) for integration details.

**Note:** Firmware downloads must be done via a USB-C cable for PC, a male USB-C cable for mobile Android devices, or a Lightning cable for iOS devices; VP3350 readers do not support firmware over Bluetooth.


# 6. Universal SDK Demo App

The Universal SDK comes with a rich, fully featured demo app that allows users to run the VP3350 in USB mode. Visit the <u>VP3350 product page</u> to download the Universal SDK Demo app as a standalone executable, separate from the SDK; the full SDK is not required to use the demo. Be sure to check out the <u>Universal Demo QuickStart Guide</u> for more detailed instructions about using the Universal SDK Demo app.

# 6.1. Using the Demo Application

Follow the steps below to run the Universal SDK Demo app on Windows:

- 1. Plug the VP3350 into the host device with a USB-C cable (not included).
- 2. Double-click the **UniversalSDKDemo.exe** file and allow a few seconds for the main window to appear (see illustration below).

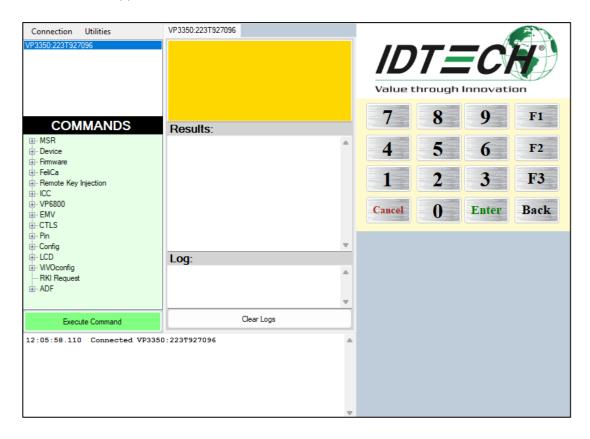

The Universal SDK Demo app displays VP3350's available commands in a command tree, as shown above. Single-click on a command to populate the center panel of the window with optional settings relevant to the command (for example, "Amount" and "Start EMV Additional Tags" above). In some cases, text fields appear, allowing users to enter custom values.

To execute a command, double-click it in the command tree (or use the **Execute Command** button at the bottom of the window). The command executes in real time and a data trace appears automatically in the center and/or right-hand panels. Use the Clear Logs button to clear both panels.

# 7. VP3350 Low-Level Commands

The following are commonly-used commands for the VP3350. For a full list of available commands, contact your ID TECH representative for the NEO 2 Interface Developer's Guide.

# 7.1. Activate Transaction Command (02-40)

The **Activate Transaction** command begins a contactless EMV or contactless MagStripe Card transaction.

**Note:** While an **Activate** command is in progress, readers only accepts a **Cancel** or **Stop** command. Do not send other commands until **Activate Transaction** has completed, because the reader will interpret these as a **Cancel Transaction** command.

To control the behavior, use the DFEF37 and DFEF3C tags:

Tag	Length	Description	Example
DF EF 37	01	Define the type of interface to be activated with 02-40.  Interface selection:  Bit 0: MSR Bit 1: Contactless Bit 2: Contact	DF EF 37 01 07 07 = 0000 0111 This activates transaction for all 3 interfaces.
DF EF 3C	03	Fallback support and Timeout value for waiting for the next command (mainly to support EMV workflow).  Byte 1: Fallback support  Ox00: not support fallback  Ox01: support fallback  Byte 2~3: Timeout for next command (Unit: Sec) (Hex format)  O0 0A = 10s  O1 00 = 256s	DF EF 3C 03 01 00 60 Fallback is supported, and the timeout is set to 96 seconds before the transaction times out.

#### Example:

#### **Command Frame**

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14 Byte 14+n-1	Byte 14+n	Byte 15+n
Header Tag & Protocol Version	Command	Sub- Command	Data Length (MSB)	Data Length (LSB)	Data	CRC (LSB)	CRC (MSB)
ViVOtech2\0	02h	40h			See Data Format below		

### **Activate Transaction Command Frame Data Format**

Data Item	Length (bytes)	Description
Timeout	1	Time in seconds that the reader waits for a card to be presented before
		timing out and returning an Error response. The reader will continue to poll
		for this amount of time if no card is found.
		Note that if a card is found, the transaction may not complete within the timeout period.
		This field must be present in the <b>Activate</b> command.
		Format: Binary
TLV Data	varies	See Activate Command TLVs in the NEO 2 IDG.

#### **Response Frame**

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14 Byte 14+n-1	Byte 14+n	Byte 15+n
Header Tag & Protocol Version	Command	Status Code	Data Length (MSB)	Data Length (LSB)	Data	CRC (MSB)	CRC (LSB)
ViVOtech2\0	02h	See Status Code Table			See Response Frame Data Format		

**Note:** The information above omits many command details, particularly TLV information. See the *NEO 2 Interface Developer's Guide* (available from your ID TECH representative) for the full **Activate Transaction (02-40)** description.

# 7.2. Set CA Public Key (DO-03)

The **Set CA Public Key** command adds a new key to the reader.

#### **Command Frame**

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14 – 18	Byte 19	Bytes 19-n	Byte n+1	Byte n+2
Header Tag & Protocol Version	Cmd	Sub Cmd	Length (MSB)	Length (LSB)	RID (5 bytes)	Key Index (1 byte)	Key Data	CRC (LSB)	CRC (MSB)
ViVOtech2\0	D0h	03h	varies	varies	varies	varies	See below	Varies	Varies

### Key Data is as follows: (all binary)

Byte	Name	Length (bytes)	Description
0	Hash Algorithm	1	The only algorithm supported is SHA-1. The value is set to 01h
1	Public Key Algorithm	1	The encryption algorithm in which this key is used. Currently support only one type: RSA. The value is set to 01h
3-22	Checksum/Hash	20	Checksum which is calculated using SHA-1 over the following fields:  RID & Keylndex & Modulus & Exponent  where the exponent is either one byte or 3 bytes (although we store it

			in a 4-byte field)
23-26	Public Key Exponent	4	Actually, the real length of the exponent is either one byte or 3 bytes. It can have two values: 3, or 65537.
27-28	Modulus Length	2	Indicates the length of the next field, MSB followed by LSB.
29-n	Modulus	Variable	This is the modulus field of the public key. Its length is specified in the field above.

### **Response Frame**

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14	Byte 15
Header Tag & Protocol Version	Cmd	status	Length (MSB)	Length (LSB)	CRC (LSB)	CRC (MSB)
ViVOtech2\0	DOh	See Key Manager status codes	00h	00h	Calculated	Calculated

# 7.3. Get Processor Type (09-02)

The **Get Processor Type** command returns a processor type TLV.

#### **Command Frame**

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14	Byte 15
Header Tag & Protocol	Command	Sub- Command	Data Length (MSB)	Data Length (LSB)	CRC (LSB)	CRC (MSB)
ViVOtech2\0	09h	02	00h	00h		

# **Response Frame**

Byte 0-9	Byte 10	Byte 11	Byte12	Byte 13	Byte 14 Byte 13+n	Byte 14+n	Byte 15+n
Header Tag & Protocol	Command	Status Code	Data Length (MSB)	Data Length (LSB)	Data	CRC (MSB)	CRC (LSB)
ViVOtech2\0	09h	See Status Code Table			See below		

The **Get Processor Type** sub-command returns a TLV string as follows:

Tag: 0xDF61Length: 0x02

• **Value:** a field representing the processor type.

The following types of processors may be identified in the **Value** field:

Processor Type (hex values)	Description
45 00	ARM7/ LPC21xx
4D 00	ARM Cortex-M4/ K21 Family
4E 00	ARM Cortex-M4/ K81 Family

The following example shows the command and response.

**Command:** Get Processor Type: 56 69 56 4F 74 65 63 68 32 00 09 02 00 00 F0

**Response:** 56 69 56 4F 74 65 63 68 32 00 09 00 00 05 DF 61 02 4D 00 AC 4D

# 7.4. Get Main Firmware Version (09-03)

The **Get Main Firmware Version** command returns main firmware version TLV.

### **Command Frame**

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14	Byte 15
Header Tag & Protocol	Command	Sub- Command	Data Length (MSB)	Data Length (LSB)	CRC (LSB)	CRC (MSB)
ViVOtech2\0	09h	03	00h	00h		

#### **Response Frame**

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14	Byte 15	Byte 0-9
Header Tag & Protocol	Command	Status Code	Data Length (MSB)	Data Length (LSB)	Data	CRC (MSB)	CRC (LSB)
ViVOtech2\0	09h	See Status Code Table			See below		

The Get Main Firmware Version sub-command returns a TLV string as follows:

• **Tag:** 0xDF62

• Length: Varies

• **Value:** Varies field representing the main firmware version.

The following example shows the command and response.

**Command:** Get Main Firmware Version: 56 69 56 4F 74 65 63 68 32 00 09 03 00 00 C0 CE

**Response:** 56 69 56 4F 74 65 63 68 32 00 09 00 00 14 DF 62 11 43 72 61 6E 65 56 65 6E 64 69 5F 31 2E 30 2E 30 00 E1 5D

# 7.5. Get Hardware Information (09-14)

The **Get Hardware Information** command retrieves information about the reader's hardware.

#### **Command Frame**

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14	Byte 15
Header Tag	Command	Sub-	Data Length	Data Length	CRC	CRC
& Protocol	Command	Command	(MSB)	(LSB)	(LSB)	(MSB)
ViVOtech2\0	09h	14h	00h	00h		

#### **Response Frame**

Byte 0-9	Byte 10	Byte 11	Byte12	Byte 13	Byte 14 Byte 13+n	Byte 14+n	Byte 15+n
Header Tag & Protocol	Command	Status Code	Data Length (MSB)	Data Length (LSB)	Data	CRC (MSB)	CRC (LSB)
ViVOtech2\0	09h	See Status Code Table			See below		

The format for hardware module version information returned is "human readable," consisting of fields that are separated by commas, and lines separated by carriage return and line feed characters:

```
<module type>,<module name><CRLF>
<chip version>
```

The following example shows the hardware version information subcommand and the information being returned (in ASCII format).

**Command:** Get Hardware Version Information: 56 69 56 4F 74 65 63 68 32 00 09 14 00 00 33 08

#### Response: For example, a VP5300 returns

5669564f7465636832000900001548572c205650353330300d0a4b38314620526576 3477d5

In ASCII: HW, VP5300 <CR><LF>K81F.Rev4

# 7.6. Get Module Version Information (09-20)

The **Get Module Version Information** command retrieves the reader's module information.

#### Command Frame

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14	Byte 15
Header Tag &	Command	Sub-	Data Length	Data Length	CRC	CRC
Protocol	Command	Command	(MSB)	(LSB)	(LSB)	(MSB)
ViVOtech2\0	09h	20h	00h	00h		

#### Response Frame

Byte 0-9	Byte 10	Byte 11	Byte12	Byte 13	Byte 14 Byte 13+n	Byte 14+n	Byte 15+n
Header Tag & Protocol	Command	Status Code	Data Length (MSB)	Data Length (LSB)	Data	CRC (MSB)	CRC (LSB)
ViVOtech2\0	09h	See Status Code Table			See below		

If there is an error, the reader returns the appropriate status code with an empty data field (Data Length = 0000h).

The format for module version information returned is "human readable," consisting of fields separated by commas and lines separated by carriage return and line feed characters:

<module type>,<module name and spec. version>,[<implementation
version>],<CRLF>

The following example shows the module version information subcommand and the information being returned (in ASCII format).

Command: Get Module Version Information: 56 69 56 4F 74 65 63 68 32 00 09 20 00 00 56 11

#### Response:

#### **ASCII translation of the data field:**

FW, Vendi V1.00,, <CR><LF>

FS&DB V1.00,,<CR><LF>

CL AppSel,PPSE Module, v1.00,,<CR><LF>

CL AID, MasterCard PayPass M/Chip v3.0.2, Vendi v1.0.0,,<CR><LF>

CL AID, Visa VCPS 2.1.3, v0.99,, <CR><LF>

CL AID, Amex ExpressPay 3.0, v1.00,, <CR><LF>

CL AID, Discover DPAS 1.0 Zip 3.1.2, v1.00,,<CR><LF>

CL AID,Interac 1.5, v1.00,,<CR><LF>

CL L1,EMV 4.3 L1, v1.00<NUL>

# 7.7. Get Serial Number (12-01)

The **Get Serial Number** command instructs the ViVOpay reader to return the 15-digit serial number stored in its non-volatile memory. If a serial number has not been previously set in the reader, this command fails with a **Command Not Allowed** error status. If the command frame is not valid, the reader returns an error response frame.

#### **Command Frame**

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14	Byte 15
Header Tag & Protocol Version	Command	Sub- Command	Data Length (MSB)	Data Length (LSB)	CRC (LSB)	CRC (MSB)
ViVOtech2\0	12h	01h	00h	0Fh		

The serial number will be returned tail-padded with **0x00** to a length of 15.

#### Example:

**TX:** 56 69 56 4F 74 65 63 68 32 00 12 01 00 00 18 A5

**RX:** 56 69 56 4F 74 65 63 68 32 00 12 00 00 0F **36 33 30 5A 30 30 30 30** 

**30 31 00 00 00 00 00** 94 BC

#### Response Frame

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14 Byte 14+n-1	Byte 14+n	Byte 15+n
Header Tag & Protocol Version	Command	Status Code	Data Length (MSB)	Data Length (LSB)	Data	CRC (MSB)	CRC (LSB)
ViVOtech2\0	12h	See Status Code Table	00h	0Fh	15-digit Serial Number		

# 7.8. Contact Set ICS Identification (60-16)

The **Contact Set ICS Identification** command sets the reader's ICS terminal configuration number (Contact Command EMV L2 includes 4 approved configurations of certification: 1C, 2C, 3C, or 4C).

This command affects the **Contact Set Terminal Data (60-06)** command. Generally, readers call 60-16 first, then 60-06.

#### **Examples:**

**Set 3C configuration:** 5669564f746563683200601600010392ed

**Reader responds with:** 5669564f74656368320060000003d35 (Success)

#### Now set terminal data (TLVs) with config values appropriate to 3C:

**Reader responds with:** 5669564f74656368320060000003d35 (Success)

#### **Command Frame**

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14 Byte 14+n-1	Byte 14+n	Byte 15+n
Header Tag & Protocol Version	Command	Sub- Command	Data Length (MSB)	Data Length (LSB)	Data	CRC (LSB)	CRC (MSB)
ViVOtech2\0	60h	16h	00h	01h	ICS Identification		

### ICS Identification:

0x01 → Identification 1C

0x02 → Identification 2C (Default)

0x03 → Identification 3C

0x04 → Identification 4C

#### Response Frame

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14 Byte 14+n-1	Byte 14+n	Byte 15+n
Header Tag & Protocol Version	Command	Status Code	Data Length (MSB)	Data Length (LSB)	Data	CRC (MSB)	CRC (LSB)
ViVOtech2\0	60h	See Status Code Table	00	00			

# 7.9. Contact Set Terminal Data (60-06)

The **Contact Set Terminal Data** command creates new terminal data according to the TLVs passed in. Terminal data is mandatory and seldom changes. It represents configuration data that usually gets set one time in pre-production and never changes after.

#### **Command Frame**

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14 Byte 14+n-1	Byte 14+n	Byte 15+n
Header Tag & Protocol Version	Command	Sub- Command	Data Length (MSB)	Data Length (LSB)	Data	CRC (LSB)	CRC (MSB)
ViVOtech2\0	60h	06h			Data Objects		

**Data Objects:** <TagCounterL><TagCounterH><TLV1><TLV2>...<TLVn>.

**Where:** <TagCounterL><TagCounterH>: the Number of <TLV> tags.

#### **Response Frame**

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14 Byte 14+n-1	Byte 14+n	Byte 15+n
Header Tag & Protocol Version	Command	Status Code	Data Length (MSB)	Data Length (LSB)	Data	CRC (MSB)	CRC (LSB)
ViVOtech2\0	60h	See Status Code Table			See Response Frame Data Format		

#### Note:

If a <TLV> format was bad, the response status code is **0x05**. If flash error, the response status code is **0x62**.

### **Terminal Data List Example**

Data ID	Tag	Value name	Length (Byte)	Data
1	5F36	Transaction currency exponent	1	02
2	9F1A	Terminal county code	2	08 40
3	9F35	Terminal type	1	21
4	9F33	Terminal capability	3	60 28 C8
5	9F40	Additional terminal capability	5	F0 00 F0 A0 01
6	9F1E	IFD serial number	8	54 65 72 6D 69 6E
				61 6C
7	9F15	Merchant category code	2	12 34
8	9F16	Merchant identifier	15	30 30 30 30 30 30
				30 30 30 30 30 30
				30 30 30
9	9F1C	Terminal identification	8	38 37 36 35 34 33
				32 31
10	9F4E	Merchant name and location	<=64	31 30 37 32 31 20
				57 61 6C 6B 65 72
				20 53 74 2E 20 43
				79 70 72 65 73 73
				2C 20 43 41 20 2C
				55 53 41 2E
11	DF26	Terminal supports CRL	1	01
12	DF10	Language	Var. up to	65 6E 66 72 65 73
			128	7A 68
13	DF11	Support transaction log	1	00
14	DF27	support exception file	1	00
15	DFEE15	Terminal support ASI	1	01
16	DFEE16	Terminal encrypt mode	1	00
17	DFEE17	Terminal entry mode for ICC	1	07
18	DFEE18	Terminal encrypt mode for MSR	1	80
19	DFEE1E	Contact terminal configuration	8	D0 DC 20 D0 C4 1E 16 00
20	DFEE1F	Issuer script limit	1	80
21	DFEE1B	ARC define	8	30 30 30 31 35 31
21	DILLID	And define		30 30
22	DFEE20	ICC power on detect waiting time	1	3C
23	DFEE21	ICC L1 waiting time	1	OA
24	DFEE22	Driver waiting time. byte 1 -> Menu. byte 2 -> Get Pln. byte 3 -> MSR	3	32 3C 3C

The Contact Common EMV L2 comes with four approved configurations as shown below (1C, 2C, 3C, 4C); these correspond to the scenarios defined by EMVCo in tag 9F35. Parameters marked as Major Parameters usually cannot be changed without causing a checksum error, although certain flag bits (see tables below) can be changed. The Major Parameters are considered read-only because these are the settings the device was certified with for EMV L2 certification.

		Terminal co	nfiguration		
Identification	Tag	1C	2C	3C	4C
Major	9F33	60 F8 C8	60 28 C8	60 D8 C8	60 08 C8
parameters	9F35	22	21	25	25
	9F40	F0 00 F0 A0 01	F0 00 F0 A0 01	60 00 F0 50 01	60 00 F0 50 01
	DF11	01	00	01	01
	DF26	01	01	01	01
	DF27	00	00	00	00
	DFEE1E	F0 DC 3C F0 C2	D0 DC 20 D0 C4	F0 DC 24 F0 C2	D0 9C 20 F0 C2
		9E 96 00	1E 16 00	0E 16 00	0E 16 00

Tag	Descr	iption	1											Length
9F33	Term	inal Ca	apabili	ties										3
	Byte	1												
	b8	b7	b6	b5	b4	b3	b2	b1	Mea	ning		Cha	nge	
	1	Х	Х	Х	Х	Х	Х	Х	Man	ual key e	ntry			
	Х	1	Х	Х	х	Х	Х	Х	Mag	netic stri	pe			
	Х	Х	1	Х	Х	Х	Х	Х	IC w	ith conta	cts	Maj	or	
	Х	Х	Х	0	Х	Х	Х	Х	RFU					
	Х	Х	Х	Х	0	Х	Х	Х	RFU					
	Х	Х	Х	Х	Х	0	Х	Х	RFU					
	Х	Х	Х	Х	Х	Х	0	Χ	RFU					
	Х	Х	Х	Х	Х	Χ	Χ	0	RFU					
	Byte:	7												
	b8	b7	b6	b5	b4	b3	b2	b1	Mea	ning		Cha	ange	
	1	х	х	х	х	х	х	х	Plai	ntext PIN	l for IC	Ma	ijor	
									veri	fication				
	Х	1	Х	Х	Х	х	Х	Х		phered F		Ma	ijor	
									_	ne verific				
	Х	Х	1	Х	Х	х	Х	Х		ature(pa		Ma		
	X X	X	X	0	X	x	x	X	+	supporte		Ma	<mark>ijor</mark>	
	Х	Х	Χ	Χ	1	Х	Х	Х	_	CVM Req	uired	Ma	ijor	
	Х	Х	Х	Х	Х	0	Х	Х	RFU					
	Х	Х	Х	Х	Х	Х	0	Х	RFU					
	Х	Χ	Χ	Χ	Χ	Х	Χ	0	RFU					
	Byte :	2												
	b8	b7	b6	b!	5 b	)4	b3	b2	b1	Meanir	ng	Cha	ange	
	1	Х	Х	Х	х		Х	Х	Х	SDA		Ма		
	Χ	1	х	х	х		х	Х	Х	DDA		Ма	ijor	
	Х	Х	1	Х	х		Х	Х	Х	Card ca	pture			
	Х	х	х	0	х	:	х	Х	Х	RFU				
	Х	х	Х	х	1		Х	Х	Χ	CDA		Ма	ijor	
	Х	х	Х	х	х		0	Х	Х	RFU				
	Х	х	х	х	х	: :	х	0	Х	RFU				
	Х	Х	Х	Х	X	(	Χ	Х	0	RFU				
9F35	Term	inal Ty	/pe											1
	Envi	ronm	ent	-			Finan	cial	M	erchant	Cardhol	der	Change	
							Instit	ution						
	Atte	nded										Ī	Major	
		ne on					11		21					
	Offli	ine wi	th onl	ine ca	pabili	ty	12		22	:				

	Offlir	ne only	,			13		23	3				
		tende				† · · ·		<u>  -</u> -	-		Major	1	
		ne only				14		24		34	1112,01		
			n online	e canal	oilitv	15		25		35			
		ne only			7	16		26		36			
			<u> </u>					1				_	
9F40	Additio	onal Te	ermina	l Capal	oilities							5	5
	Byte 1												
	b1	b2	b3	b4	b5	b6	b7	b8	Meanin	g	Change		
	1	Х	Х	Х	Х	Х	Х	Х	Cash		Major		
	Х	1	Х	Х	Х	Х	Х	Х	Goods		Major		
	Х	Х	1	Х	Х	Х	Х	Х	Service	S	Major		
	Х	Х	Х	1	Х	Х	Х	Х	Cashba	ck	Major		
	Х	Х	Х	Х	1	Х	Х	Х	Inquiry				
	Х	Х	Х	Х	Х	1	Х	Х	Transfe	er e			
	Х	Х	Х	Х	Х	Х	1	Х	Payme				
	Х	Х	Х	Х	Х	Х	Х	1	Admini	strative			
	Byte 2	1	1	1		1	1		T		1		
	b8	b7	b6	b5	b4	b3	b2	b1	Meanin		Change		
	1	Х	Χ	Χ	Х	Χ	Χ	Х	Cash D	eposit			
	Х	0	Χ	Χ	Х	Χ	Χ	Х	RFU				
	Х	Х	0	Х	Х	Х	Х	Х	RFU				
	Х	Х	Х	0	Х	Х	Х	Х	RFU				
	Х	Χ	Х	Х	0	Х	Χ	Х	RFU				
	Х	Χ	Х	Х	Χ	0	Χ	Х	RFU				
	Х	Χ	Х	Х	Х	Х	0	Х	RFU				
	Х	Χ	Χ	Χ	Χ	Χ	Χ	0	RFU				
	D 1. 7												
	Byte 3	1	1.5								CI	1	
	b8	b7	b6	b5	b4	b3	b2	b1	Meanin		Change		
	1	X	Х	Х	Х	Х	Х	Х	Numeri				
	Х	1	Х	Х	Х	Х	Х	Х	Alphabe				
										characters			
	<u> </u>	<u>, , , , , , , , , , , , , , , , , , , </u>	1	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	<u> </u>	<u></u>	<u> </u>	,	keys	nd kove			
	X	X	1	X 1	X	X	X	X		nd keys			
	X	X	X	1	х О	X	X	X	Functio RFU	ii neys			
	X	X	X	X		х О	X	X	RFU				
	X				X		0	X	RFU				
	X	X	X	X	X	X	X	0	RFU				
		_ ^	_ ^	_ ^		_ ^	_ ^	J	INFU		I	]	
	Byte 4												
	b8	b7	b6	b5	b4	b3	b2	b1	Meanin	σ	Change	7	
	1	X	Х	X	X	X	X	Х		<u>క</u> ttendant	Change	1	
	X	1	X	X	X	X	X	X		ardholder	+	1	
	X	X	1	X	X	X	X	X		, attendant	+	1	
	X	X	X	1	X	X	X	X		, attendant , cardholder	+		
	X	X	X	X	0	X	X	X	RFU	, caranolaei	+	1	
	X	X	X	X	x	0	X	X	RFU		+		
	X	X	X	X	X	х	1	X	Code ta	hle 10	Major	1	
	^	^	^	^	^	^	_ '	^	coue ta	טוב וט	iviajui		

		T			ı	Ī		ı		5 1 1 1 1 0	
	X	Х	Х	Х		Х	Х	Х	1	Code table 9	Major
	Byte 5	5									
	b8	b7	b6	Ь	5	b4	b3	b2	b1	Meaning	Change
	1	Х	х	Х		Х	Х	Х	х		Major
	Х	1	х	Х		Х	Х	Х	х		Major
	Х	х	1	Х		Х	Х	х	х	Code table 6	Major
	х	Х	х	1		х	Х	Х	х	Code table 5	Major
	х	Х	Х	Х		1	Х	Х	Х	Code table 4	Major
	х	Х	Х	Х		Х	1	Х	Х	Code table 3	Major
	х	Х	Х	Х		Х	Χ	1	х	Code table 2	Major
	х	Х	Х	х		Х	Χ	Х	1	Code table 1	Major
-11	Trans		_	Supp	ort (D	efaul	t: Ena	ble) (N	/lajor)		
	0 → [										
	1 → E				/D	.f !!	. F'	101/84	ادامادا		
F26	Revoo			uppo	rt (De	erault	: Enat	ie) (M	iajor)		
	1 → L										
F27	Excep			nnor	t (Def	aul+. I	Nicabl	<u>م) (۱۸</u> ۱-	aior\		
r <b>z</b> /	0 <del>→</del> [			ppoi	t (Dei	auit. i	العمالا	C) (IVIC	1,01,		
	1 → E										
FEE1E				l Conf	figura	tion (	Defau	lt: F0	DC 3C F0	C2 9E 94 00)	
					J						
	Byte '	1									
	b8	b7	b6	b5	b4	b3	b2	b1	Meanir	ng	Change
	1	Х	Х	Х	Х	Х	Х	Х	Key Pa	d support	
	х	1	Х	Х	Х	Х	Х	Х	LCD su	pport	
	х	Х	1	Х	Х	Х	Х	Х	PIN Pa	d support	
				1	Х	Х	Х	Х	Print Si	upport	
	х	Х	Χ		_	Х	Х	Х	RFU		
	X X	X X	X	Х	0	^	,,	^	INIO		
	l <del></del>			x	X	0	Х	Х	RFU		
	Х	Х	х				1				
	X X	X X	X X	Х	Х	0	Х	Х	RFU		
	x x x	x x x	x x x	X X	X X	0 x	x 0	X X	RFU RFU		
	x x x x	x x x x	x x x	x x x	X X X	0 x x	x 0 X	x x O	RFU RFU RFU	ησ	Change
	x x x x b8	x x x x x x 2 b7	x x x x	x x x	x x x	0 x x	x 0 X b2	x x 0	RFU RFU RFU		Change
	x x x x x b8	x x x x x x 2 b7 x	x x x x x x b6 x	x x x b5	x x x	0 x x b3 x	x 0 X X b2 x	x x 0	RFU RFU RFU Meanir PSE su	pport	Major
	x x x x x b8	x x x x x x x 2 b7 x 1	x x x x x b6 x x x	x x x x b5 x x	x x x	0 x x x x b3 x x x	x 0 X X b2 x x	x x 0 0 b1 x x	RFU RFU RFU Meanir PSE su Cardho	pport Ider confirmation	
	x x x x x x x x x x x x x x x x x x x	x x x x x x x x x x x x x x x x x x x	x x x x x x b6 x x x 1	x x x x b5 x x x x	x x x b4 x x	0 x x x b3 x x x	X	x x 0 0 b1 x x x x	RFU RFU RFU Meanin PSE su Cardho	pport Ider confirmation ed display order	Major
	X	x x x x x x x x x x x x x x x x x x x	x x x x x x b6 x x x 1 x	x x x x b5 x x x 1	x x x x x x x x x	0 x x x x x x x x x	X	x x 0 0 b1 x x x x x x	RFU RFU RFU Meanin PSE su Cardho Preferr Multi la	pport Ider confirmation ed display order anguage	Major
	x x x x x x x x x x x x x x x x x x x	x x x x x x x x x x x x x x x x x x x	x x x x x x b6 x x x 1	x x x x b5 x x x x	x x x b4 x x	0 x x x b3 x x x	X	x x 0 0 b1 x x x x	RFU RFU RFU Meanir PSE su Cardho Preferr Multi la EMV la	pport Ider confirmation ed display order Inguage nguage selection	Major
	X X X X X Byte 2 b8 1 X X X X	x x x x x x x x 1 x x x x x x x x x x x	x x x x x x x x x x x x x x x x x x x	x x x b5 x x x x	x x x x x x x 1	0 x x x x x x x x	X	x x 0 0 b1 x x x x x x x	RFU RFU Meanir PSE su Cardho Preferr Multi la EMV la method	pport Ider confirmation ed display order anguage nguage selection	Major Major
	X X X X X X Byte 2 b8 1 X X X X X	x x x x x x x x x x x x x x x x x x x	x x x x x x x x x x x x x x x x x x x	x x x x x x 1 x x x	x x x x x x x x x x x x x x x x x x x	0 x x x b3 x x x x x	X	x x 0 0 b1 x x x x x x x x	Meanir PSE su Cardho Preferr Multi la EMV la method Default	pport Ider confirmation ed display order anguage nguage selection	Major
	X X X X X X Byte 2 b8 1 X X X X X	x x x x x x x x x x x x x x x x x x x	x x x x x x x x x x x x x x x x x x x	x x x x x x x x x x x x x x x x x x x	x x x x x x x x x x x x x x x x x x x	b3 x x x x x x	X	x x 0 0 b1 x x x x x x x x x	Meanir PSE su Cardho Preferr Multi la EMV la method Default	pport Ider confirmation ed display order anguage nguage selection	Major Major
	X X X X X X Byte 2 b8 1 X X X X X	x x x x x x x x x x x x x x x x x x x	x x x x x x x x x x x x x x x x x x x	x x x x x x 1 x x x	x x x x x x x x x x x x x x x x x x x	0 x x x b3 x x x x x	X	x x 0 0 b1 x x x x x x x x	Meanir PSE su Cardho Preferr Multi la EMV la method Default	pport Ider confirmation ed display order anguage nguage selection	Major Major
	Byte 2  Byte 2  b8  1  x  x  x  x  x  x  x  x  x  x  x  x	x x x x x x x x x x x x x x x x x x x	x x x x x x x x x x x x x x x x x x x	x x x x x 1 1 x x x x x x x x x x x x x	x x x x x x x x x x x x x x x x x x x	b3 x x x x x x x x x x x x x x x x x x x	X	x x 0 b1 x x x x x x	Meaning PSE su Cardhoo Preferr Multi la EMV la methoo Default RFU	pport Ider confirmation ed display order anguage nguage selection d DDOL	Major Major Major
	Byte 2  Byte 2  x  x  x  x  x  x  x  x  x  x  x  x  x	x x x x x x x x x x x x x x x x x x x	x x x x x x x x x x x x x x x x x x x	x x x x x x x x x x x x x x x x x x x	x x x x x x x x x x x x x x x x x x x	b3 x x x x x x x x x x x x x x x x x x x	X	x x x 0 0 b1 x x x x x x x 0 0 b1	RFU RFU RFU Meanin PSE su Cardho Prefern Multi la EMV la method Default RFU RFU Meanin	pport Ider confirmation ed display order anguage nguage selection d DDOL	Major Major Major
	Byte 2  Byte 2  b8  1  x  x  x  x  x  x  x  x  x  x  x  x	x x x x x x x x x x x x x x x x x x x	x x x x x x x x x x x x x x x x x x x	x x x x x 1 1 x x x x x x x x x x x x x	x x x x x x x x x x x x x x x x x x x	b3 x x x x x x x x x x x x x x x x x x x	X	x x 0 b1 x x x x x x	RFU RFU RFU Meanin PSE su Cardho Prefern Multi la EMV la method Default RFU RFU Meanin RFU (Revoca	pport Ider confirmation ed display order anguage nguage selection d : DDOL	Major Major Major  Change Major
	Byte 2  Byte 2  x  x  x  x  x  x  x  x  x  x  x  x  x	x x x x x x x x x x x x x x x x x x x	x x x x x x x x x x x x x x x x x x x	x x x x x x x x x x x x x x x x x x x	x x x x x x x x x x x x x x x x x x x	b3 x x x x x x x x x x x x x x x x x x x	X	x x x 0 0 b1 x x x x x x x 0 0 b1	RFU RFU RFU Meanir PSE su Cardho Preferr Multi la EMV la method Default RFU RFU Meanir RFU (Revoca Certific	pport Ider confirmation ed display order Inguage Inguage selection Id IDDOL	Major Major Major  Change Major

Х	Х	1	Х	Х	Х	Х	Х	CA PK verified with check sum	Major
Х	Х	Х	1	Х	Х	Х	Х	Bypass PIN Entry	Major
Х	Х	Х	Х	1	Х	Х	Х	Subsequent bypass PIN Entry	Major
Х	Х	Х	Х	Х	1	Х	Х	Get data for pin try counter	Major
Х	Х	Х	Х	Х	Х	0	Х	RFU	
Х	Х	Х	Х	Х	Х	Х	0	RFU	
Byte	<u></u>								
b8	b7	b6	b5	b4	b3	b2	b1	Meaning	Change
1	Х	Х	Х	Х	Х	Х	Х	Amount before CVM processing	Major
Х	1	Х	Х	Х	Х	Х	Х	Floor limit checking	Major
Х	Х	1	Х	Х	Х	Х	Х	Random transaction selection	Major
Х	Х	х	1	Х	Х	Х	Х	Velocity checking	Major
Х	х	х	Х	0	Х	Х	Х	RFU (Transaction Log (DF11))	Major
Х	Х	Х	Х	Х	0	Х	Х	RFU	Major
v	_	V	v	v		0		(Exception File (DF27)) RFU	
X	X	X	X	X	X	X	х О	RFU	1
Х	X	X	Х	Х	Х	Х	U	RFU	
Byte b8	5 b7	b6	b5	b4	b3	b2	b1	Meaning	Change
1	Х	Х	X	X	X	X	Х	Terminal action code support	Major
Х	1	X	X	X	X	X	X	Terminal action code can be	Major
								change	
Х	Х	1	Х	Х	Х	Х	Х	Terminal action code can be deleted or disable	Major
Х	Х	Х	1	Х	Х	Х	Х	Default Action code processing before 1st GAC	Major
Х	Х	Х	Х	1	Х	Х	Х	Default Action code processing after 1st GAC	Major
Х	Х	Х	Х	Х	1	Х	Х	TAC/IAC default process when unable to go online (Skipped)	Major
Х	Х	Х	Х	Х	Х	1	Х	TAC/IAC default process when	Major
							0	unable to go online (Normal)	
Х	Χ	Χ	Χ	Χ	Χ	Χ	0	RFU	
Byte	6								
b8	b7	b6	b5	b4	b3	b2	b1	Meaning	Change
1	Х	Х	Х	Х	Х	Х	Х	Forced Online support	Major
Х	1	Х	Х	Х	Х	Χ	Х	Forced acceptance support	Major
Х	х	1	Х	Х	Х	Х	Х	Advices support	Major
Х	х	х	1	х	Х	Х	Х	Issuer referrals support	Major
Х	х	х	х	1	х	Х	х	Batch data capture	Major
х	х	х	Х	Х	1	Х	Х	Online data capture	Major
Χ	Х	х	Х	Х	Х	1	Х	Default TDOL	Major
Х	х	х	х	Х	Х	Х	0	RFU	
		•							
Byte b8	<i>/</i> Ь7	b6	b5	b4	b3	b2	b1	Meaning	Change
1	х	х	Х	Х	Х	Х	Х	amount and pin entered on	
								the same keypad	
Х	1	Х	Х	Х	Х	Х	Х	ICC/Magstripe reader	
1		ļ						combined	
Х	Х	1	Χ	Х	Χ	Χ	Χ	Magstripe read first	

х	х	Х	1	Х	Х	Х	Х	Support account type selection	
x	Х	Х	Х	1	Х	Х	Х	On fly script processing	
Х	х	Х	Х	Х	1	Х	Х	Internal date management	
Х	Х	Х	х	Х	Х	1	х	Reversal Mode	
								(1)Unable go online	
								(2) ARC Error	
								0: (3) Online Approved but	
								reader not approved.	
								1: (3) Online Approved but	
								card response AAC.	
х	х	Х	Х	х	х	Х	0	RFU	
Byte	8								
b8	b7	b6	b5	b4	b3	b2	b1	Meaning	Change
Х	Х	Х	Х	Х	Х	Х	Х	RFU	

# 7.10. Contact Set Application Data (60-03)

The **Contact Set Application Data** command creates a new AID configuration, up to a maximum of 16 sets.

#### **Command Frame**

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14 Byte 14+n-1	Byte 14+n	Byte 15+n
Header Tag & Protocol Version	Command	Sub- Command	Data Length (MSB)	Data Length (LSB)	Data	CRC (LSB)	CRC (MSB)
ViVOtech2\0	60h	03h			Data Objects		

**Data Objects:** <AID\_LenL><AID\_LenH><5~16 bytes AID><TagCounterL><TagCounterH><TLV1><TLV2>...<TLVn>.

**Where:** <TagCounterL><TagCounterH>is the Number of <TLV>.

### Response Frame

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14 Byte 14+n-1	Byte 14+n	Byte 15+n
Header Tag & Protocol Version	Command	Status Code	Data Length (MSB)	Data Length (LSB)	Data	CRC (MSB)	CRC (LSB)
ViVOtech2\0	60h	See Status Code Table			See Response Frame Data Format		

### Note:

- If there was a <TLV> format error, the response status code is 0x05.
- If AID List is full (MAX is 16), the response status code is 0x61.

### **Application Data List Example**

Data	Tag	Value name	Length	Data
ID			(Byte)	
1	9F01	Acquirer identifier	6	56 49 53 41 30 30
2	5F57	Account type	1	00
3	5F2A	Transaction Currency	2	08 40
4	9F09	Terminal application version number	2	00 96
5	5F36	Transaction currency exponent	1	02
6	9F1B	Terminal floor limit	4	00 00 3A 98
7	DF25	Default DDOL	Var	9F 37 04
8	DF28	Default TDOL	Var	9F 08 02
9	DFEE15	ASI	1	01
10	DF13	TAC-Default	5	00 00 00 00 00
11	DF14	TAC-Denial	5	00 00 00 00 00
12	DF15	TAC-Online	5	00 00 00 00 00
13	DF18	Target percentage for random transaction	1	00
		selection		
14	DF17	Threshold value for biased random selection	4	00 00 27 10
15	DF19	Maximum target percentage for random	1	00
		transaction selection		

# 8. Basic Card Reading Data Flow

The following examples describe the basic steps for setting a reader's terminal settings and activating a transaction.

# 8.1. Example: Reading a Card via Firmware Commands

Perform the following steps and commands to read a card with the VP3350 via NEO 2 protocol firmware commands.

- 1. Set the device's terminal settings:
  - a. Run **Set Kernel Configuration (60-16)** to set the kernel configuration number, which acts as a filter to validate that the tags in the next step have the correct major parameters.
  - b. Run **Set Terminal Configuration (60-06)** to set the TLV tags, which must have the correct major parameters set in step 1a.
- 2. Run **Contact Set Application Data (60-03)** to set the device's AID file. Note that, prior to device certification, devices require dummy AIDs to function.
- 3. Run Activate Transaction (02-40) and read the card.

# 8.2. Example: Reading a Card via Universal SDK Methods

Perform the following steps and commands to read a card with the VP3350 via USDK methods.

- 1. Set the device's terminal settings:
  - a. Run **Set Kernel Configuration**:

```
public RETURN CODE
emv setTerminalMajorConfiguration(int configuration)
```

b. Run **Set Terminal Configuration**:

```
public RETURN CODE emv setTerminalData(byte[]
tlv, string ident = "")
```

2. Run **Set Application Data**:

```
public RETURN_CODE emv_setApplicationData(byte[] name, byte[]
tlv, string ident = "")
```

3. Run **Activate Transaction**:

```
public RETURN_CODE device_startTransaction(double amount,
double amtOther, int exponent, int type, int timeout, byte[]
tags, bool isFastEMV = false, string ident = "")
```

4. Read the card.

# 8.3. Example: Reading a Card via the USDK Demo App

- 1. Download and install the latest <u>USDK Demo app</u> from the ID TECH Knowledge Base (if you cannot access the link, please <u>contact support</u>).
- 2. Connect the VP3350 to your PC via USB or serial port.
- 3. Open the USDK Demo app from the Windows Start menu.
- 4. Select **EMV** > **Terminal Config** > **Set Kernel Config**, then input the Config Number (example 2).
- Select EMV > Terminal Config > Save Terminal Data > Pick Tag List (example 2C) >
   Execute.
- 6. Select EMV > AID > Load Default AID.
- 7. Select **EMV** > **Activate Transaction**.

# 9. Application Development Considerations

When developing applications for the VP3350, make sure to consult the *ID TECH Universal SDK Guide* for your respective platform for best practices to follow. Download the *Universal SDK Guide* from the VP3350 product page as part of the ZIP file for your development platform.

ID TECH strongly recommends that integrators include a way for users to update their passwords.

# 9.1. Performing Key Injection on a VP3350 via Tablet

The VP3350 accepts key injection in two manners when integrated into a tablet:

- via RKI with the tablet running an application that supports ID TECH RKI (for example, an ID TECH application or ISV application)
- via the USB-C female port

**Note:** When performing key injection via the USB-C female port, the tablet must be turned off. Using a Futurex machine requires the appropriate IDT-Futurex conversion box (ID TECH P/N: ID-80000001-012).

# 10. VP3350 Mounting and EMV Contactless Logo Requirements

Note that if the VP3350 is mounted behind any kind of casing or cover, that assembly MUST follow EMV requirements regarding contactless logo size and position. See <a href="EMVco Contactless">EMVco Contactless</a> <a href="Symbol Reproduction Requirements">Symbol Reproduction Requirements</a> for details.


# 10.1. Contactless Mounting

To optimize performance, install VP3350 readers away from or in front of any metal surfaces or materials that have metallic content, which can interfere with the RF field. VP3350 readers perform optimally when mounted away from metal surfaces.


# 10.2. VP3350 Power Requirements and Mounting

When mounting the VP3350 to a surface or with another device (such as a tablet), use the following guidelines:

- For the Bluetooth version of the VP3350, make sure to keep the power button accessible.
- The USB-C male and USB-C female versions of the VP3350 do not require an exposed power button as those models do not have internal batteries.
- If desired, use the two screw holes on the bottom side of unit and two recesses on the top side of unit highlighted below for mounting:

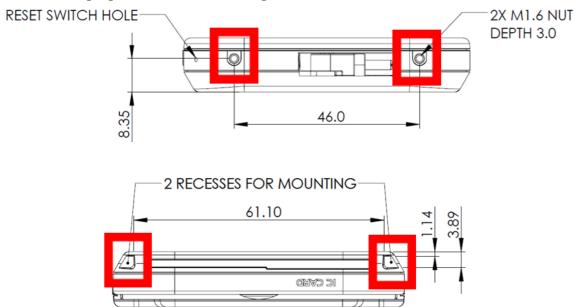

• Likewise, the VP3350 has slots on the back for alignment, shown below:

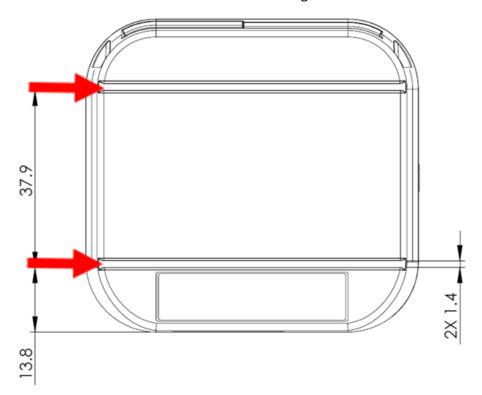

# 11. Periodic Inspection Instructions

The VP3350 is an attended device; contact an ID TECH representative with any questions for the device's daily use.

Users are also required to complete the following checks daily:

- Check the device overlay to make sure it is intact.
- Power on the device to check the beeper and the display message:
  - o Make sure there is no beeping that indicates the tamper was triggered.
  - o Read the firmware version to make sure the version number is correct.
- Check the device appearance to make sure there are no holes on the device or any suspicious objects around the ICC card slot.

# 12. Decommissioning PCI-Certified Devices

All PCI-certified devices require proper decommissioning prior to device disposal in order to ensure the protection of all sensitive financial card data. For instructions on decommissioning your device, see <u>Decommissioning of PCI-Certified Devices</u> on the ID TECH Knowledge Base.

# 13. Troubleshooting

The VP3350 is designed to be reliable and easy to troubleshoot. The components that may require troubleshooting include the power module (if applicable), the reader, and the serial cable.

Symptom	Probable Cause	Remedy
General Issues		
4 RED LEDs blink and the	Unit has been tampered	Contact IDTECH Support
device beeps		
4 Yellow blink and the	Unit was not activated	Contact IDTECH Support
device beeps  4 Yellow LEDs are on	LCL-KEK is not loaded or	Contact IDTECH Support
4 fellow LEDS are on	was erased	Contact IDTECH Support
4 Green LEDs blink	DEK is not loaded or was erased	Contact IDTECH Support
No communication and all	Power off	Charge the battery
LEDs off	Battery out of charge	Press the device Reset button
	Host device not	Make sure to enter the correct paring password
	connected	
Bluetooth paring failed	<ul> <li>Host device running         Android 6.x or earlier     </li> <li>Mobile does not work in</li> </ul>	Make sure the host device is running Android 6.x or later
	BLE security mode	
Reader does not appear to	Reader not powered on	Connect the device to PC via a USB cable
be powered on after	Battery out of charge	Replace the device with another unit known to
pressing the power button	,	work to verify that the installed USB cable wiring
(no LEDs are lit)		works correctly
Some cards or fobs read,	Possible bad card or fob.	Check to see if the card or fob is damaged
but not all	Unsupported card used.	Verify that the correct firmware is loaded on
	Wrong firmware	reader; contact your ID TECH representative
LEDs do not light and the	Card, fob, or phone not	Present card, fob, or phone closer to the antenna
beeper is not audible when	properly presented	and ensure it is parallel to the face of the reader
presenting a card or fob	RF interference	Verify that the card, fob, or phone is valid and
	Unsupported card used	current
	Wrong firmware	Verify that metal is not interfering with the
	- Wrong miniware	antenna
		Test with ViVOcard Contactless Test Card part
		number 241-0015-03, Rev A
		Try a different card, fob, or phone  Try a different card, fob, or phone
		Check to see if the card, fob, or phone is damaged
		Verify that correct firmware is loaded on reader;
		contact your ID TECH representative
		<ul><li>Power cable plug is fully inserted</li><li>Make sure device is not set to Passthrough mode</li></ul>
		Replace the unit
Communication Issues		- Replace the unit
No data received or data is	Faulty or incorrect cable	Check that the cable connection is secure and in the
garbled	connections.	correct port on the device
Fail to start transaction,	Device in Passthrough	Need to exit Passthrough mode
0x0B returned	mode or transaction mode	Need to cancel transaction
	<u> </u>	

Symptom	Probable Cause	Remedy
Fail to start transaction,	No terminal data or	Need to load terminal data or application data for
0x60 returned	application data	Contact EMV transactions
Fail to start transaction,	Missing Key	Please re-start VP3350 and monitor the LEDs to
0x04 returned		confirm whether to Load LCL key or Data Key
Firmware loading software	Device is not fully	Check the cable connection
indicates "Open device	connected to PC	Check the device
failed"		
Firmware loading software	Device is not fully	Check the cable connections
indicates "Load firmware	connected to PC	
failed"		
Firmware loading software	Bootloader firmware in	Contact your ID TECH representative to reload
indicates "Send Command	device was destroyed	manufacture's firmware
failed"		

If you are unable to resolve the problem, please contact <a href="mailto:support@idtechproducts.com">support@idtechproducts.com</a> (sending an e-mail to this address will automatically open a support ticket).

# 13.1. Tamper Detection Codes

If a tamper event occurs, the VP3350 stores a tamper code in its security log. Check the security log with the **Get DRS Info (C7-3A)** command; see the *NEO 2 Interface Developer's Guide* for details.

Tamper Event Type		
EVENT_TYPE_TAMPER_ACTIVE	0	
EVENT_TYPE_TAMPER_DEACTIVE	1	
EVENT_TYPE_TAMPER_GENERIC	2	
EVENT_TYPE_TAMPER_ACK	3	
EVENT_TYPE_TAMPER_TIMEOVRF	4	
EVENT_TYPE_TAMPER_MONOTONICOVRF	5	
EVENT_TYPE_TAMPER_VOLT	6	
EVENT_TYPE_TAMPER_CLK	7	
EVENT_TYPE_TAMPER_TEMP	8	
EVENT_TYPE_TAMPER_FLASH	9	
EVENT_TYPE_TAMPER_TST	10	
EVENT_TYPE_TAMPER_PIN	11	
EVENT_TYPE_TAMPER_BAT	12	
EVENT_TYPE_TAMPER_ALL	255	

# 14. For More Information

- To learn more about VP3350 and other ID TECH products, visit the <u>ID TECH Knowledge</u> Base.
- To learn more about EMV app development with the Universal SDK, see <u>EMV</u> <u>Transactions with Universal SDK</u>.
- Visit us online at <a href="http://idtechproducts.com">http://idtechproducts.com</a>.
- Find more Tech Support resources at the <u>ID TECH Tech Support home page</u>.