 


MIXBOX[®] WHITE EDITION

(PS5, XBOX SERIES X/S, SWITCH, PC)

QUICK GUIDE

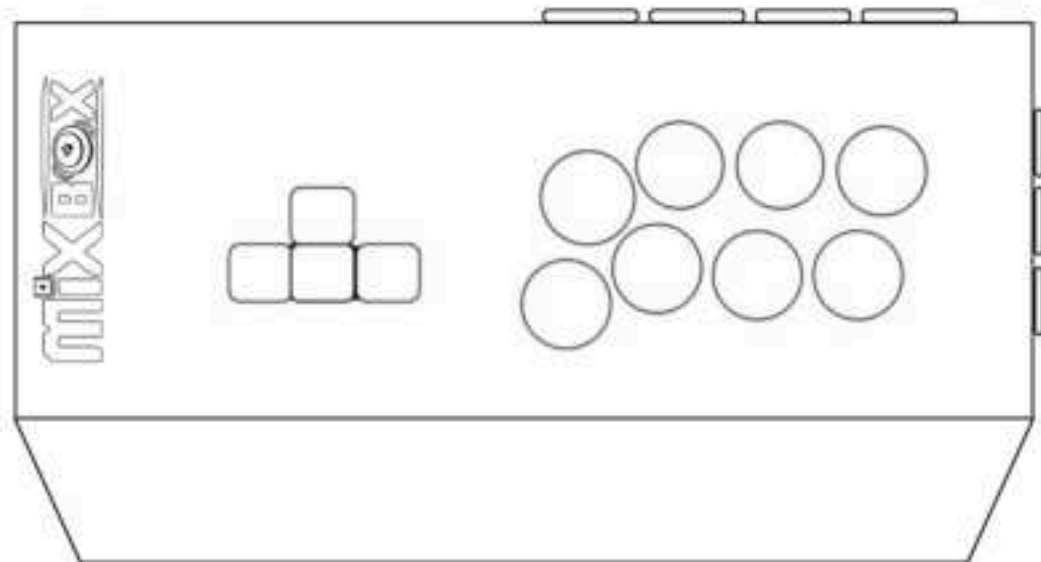

BUTTON LAYOUTS

SOCD MODES SELECTION

 
CONSOLES SELECTION

TOURNAMENT LOCK MODE

TURBO FUNCTION

WWW.MIXBOXARCADE.COM

BUTTON LAYOUTS

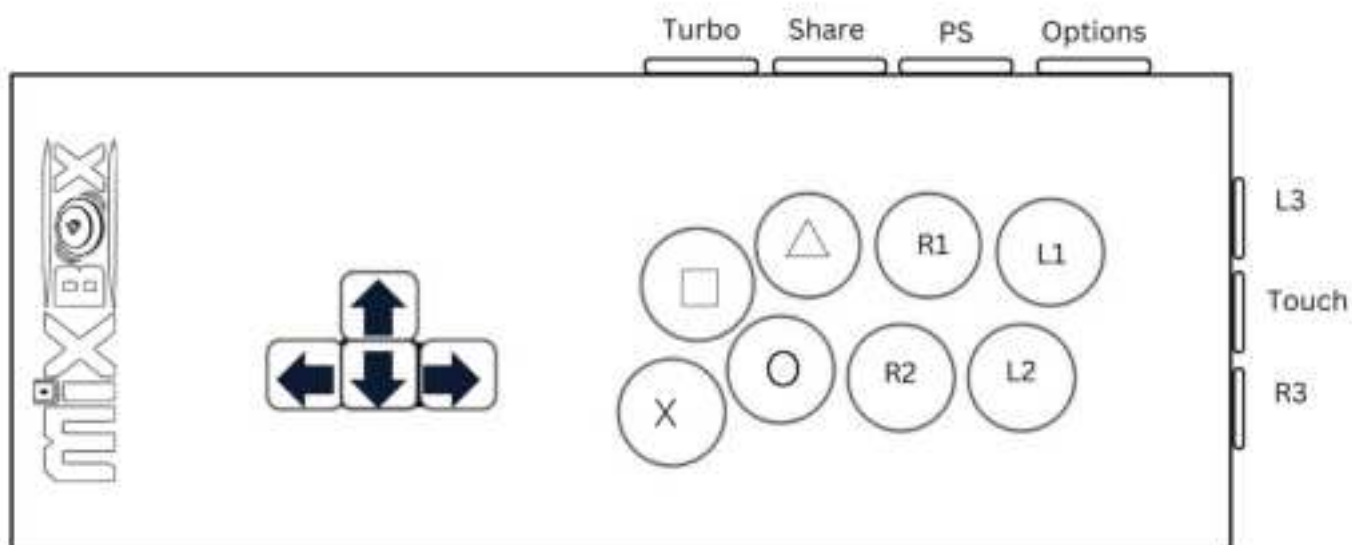

SOCD MODES

MODE 1 – UP PRIORITY (DEFAULT MODE)

LEFT + RIGHT = NEUTRAL

DOWN + UP = UP

TO USE THE MODE 1, FOLLOW THESE STEPS:

1. PRESS AND HOLD THE **LEFT DIRECTIONAL KEY** ON YOUR MIXBOX CONTROLLER.
2. WHILE HOLDING THE LEFT DIRECTIONAL KEY, INSERT THE USB CABLE FROM THE MIXBOX INTO THE CONSOLE OR PC'S USB PORT.

MODE 2– NEUTRAL / CAPCOM PRO TOUR RULE

LEFT + RIGHT = NEUTRAL

DOWN + UP = NEUTRAL

TO USE THE MODE 2 WITH YOUR MIXBOX, FOLLOW THESE STEPS:

1. PRESS AND HOLD THE **UP DIRECTIONAL KEY** ON YOUR MIXBOX CONTROLLER.
2. WHILE HOLDING THE LEFT DIRECTIONAL KEY, INSERT THE USB CABLE FROM THE MIXBOX INTO THE CONSOLE OR PC'S USB PORT.

MODE 3 – LAST PRIORITY

LEFT + RIGHT = RIGHT

DOWN + UP = UP

TO USE THE MODE 3 WITH YOUR MIXBOX, FOLLOW THESE STEPS:

1. PRESS AND HOLD THE **DOWN DIRECTIONAL KEY** ON YOUR MIXBOX CONTROLLER.
2. WHILE HOLDING THE LEFT DIRECTIONAL KEY, INSERT THE USB CABLE FROM THE MIXBOX INTO THE CONSOLE OR PC'S USB PORT.

CONSOLES SELECTION

The Mixbox White Edition (**PS5, XBOX Series X/S, Switch, PC**) controller is ready to plug and play. It auto-detects the following platforms: PS5 (all games), Xbox Series X|S, Switch, and PC

The Mixbox White Edition (PS5, XBOX Series X/S, Switch, PC) controller also supports manual selection of PS5 (all games), Xbox Series X|S, Switch, and PC

Please refer to the below details of connecting different consoles

Step 1 : Press button:

■ for PS5


▲ for XBOX X/S

R1 for Nintendo Switch

L1 for PC

Step 2 : While pressing, connect mixbox controller to corresponding consoles/ PC.

In manual mode, the device will automatically save the selected mode. To revert to automatic detection mode, hold down the "Option " button while connecting the USB cable to different consoles / PC.

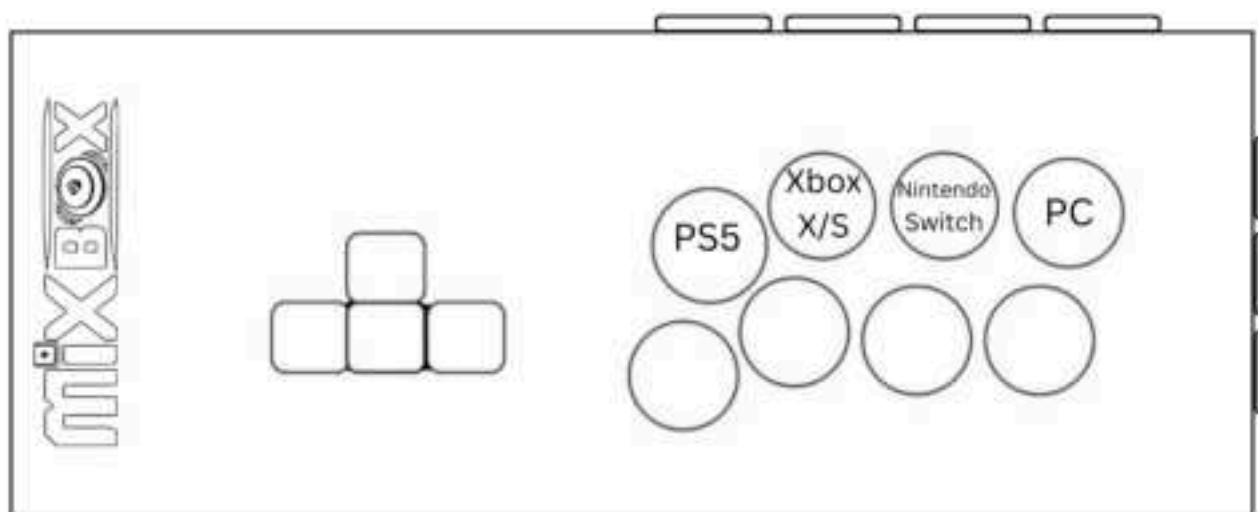

Tournament Lock Mode

To enable or disable Tournament Lock mode, press and hold the **(Turbo, Share, and Options)** simultaneously. When Tournament Lock Mode is active, the PS Key, Options, and Share buttons are disabled and will not function.

Turbo Function

To set or cancel the Turbo function on the specified buttons, follow these steps:

1. Hold (Turbo + Options), then press the button you want to set or cancel the turbo function.
2. Hold (Turbo + Options), then press up to increase the frequency; press down to decrease the frequency.
3. The following buttons can be set to the Turbo function: 1P, 2P, 3P, 4P, 1K, 2K, 3K, 4K, L3, R3.