

## Lesenz Mini User Manual



- |                                                                 |                                               |
|-----------------------------------------------------------------|-----------------------------------------------|
| 1 Speaker                                                       | 2 Micro USB socket                            |
| 3 Power Button for:<br>Answering Calls<br>Camera Remote Shutter | 4 LED indicator<br>5 keychain<br>6 Microphone |

### Specifications:

|                        |                  |
|------------------------|------------------|
| Model                  | LZ Mini          |
| Power Rating           | 1W               |
| Transmitting Frequency | 150Hz-16KHz      |
| THD                    | < 1%             |
| S/N                    | ≥90dB ±2         |
| Speaker Parameter      | 4Ω diameter 30mm |
| Battery                | 3.7V/140mAh      |
| Bluetooth Version      | V4.2             |
| Product Size           | φ 35.6x25.1mm    |
| weight                 | 21g              |

### Charging battery:

1. Insert the charging cable into the Micro USB input port, connect the USB plug into a 5V/300mAh USB power terminal. The LED indicator will turn red.
  2. After fully charged, the red LED indicator will turn off.
- Note:** When sound becomes less and you hear the warning tone "1 beep", then charge speaker on time.

### Bluetooth pairing for music/ phone call/ camera remote shutter

1. Turn on the speaker by pressing "@" button for 3 seconds, The speaker will have a voice prompt and a blue indicator will flash.
2. Turn on your device and activate the Bluetooth function.
3. Search for Bluetooth name "Lesenz Mini" to connect with. The speaker will pair automatically and the speaker will have a voice prompt, the blue indicator will flash. Then, just need to press "@" button to play music when you open your music player or answer the call when the call is coming. Or take a photo when the camera app is opened on your device.

4. Turn off the speaker by pressing "@" button for 4 seconds and the speaker will let you hear 2 beeps. When disconnected, the speaker will turn off after 5 minutes

- Note:**
1. When it is not possible to take a photo. Under the Android system, please open "Settings": "camera", then set "Volume key" to "Settings": under the IOS system, you just need to refresh the Bluetooth connection
  2. When you can't play the music, please refresh the Bluetooth connection.
  3. While playing music, short press "+" button will increase the volume

RoHS