



USER MANUAL



E-mail: electrical.appliance@dksh.com
www.morgan.my

facebook.com/morganappliances

3-in-1 Detachable Sandwich Maker

MDM-383

C O N T E N T S

3 Important Safeguards

5 Parts Identification

5 Specifications

6 Operating Instructions

7 Care and Cleaning

Thank you for purchasing a quality MORGAN appliance. We trust that you will have a pleasant experience with your new product. To guarantee safety and best efficiency, please read this manual carefully and keep a copy for future reference.

IMPORTANT SAFEGUARDS

When using electric appliances, basic safety precautions should always be adhered to, including the following:

- Read all instructions carefully and retain them for future reference.
- Before connecting to the power supply, ensure that the unit is earthed, and its voltage corresponds to the voltage indicated on the power supply rating label.
- This appliance is intended for household use only and connected to an AC 220-240V power supply.
- The appliance must always be positioned horizontally during use.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- **CAUTION:** Do not touch hot surfaces. Use handle or knobs.
- To protect against the risk of electric shock, do not immerse power cord, power plug or unit in water or any other liquids.
- Unplug from power supply when not in use and before cleaning. Allow to cool completely before assembling/disassembling parts, and before cleaning appliance.
- Do not operate any appliance with a damaged power cord, or when appliance has malfunctioned or damaged in any manner. To avoid the risk of an electric shock, never modify / repair the appliance yourself. Contact an authorized service personnel examination and repair.
- The use of accessory attachments not recommended by the manufacturer may result in fire, electrical shock, or risk of injury to persons.
- This appliance is not intended for outdoor or commercial use.
- Do not allow power cord to hang over the edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or heated oven.
- The use of accessory attachments not recommended by the manufacturer may result in fire, electrical shock, or risk of injury to persons.
- Always disconnect the appliance from the power supply after every use.
- Do not use appliance for other than intended use.

IMPORTANT SAFEGUARDS

- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Extreme caution must be exercised when moving an appliance containing hot oil or other hot liquids.
- **WARNING:** The temperature of accessible surfaces may be high during operating.

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, ONLY AUTHORIZED PERSONNEL SHOULD PERFORM REPAIRS. SAVE THESE INSTRUCTIONS


FOR HOUSEHOLD USE ONLY

GROUNDING PLUG

- This appliance has a grounded plug to reduce the risk of electric shock.
- Contact a qualified electrician if the power plug does not fit fully into the power supply outlet. Do not modify the power plug in any way or use an adaptor.

PARTS IDENTIFICATION

- 1. Top Housing
- 2. Red Indicator Light
- 3. Green Indicator Light
- 4. Bottom Housing
- 5. Lock Catch
- 6. Heating Plates

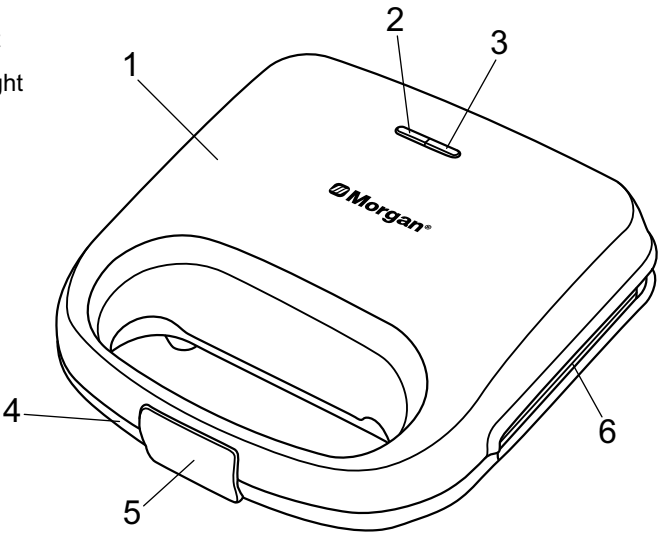

SPECIFICATIONS

Model	MDM-383
Rated Voltage / Frequency	220-240V~ 50-60Hz
Rated Wattage	750W
Net Weight	1.8kg

OPERATING INSTRUCTIONS


- Connect the appliance's power plug to a power supply outlet.
- Both red and green indicator lights will illuminate when the heating plates are heated up.
- **NOTE:** The heating plates must be heated up before grilling
- As soon as the appliance has heated up, the green light indicator light will disappear, indicating grilling can now begin.
- Open the appliance at the lock catch.
- Close the appliance, ensuring that lock catch is engaged.
- **CAUTION:** It will be difficult to close the appliance if the contents contain too much filling. Remove some filling and try again. Never forcibly close the appliance.
- During toasting the temperature regulating thermostat switches off and on again. Both green and red indicator lights will also flash off and on repeatedly.
- After completion of the grilling process (approx. 2-3 minutes) open the lock catch and remove the food using a flat wooden or plastic spatula. Never use sharp or metal object (e.g. knives, metal spatulas, etc.) as this will damage the Teflon coating.
- To grill more food, close the appliance again and wait until the toasting surfaces have reheated sufficiently.
- When the indicator light illuminates again you can repeat the toasting process as described above.
- After grilling completes, disconnect the power plug from the power supply outlet immediately. Open the appliance to allow it to cool down before storing.

CARE & CLEANING

- Only perform cleaning and maintenance when the appliance has completely cooled down.
- Clean the housing surface and heating plates with a soft, damp cloth.
- Remove toast or food crumbs using a soft brush.
- Never use abrasive cleaning agents or sharp objects (e. g. scrubbing brush or knife) for cleaning to avoid damaging the Teflon coating.
- **CAUTION:** Never immerse the appliance in water or other liquids to avoid the risk of electric shock.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shop, offices, and other working environments
 - farmhouses
 - by clients in hotels, motels, and other residential type environments
 - bed and breakfast type environments.

STORAGE

- Always disconnect the power plug from the power supply before storage.
- Ensure the appliance is clean, cool, and dry before storage.

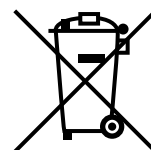

- Meaning of crossed –out wheeled dustbin:
- Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.
- Contact your local government for information regarding the collection systems available.
- If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.
- When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.