# Guide for updating EXact2 Web Server Module software

• New patch version: 3.6-25

# Steps to update the ventilation system's Web Module

# Method 1

1. Click on Menu.




2. Any unsaved changes must be saved before proceeding to update the firmware.







3. Click on Firmware Update, select the firmware file from a connected pc, and press upload.

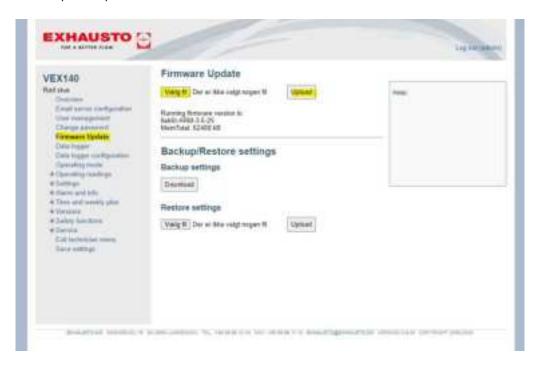

4. Wait until the update is finished (appr. 5 min), and the menu should appear as in the following screenshot:



- 5. Power cycle the ventilation system.
- 6. The time and date in the HMI menu (3.2.1) should now be able to be set to the current time.

#### Method 2

# Prepare the USB stick:

- 1. Ensure that the latest software patch (3.6-25) is saved on an empty USB drive.
- 2. The software file must be placed in the **root directory** of the USB drive.
- 3. It should be the **only file** on the USB drive, avoid placing it in a subfolder.

#### Connect the USB drive to the Web Module:

4. Insert the USB drive into the Web Module of the ventilation system.



### Restart the ventilation system:

- 5. While the USB drive is still connected, power cycle the system.
- 6. Upon restart, the Web Module will detect and begin loading the new software.
- 7. Wait for the software to be installed:
- 8. The installation process typically takes 5-8 minutes.

3/3

9. During this time, the system will automatically be updated to version 3.6-25

# Verify the update:

- 10. The update process can be monitored via the HMI interface under Versions in menu 6.3.
- 11. Once the update is complete, the web module will display that it has been updated to version 3.6-25.

#### **Access the Web Module:**

- 12. After the update, the Web Module will be accessible through a local network (LAN).
- 13. The time and date in the HMI menu (3.2.1) should now be able to be set to the current time.