




Wireless Portable Bluetooth Speaker with RGB Light

NBK1BLSPBLK

Safety & Warnings

- Read all instructions and warning thoroughly before using this product. Retain this user guide for future reference.
- Following all instructions in this user guide, reduces the risk of fire or injury when correctly complied to.
- To reduce the risk of injury:
 - Keep batteries out of reach of children.
 - Do not heat, open, or dispose of the battery pack in fire.
 - Do not allow metal objects to touch the internal battery in this product.
 - Do not expose the internal battery pack to excessive heat.

Overview

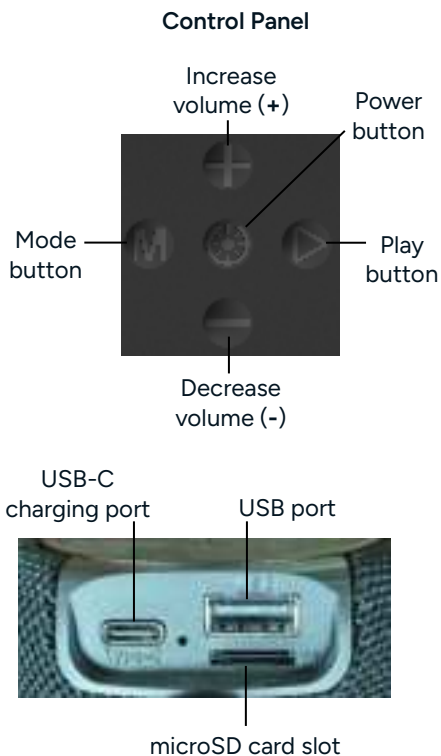

Operation

Charging

- Fully charge the speaker before first use. Connect the provided USB-C cable to a power source and the charging port on the speaker. The charging indicator will light up while charging and turn off when fully charged.
- Attach the USB-C charging cable to a USB power adapter (not supplied) or plug it into a vacant USB port on a computer or laptop.

Power On/Off & LED Light Mode

- Press and hold the power button for 3 seconds to turn the speaker on.
- Press and hold the power button for 5 seconds to turn the speaker off.
- Press the power button once to cycle through LED light modes: Off → RGB Light → Flowing Light → Pulsing Light.

Bluetooth Pairing

1. With the speaker turned on, press and hold the power button for 2 seconds.
2. The speaker will emit an audio tone and beep twice.
3. Ensure Bluetooth is enabled on your phone and select 'S120' from the list of available devices.
4. The speaker will beep twice to confirm a successful Bluetooth connection.

Volume Control

- Press the decrease volume (-) button to decrease the volume.
- Press the increase volume (+) button to increase the volume.

Track Selection

- Press and hold the decrease volume (-) button to skip to the next track.
- Press and hold the increase volume (+) button to return to the previous track.

Music Mode Selection

The default mode is Bluetooth. If a USB storage device or microSD (TF) card is inserted, the speaker will recognise it as an audio source.

- To play audio files from a USB storage device, insert it into the USB port on the rear of the speaker.
- To play audio files from a microSD card, insert it into the microSD (TF) card slot on the rear of the speaker.
- Press the mode button once to switch between Bluetooth, USB, and microSD (TF) card modes.

Specifications

Bluetooth version	5.3
Bluetooth pairing name	S120
Material	ABS + Fabric
Bluetooth working frequency	2.402GHz-2.480GHz
Earphones battery capacity	1200mAh
Driver	5W x 2, 10W, 52mm & 4Ω
Effective distance	10M
Play time	8 hours
Charging port	USB-C

Notes

[illegible]

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.Kogan.com**.

