



Originale	Sostituto
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Shift + Guide / EPG / -/--
	Back / Return
	Shift + Audio / Lang I/II
	Guide / EPG / -/--
	Fav / Marker / PC

Originale	Sostituto
	Sleep / Timer
	CH+ / Page+
	CH- / Page-
	Picture / Format
	Sound / Title
	Vol+
	Vol-
	AV / Input / RDS
	TV/Radio /
	Audio / Lang I/II
	Info / Angle
	Up
	Down
	Left
	Right
	OK
	Menu / Home



