



# **KOGAN 50" SMART HDR 4K UHD LED TV**

**SERIES 9 RU9220 (KALED50RU9220SUA)**

# CONTENTS

Safety and warnings .....	02	Language.....	12
Components.....	04	Keyboard.....	12
Product overview.....	05	Inputs.....	12
Inputs.....	05	Power.....	12
Assembly and installation.....	06	Picture.....	12
Stand assembly .....	06	Sound.....	13
Connect to antenna.....	06	Storage.....	13
Turning on.....	06	Home screen.....	13
Remote control.....	07 - 08	Retail Mode.....	13
Power button.....	08	Google Assistant.....	13
First time setup.....	09	Chromecast Built-in.....	13
Basic operation .....	10	Screen Saver.....	14
Home Screen.....	10	Location.....	14
Input Source.....	10	Usege & Diagnostics.....	14
Navigating menus .....	10	Accessibility.....	14
Network.....	10	Reset.....	14
Channel.....	10	Remote & Accessories.....	14
Antenna.....	10	PVR mode .....	15
Settings .....	11	Media playback.....	16
Apps.....	11	Apps .....	17
About.....	11	Wall-mount installation.....	18
Date & Time.....	11	Specifications.....	19
Time.....	11	Troubleshooting.....	20

## THIS USER GUIDE COVERS THE FOLLOWING MODELS

Kogan 50" SMART HDR 4K LED TV (Series 9 RU9220)

# SAFETY AND WARNINGS

Thank you for buying this Kogan product. Please read all safety instructions before using your TV.

## WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- The apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, (for example, vases), shall be placed on the apparatus.
- When discarding used batteries, always be mindful of the environment. Ensure you follow any guidelines for recycling and safe disposal of batteries that apply in your local area. Don't throw used batteries in rubbish bin.
- When installing your TV, maintain a distance of at least 10 cm between the TV and other objects (walls, cabinet sides, etc.) to ensure proper ventilation. Failing to maintain proper ventilation may result in a fire or a problem with the product caused by an increase in its internal temperature.
- The openings/slots on the back of the apparatus have been provided for necessary ventilation. Ventilation should not be impeded by blocking these openings in any way (for example, newspapers, table-cloths, curtains, etc.)
- No naked flame sources, such as lit candles, should be placed on the apparatus. To prevent the spread of fire, keep candles or other open flames away from this product at all times.
- The device may malfunction when under electrostatic discharge. It can be manually resumed by switching power off completely (at wall outlet), then switching power on again.
- To avoid any injury caused by overturn of the product when installed with base stands, please always ensure the whole product is placed horizontally within the supporting surface and that the television is not overhanging the edge of the supporting furniture.
- If not using with base stands, use only a wall or ceiling mount which has been recommended by the manufacturer of the television.



# SAFETY AND WARNINGS cont'd

- Keep small accessories out of reach of children so they are not mistakenly swallowed.

## CAUTION: Connecting the power cord

Most appliances recommend they be placed upon a dedicated circuit; that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if appearance indicates damage or deterioration, immediately discontinue use of the appliance until the cord is replaced with an exact replacement part by an authorized servicer.

Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

The MAINS plug is used as the disconnect device, and the disconnect device shall remain readily operable.

Operating Temperature: 5°C to 35°C

Storage Temperature: -15°C to 45°C

Operating Humidity: ≤80%

Storage Humidity: ≤90%







## CAUTION

Do not attempt to modify this product in any way without written authorization from supplier. Unauthorized modification could void the user's authority to operate this product.

 
 
It is not recommended to keep a certain still image displayed on the screen for a long time as well as displaying extremely bright images on screen.

**Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.**

Refer to the table below as a guide to the symbols and warnings which may be on your TV.

<div>CAUTION</div> <div>RISK OF ELECTRIC SHOCK</div> <div>DO NOT OPEN</div>	CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.
	The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.
	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.
	Class II product: This symbol indicates that a safety connection to electrical earth (ground) is not required. If this symbol is not present on a product with a mains lead, the product MUST have a reliable connection to protective earth (ground).
	AC voltage: Rated voltage marked with this symbol is AC voltage.
	DC voltage: Rated voltage marked with this symbol is DC voltage.
	Caution. Consult instructions for use: This symbol instructs the user to consult the user manual for further safety related information.

# COMPONENTS

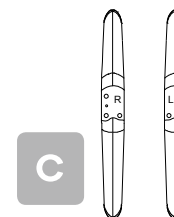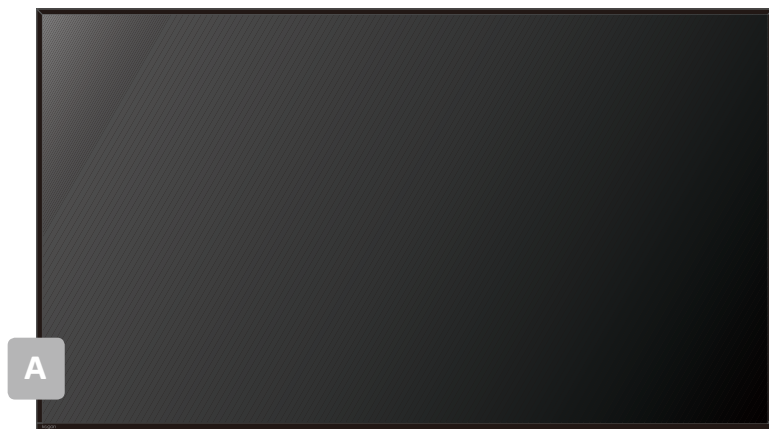

**A** Kogan 50" Smart  
HDR 4K LED TV

**B** Remote control

**C** Stand (x2)

**D** BB4 x16 mm screw (x6)

**E** AAA battery (x2)


**F** Quick-start guide

**G** Warranty card

## NOT INCLUDED

 Phillips head screwdriver, antenna  
cable, broadband internet connection.

PRODUCT OVERVIEW

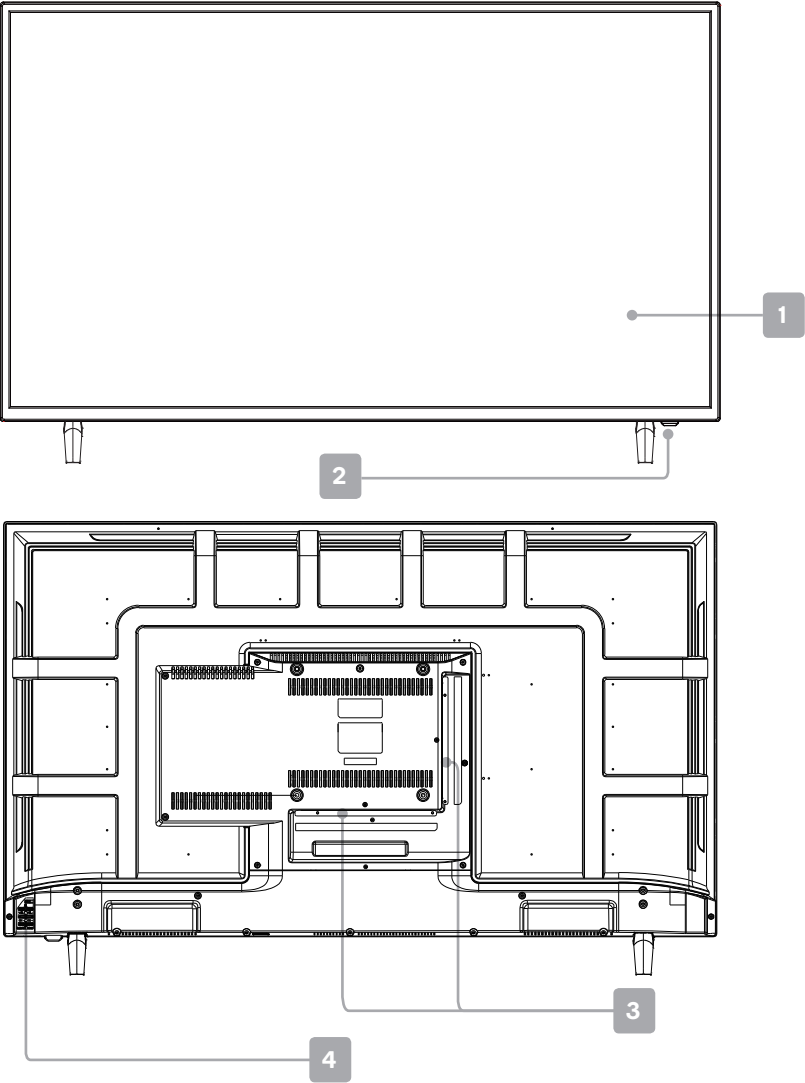

TV front panel

- 1 Kogan UHD LED display screen
- 2 Remote sensor / Standby light

TV back panel

- 3 Inputs/Ports
- 4 Power button

Inputs

Composite video input			Composite video input.Video and YPbPr share one audio channel
Component video input			Component video input. Three cables (“Y,” “Pb” and “Pr”) provide a higher quality connection than the single-wire composite cable (“Y”) commonly
HDMI			Connect an HDMI cable between the HDMI port on the TV and the HDMI port on the DVD player/Set-Top Box. Ports marked ‘ARC’ also support Audio Return Channel.
USB 2.0			USB storage devices can be inserted to record and pause live TV in PVR mode, or to watch media files stored on device in media mode.
MICRO SD			MICRO SD card storage devices can be inserted to record and pause live TV in PVR mode, or to watch media files stored on device in media mode.
ANT			For free-to-air TV, use an antenna cable (not supplied) to connect to a working antenna, either via an antenna wall socket, or directly.
LAN			For a wired internet connection via a broadband modem or router, connect an Ethernet cable to the LAN port.
Digital audio out (optical)			Audio out for digital audio devices. Port and cable may look different depending on an optical or coaxial input. Please use the cable appropriate for your device.
3.5mm audio out			Line audio out port for use with headphones, amplifier, soundbar or any other audio device via an AUX cable (not supplied).




# ASSEMBLY AND INSTALLATION
 
## BEFORE YOU GET STARTED

Spread cushioning flat to lay the TV on. This will help to prevent damage.


### 1. Stand assembly

- Attach first stand to base of TV, ensuring R and L stands are on correct side. You can install either one first.
- Insert three 16mm screws and use Phillips head screwdriver (not supplied) to tighten.
- Repeat these steps for second stand.

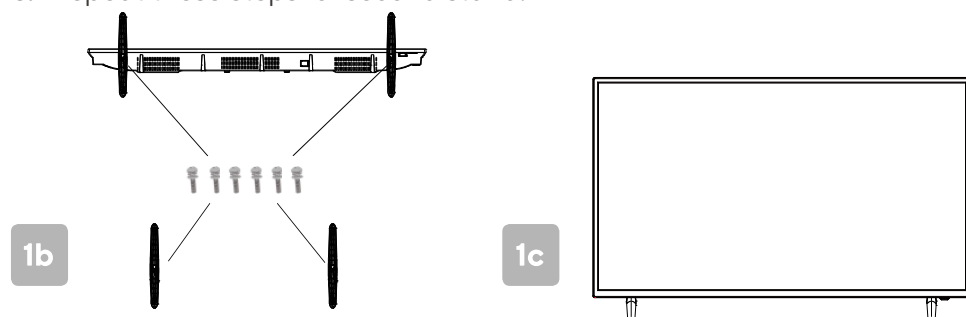


### 2. Connect to antenna

 - Connect an antenna cable (not supplied) via the 'ANT' input port at the back of the TV.
- Ensure the antenna cable is also connected to a working antenna, either via an antenna wall socket in your home, or directly.

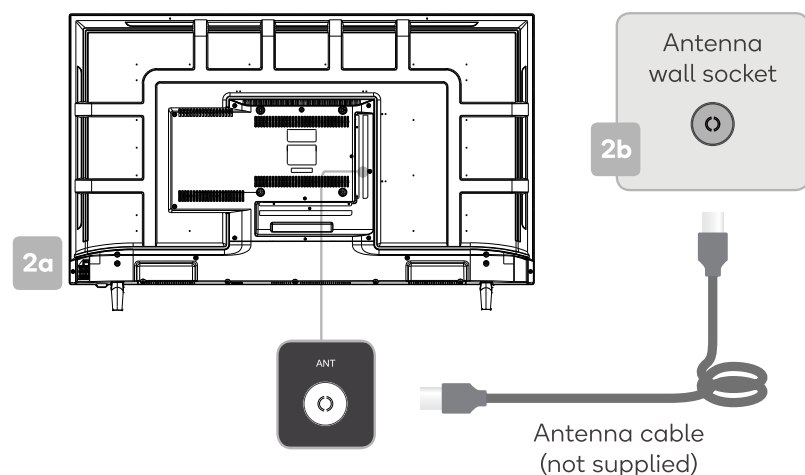

### 3. Turning TV on

 - Plug the power cord into a suitable power outlet. The standby will display a light, showing that the TV is receiving power.
- Press the POWER (⏻) button (either on your remote control or the lower side of the back panel on the TV – see page 8) to turn the TV on. The standby light will turn off when the TV is on.

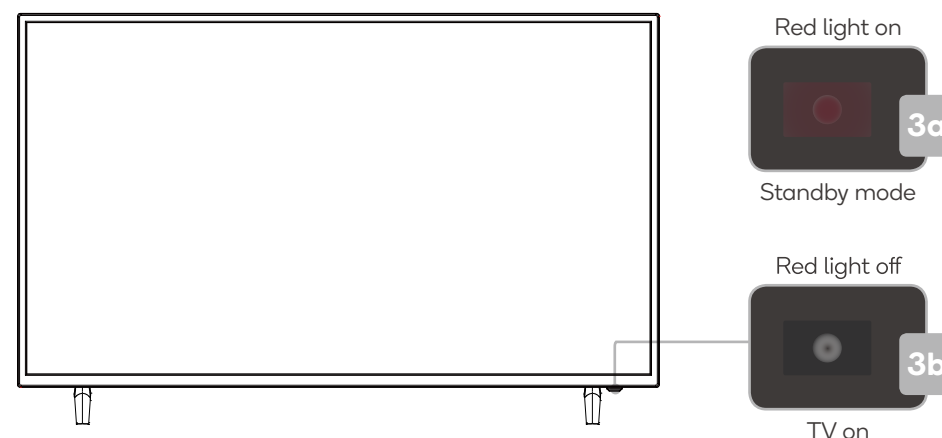


### TURNING TV OFF

Press the POWER (⏻) button on the remote control to enter standby mode. To power down the TV completely, unplug the power cord from the power outlet.

Do not leave your set in standby mode for long periods of time. If you will not use the TV for a long time, it is recommended to unplug the set from both the power outlet and aerial.
 
# REMOTE CONTROL OVERVIEW

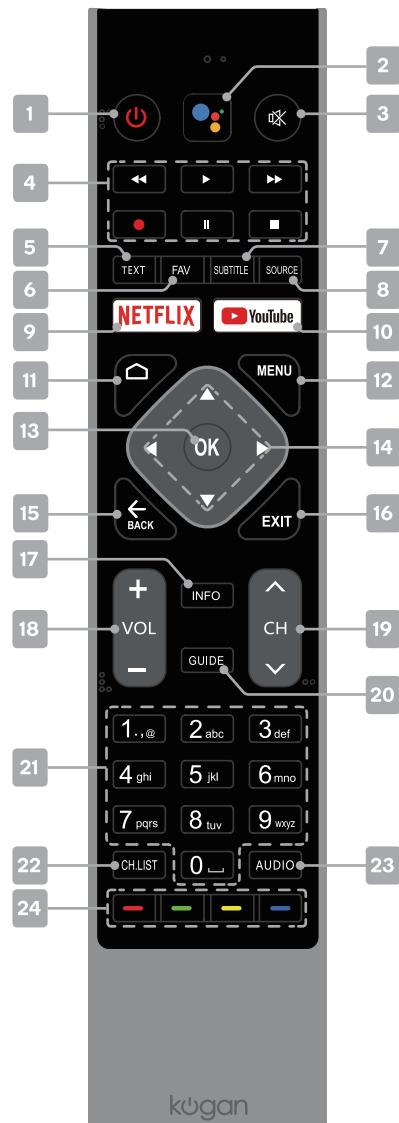


- 1 **Power**, press to enter or exit standby mode
- 2 **Google Assistant** to launch the built-in virtual assistant for voice commands
- 3 **Mute** to toggle sound on/off
- 4 **Media control buttons** including play/pause, stop/record, previous, backward, next, and forward for use in Media mode
- 5 **TEXT** to show/hide Teletext (Teletext not available in Australia or New Zealand)
- 6 **FAV** to open the Favourite Channel list
- 7 **SUBTITLE** to toggle subtitle on/off
- 8 **SOURCE** displays the list of input source channels
- 9 **NETFLIX** to open app homepage
- 10 **YouTube** to open app homepage
- 11 **Home** to access the home page
- 12 **MENU** to display TV options with optional, adjustable settings
- 13 **OK Enter** select the current item or confirm selection
- 14 **Direction buttons** for navigating menus and settings
- 15 **BACK** to the previous menu
- 16 **EXIT** to quit the current interface
- 17 **INFO** displays the current program information
- 18 **+ VOL - Volume** to adjust the volume up or down
- 19 **^ CH v Channel** to scroll channels
- 20 **GUIDE** displays the electronic program guide in DTV mode
- 21 **Number buttons** to select channels or input passwords
- 22 **CH.LIST** displays the channel list in DTV mode
- 23 **AUDIO** to select available languages and audio channels
- 24 **Colour buttons** for navigational use within apps

# USING REMOTE CONTROL / POWER BUTTON
 
## 1. Remote control assembly

- Open the battery compartment cover on the back side.
- Insert two 1.5V AAA size batteries, making sure to match the polarity markings (+ / -) of the batteries with the diagram inside the compartment.
- Replace battery compartment cover.

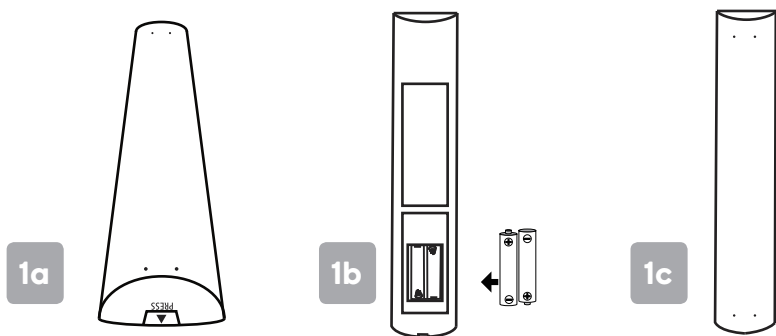


### WARNINGS

- If you do not intend to use the remote controller for a long period of time, remove them to avoid damage due to leakage.
- Do not use old and new batteries together.
- The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.


## 2. Using remote control

 Point the remote towards the sensor at the front of the TV (this may differ from the illustration). Ensure the distance between the remote control and the TV is no greater than 8 metres, at an angle of no more than 30 degrees on either side (2a).

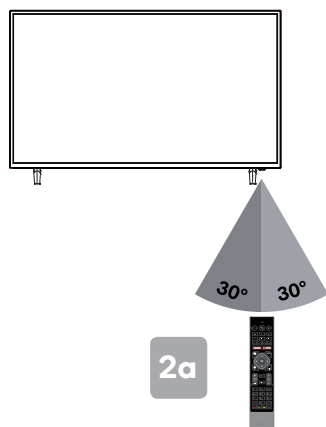

### TIPS

 Do not block the path between the sensor and the remote control.

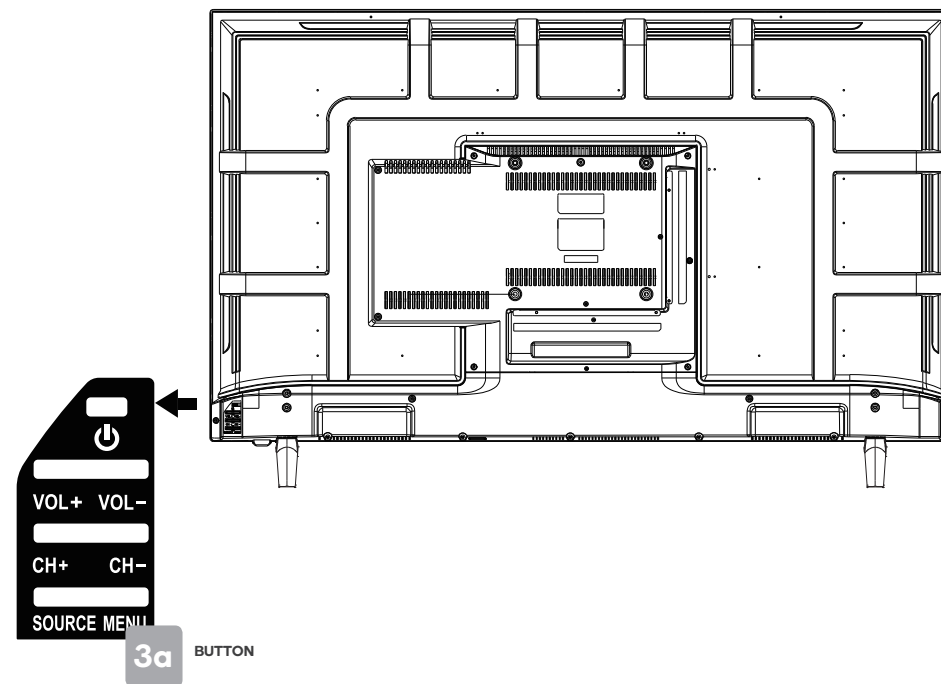

## 3. BUTTON



Standby or switch on the TV.

**CH+/-**

Selecting channel.

**VOL +/-**

Press to adjust the volume.

**MENU**

Menu button to open the menu

**SOURCE**

External signal input selection.



# FIRST TIME SETUP

When turning the TV on for the first time, the **Welcome** screen will appear. Use the **▲**, **▼** and **OK** buttons to navigate the following options.

## Bluetooth

Your Android TV remote control has bluetooth capabilities. Follow the onscreen prompts to pair the remote with the TV, holding the **Red** and **Blue** colour buttons for 5 seconds, then select the remote from the accessory list and press **OK**. Your remote's LED light will flash while pairing. This will allow you to use voice commands with your remote via the Google Assistant button.

If the Bluetooth pairing process is skipped, refer to the **Remotes & Accessories** section of the Settings menu.

## Language

Select your menu language.

 
 
## Quickly set up with Android phone

If you have an Android smartphone, you can easily transfer your phone's Wi-Fi network and Google account to your TV. If not, select 'Skip'.


## Select Wi-Fi network

Your Android TV will automatically scan for wireless networks nearby. Ensure the TV is within range of your wireless modem or router, and have your password handy. Follow the prompts to input your password and connect your TV to your selected network.


If you'd prefer to connect an Ethernet cable to connect to the internet, simply

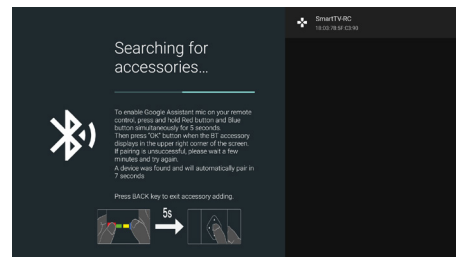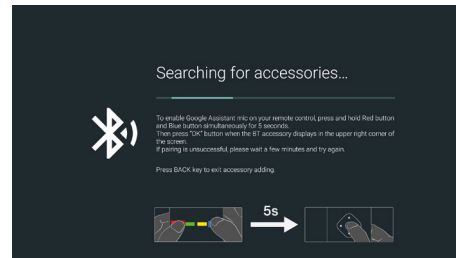

 Pairing your bluetooth remote control with your Android TV will enable your remote's Google Assistant voice control function.

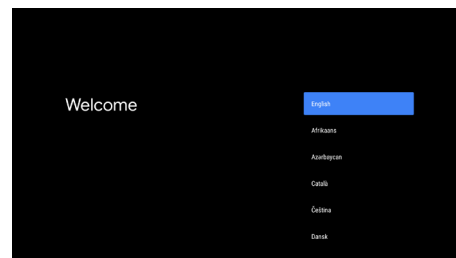

 Select your language. This can be changed later in the global settings.

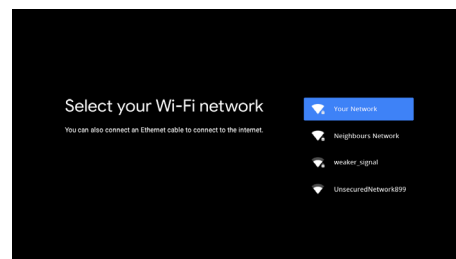

Connect to Wi-Fi by selecting your network and entering your password. A broadband internet connection is required for this step.

insert the cable (not supplied) to the 'LAN' input port at the back of the TV (**6b**, next page), and ensure that it is correctly connected to the internet.

## Google Account sign-in

Linking your Google Account to your Android TV will allow you to install new apps from the Play store, as well as receive recommendations, movies, and more from Google.

## Terms of Service

This page will allow you to read each of the Google Terms of Service, Privacy Policy, and Google Play Terms of Service in full, and to accept.

## Location

Grant permission for your Android TV to detect your location. You can adjust these permissions at any time from Settings.

## Help improve Android

Grant permission for your Android TV to detect your location to automatically send diagnostic information to Google. Following this you will be shown a brief overview of Android TV's features.

## Country/Region

To ensure your TV is set up properly, select your country/region from the list.

## Password

Set a default password.

## Timezone

 
Select your region's time zone.

## Select TV mode



The 'home mode' is optimized for efficient usage for home use. The 'retail mode' is optimized for store Demo with fixed settings.

## Chromecast

Let your TV be detected as a Google Cast device and allow Google Assistant and other services to wake the TV to respond to cast commands, even when in standby mode.

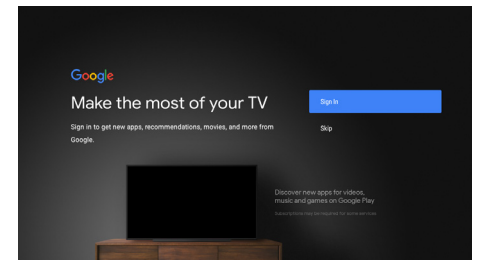

Sign in to your Google account here.

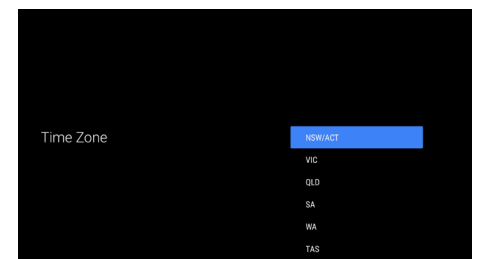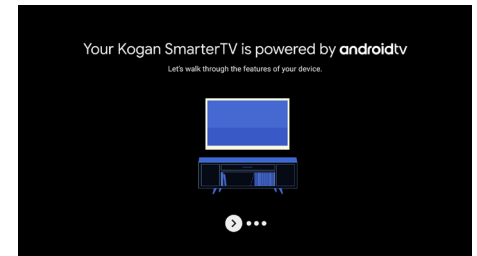  

Set your time zone

# BASIC OPERATION

## Home Screen

After completing the wizard Settings, you can watch TV and go to the home screen

- ① Open the Google assistant or start a voice search.
- ② Among the applications installed on the TV, the icons for the favourite applications are shown inside here. (Favourite applications can be added / deleted / changed its order by users.)

③ **Apps:** Click to jump to Apps screen where all the installed applications are listed.

④

 
④ **Notification:** Display the notifications.

④ **Inputs:** Icon to select an input source.

④ **Network & Internet:** Icon to set up Network, such as wifi.




④ **Settings:** Various settings can be configured here.

For details on the settings, see the next explanation.

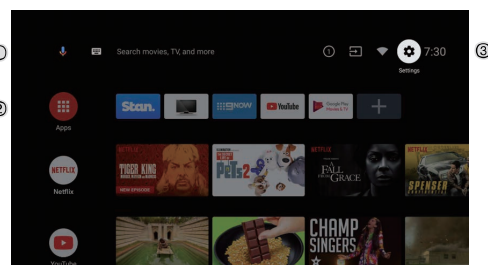

## Input Source

   1. In the Home interface, press ▲, ▼, ◀, ▶ to select the “Inputs” icon, press OK to open the input source list, then press up to highlight an input and press OK to switch.
2. Under live TV, press the SOURCE button to display the list of input source. You can select the desired source.

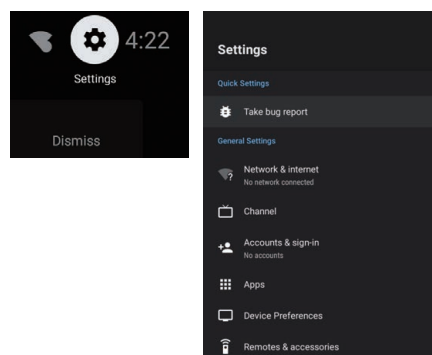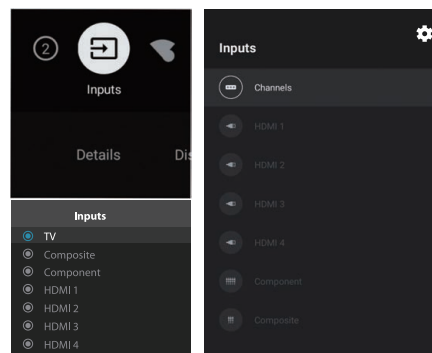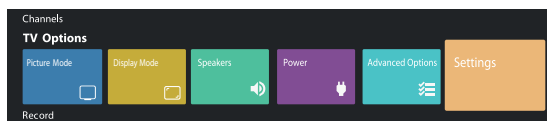

## Navigating the on-Screen Menu

 
1. There are two ways to enter. First, in live TV, press the menu button to display TV options, press ▲, ▼, ◀, ▶ to select the settings menu and press OK to confirm. Second, in the Home interface, press the ▶ key to select the icon of the circular settings menu, press OK to confirm.

2. Press ▲, ▼ button to select what you want set.
3. Press OK to enter setting.

Press BACK to return to the previous menu. If the main menu is displayed, pressing BACK will close the on screen menu.

## Network

1. Press ▲, ▼ button to select what you want set.
2. Press OK button to adjust.
3. After finishing your adjustment, press OK button to save and return to the previous menu.

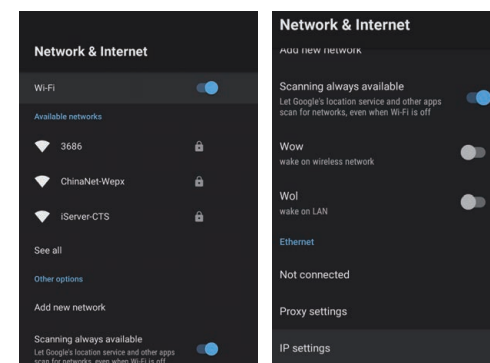

## Channel

**Channel-** Display the scan sub-menu based on different channel installation modes.

**Auto Channel Update-** Press OK button to choose ON / OFF. When selecting ON, the system will automatically scan and update channels after 5 minutes of standby.

 
 
 
**Parental controls-** Press ▲, ▼ button to select the option then press OK button to enter the sub- menu.

**Audio Channel-** Press ▲, ▼ button to select the option then press OK button to enter the sub-menu.

**Open source licenses-** Press ▲, ▼ button to select the option then press OK button to enter the sub-menu.

## Antenna

1. Menu - Settings - Channel - Channel Installation Mode enter, choose Antenna.
2. Enter Menu - Settings - Channel - channels.

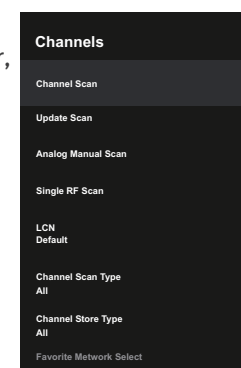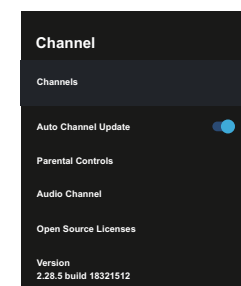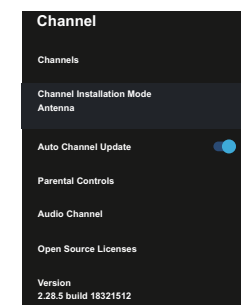




# SETTINGS

3. Channel Scan directly enters the ATV+DTV automatic search platform interface of Antenna.


**Update Scan:** Re-automatically search for frequency points outside the station.

**Analog Manual Scan:** Manual ATV search station. After input the frequency point, you can select up or down search station.

   **Single RF Scan:** DTV manual search, left and right after selecting RF Channel, directly OK search.

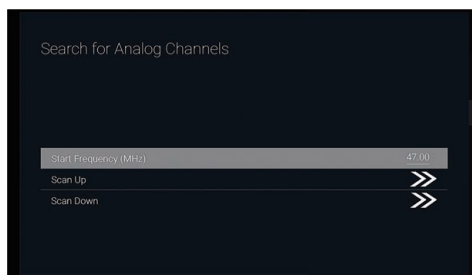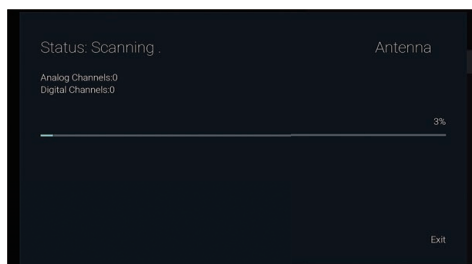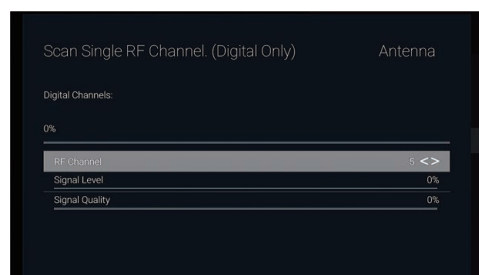

## Accounts & Sign in

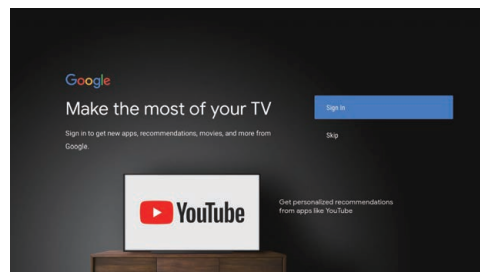 


## Apps

In this menu, you can set the App permissions, and read the app lists.

1. Press ▲,▼ button to select what you want set.

2. Press OK button to adjust.

 3. After finishing your adjustment, press BACK button to return to the previous menu.

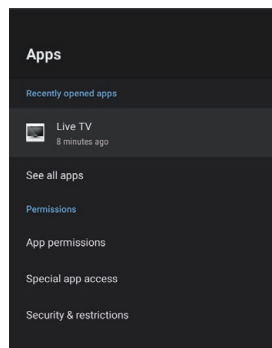

## Device Preferences

### About

In this menu, you can read the information and settings of TV.

1. Press ▲,▼ button on select what you want set.

2. Press OK button to adjust.

3. After finishing your adjustment, press BACK button to return to the previous menu.

### Date & Time

**Automatic date & time-** Press ▲,▼ button to select the option then press OK button to enter the sub-menu. (Optional: Use network-provided time, Off)

#### NOTE

Manually adjusting date & time settings will automatically change the **Automatic date & time** to **Off**.

**Set date** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu.

**Set time** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu.

**Set time Zone** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu.

**Use 24-hour format** - Press ▲,▼ button to select the option then press OK button to choose ON / OFF.

 
### Time

**Power On Time Type** - Press ▲,▼ button to select the option then press OK button to choose ON/OFF/ONCE.

**Power On Time** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu.

**Power Off Time Type** - Press ▲,▼ button to select the option then press OK button to choose ON/OFF/ONCE.

**Power Off Time** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu.

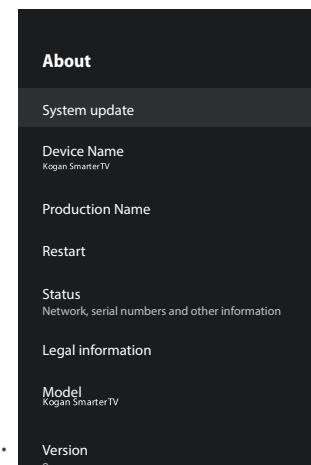

### Date & time

Automatic date & time  
Use network-provided time

Set date  
April 17, 2019

Set time  
9:38 AM

Set time zone  
GMT+02:00 Central European Summer Time

Use 24-hour format  
1:00 PM

### Timer

Power On Time Type  
Off

Auto Power On Time

Power Off Time Type  
Off

Auto Power Off Time



# SETTINGS

## Language

**Language** - Press ▲,▼ button to select the option then press OK button to enter the select language.

## Keyboard

**Current keyboard** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu.

**Gboard settings** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu.

**Manage keyboards** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu.

## Inputs

**Inputs** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu.

 
 
**HDMI control** - Press ▲,▼ button to select the option then press OK button to choose ON/OFF.

**Device auto power off** - Press ▲,▼ button to select the option then press OK button to choose ON/OFF.

**TV auto power on** - Press ▲,▼ button to select the option then press OK button to choose ON/OFF.

**HDMI EDID Version** - Show EDID Version.

**CEC Device List** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu.

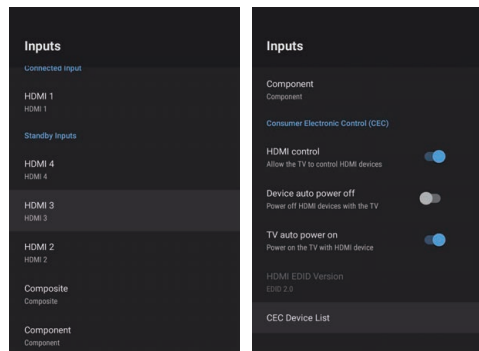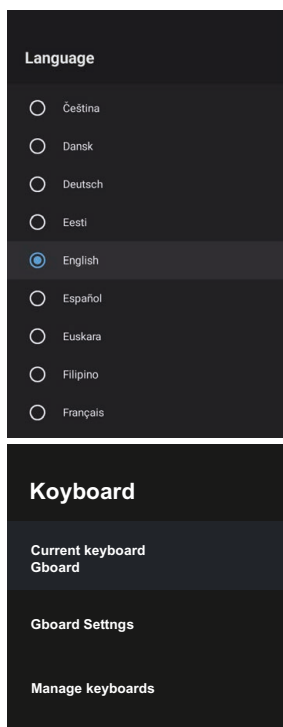

## Power

**Sleep Timer** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu. (Optional: Off, 10 minutes, 20 minutes, 30 minutes, 40 minutes, 50 minutes, 60 minutes, 90 minutes, 120 minutes).

**Picture Off** - Press ▲,▼ button to select the option then press OK button to choose ON/OFF.

**Switch Off Timer** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu. (Optional: Off, 30 minutes, 60 minutes, 90 minutes, 120 minutes, 150 minutes, 180 minutes, 210 minutes, 240 minutes).

**No Signal Auto Power Off** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu. (Optional: Off, 5 minutes, 10 minutes, 15 minutes, 30 minutes, 60 minutes).

## Picture

**Picture Mode** - Press ▲,▼ button to select the option, button to enter the sub-menu. (Optional: User, Standard, Vivid, Sport, Movie, Game, Energy saving).

**Backlight/Brightness/Cinrast/Saturation/HUE/Sharpness** - Press ▲,▼ button to select the option, Press ◀ to decrease the parameter. Press ▶ to increase the parameter.

 
 
**Gamma** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu. (Optional: Dark, Middle, Bright).

**Color Temperature** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu.

**HDR** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu. (Optional: On, Off).

**Advanced Video** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu.

**Reset to Default** - Reset all settings to the factory defaults.

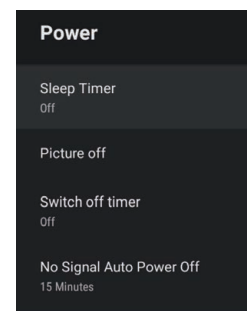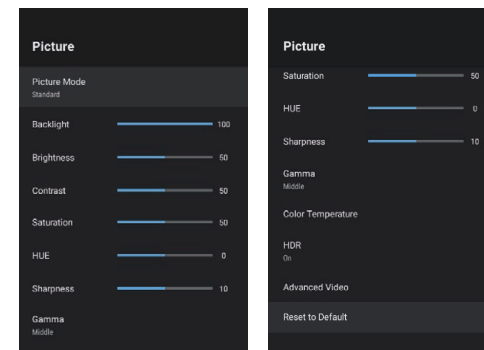

# SETTINGS

## Sound

**Sound style** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu. (Optional: User, Standard, Vivid, Sports, Movie, Music, News).

**Balance/Bass/Treble** - Press ▲,▼ button to select the option. Press ◀ to decrease the parameter. Press ▶ to increase the parameter.

**Sound Surround** - Press ▲,▼ button to select the option then press OK button to choose ON/OFF.

**Equalizer Detail** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu.

**Speakers** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu. (Optional: TV Speaker, External Audio System).

**Digital Output** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu. (Optional: Auto, Bypass, PCM, Dolby Digital Plus, Dolby Digital).

**Spdif Delay** - Press ▲,▼ button to select the option. Press ◀ to decrease the parameter. Press ▶ to increase the parameter.

**Auto Volume Control** - Press ▲,▼ button to select the option then press OK button to choose ON/OFF.

 
 
**Downmix Mode** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu. (Optional: Stereo, Surround).

**Reset to Default** - Reset all settings to the factory defaults.

## Storage

**Internal Shared Storage** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu.

**Removable Storage** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu. (Note: Show external devices if available)

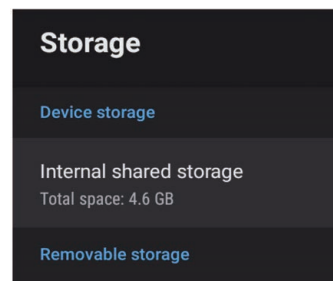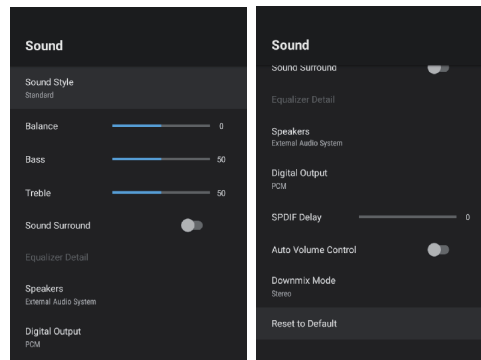


## Home Screen

In this menu, you can set channels, apps, open source licenses.

1. Press ▲,▼ button to select what you want set.
2. Press OK button to adjust.
3. After finishing your adjustment, press BACK button return to the previous menu.
 
## Retail Mode

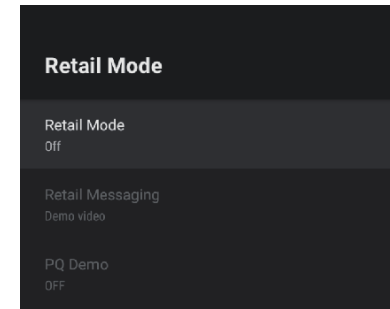

**Retail Mode** - Press ▲,▼ button to select the option then press OK button to choose ON/OFF.

**Retail Messaging** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu. (Note: Demo video, e-POP left, e-POP bottom).

**PQ Demo** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu. (Note: Off, Left, Right).

## Google Assistant

 
 
 
In this menu, you can set searchable apps, safe search filter, block offensive words, open source licenses.

1. Press ▲,▼ button to select what you want set.
2. Press OK button to adjust.
3. After finishing your adjustment, press BACK button return to the previous menu.

## Chromecast Built-in

In this menu, you can read the information and settings of Chromecast.

1. Press ▲,▼ button to select what you want set.
2. Press OK button to adjust.
3. After finishing your adjustment, press BACK button return to the previous menu.

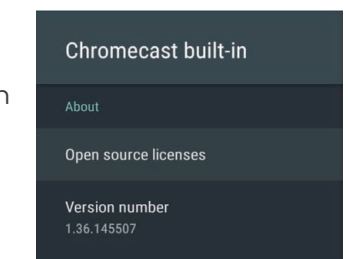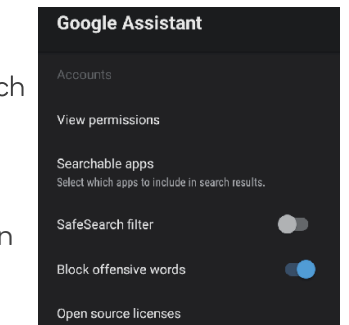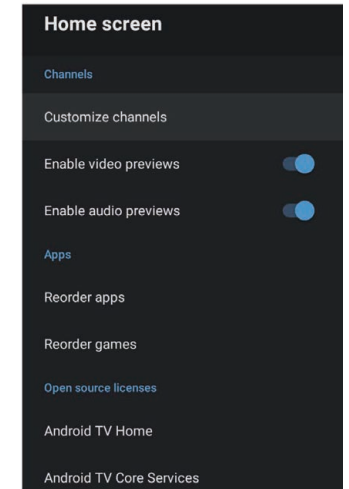

# SETTINGS

## Screen Saver

**Screen Saver** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu. (Optional: Turn screen off, Backdrop, Colors).

**When to Start** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu. (Optional: 5 minutes, 10 minutes, 30 minutes, 1 hour, 2 hours).

**Put device to sleep** - Press ▲,▼ button to select the option then press OK button to enter the sub-menu. (Optional: 30 minutes, 1 hour, 3 hours, 6 hours, 12 hours, Never).

**Start now** - Press ▲,▼ button to select the option then press OK button to enter screen saver.

## Location

**Location status**- Press ▲,▼ button to select the option then press OK button to enter the sub-menu. (Optional: Use Wi-Fi to estimate location, Off).

## Usage & Diagnostics

**Usage & Diagnostics**- Press ▲,▼ button to select the option then press OK button to choose ON/OFF.

## Accessibility

**Audio Description** - Press ▲,▼button to select the option then press OK button to choose ON/OFF.

**Visually Impaired** - Press ▲,▼button to select the option then press OK button to enter the sub-menu. (Need: Audio Description ON).

**Hearing Impaired** - Press ▲,▼button to select the option then press OK button to choose ON/OFF.

**Captions** - Press ▲,▼button to select the option then press OK button to enter the sub-menu.

**High contrast text** - Press ▲,▼button to select the option then press OK button to choose ON/OFF.

### Screen saver

Screen saver  
Backdrop

When to start  
After 5 minutes of inactivity

Put device to sleep  
After 30 minutes of inactivity

Start now

### Location

Location status  
Use Wi-Fi to estimate location

Recent location requests

No apps have requested location recently

### Usage & Diagnostics

On

Automatically send diagnostic information to Google, like crash reports and usage data from your device, apps, and Chromecast built-in. This information won't be used to identify you. You can adjust these permissions at any time from device settings. Learn more at: [g.co/AndroidUsageHelp](https://g.co/AndroidUsageHelp) and [g.co/cast/device\\_stats](https://g.co/cast/device_stats).

### Accessibility

Audio Description

Visually Impaired

Hearing Impaired

Captions

High contrast text  
(Experimental)

 
## Reset

Press OK button to enter the sub-menu.  
Reset-Erase everything.

## Remote & Accessories

In this menu, you can pair Bluetooth devices.

1. Press the “RED” and “BLUE” buttons at the bottom of the remote control for 5 seconds.
2. When the LED starts to flash, release it. The remote controller will send the pairing signal to the TV and display the information fo the remote control on the right side of the screen.
3. Press the OK button to display the pairing. If the paired is displayed, the connection is successful.
4. If the couldn't pair appears, the connection fails. Wait 30 seconds and then press the “RED” and “BLUE” buttons at the bottom of the remote control for 5 seconds to repeat the previous steps.
6. Press BACK button return to the previous menu.

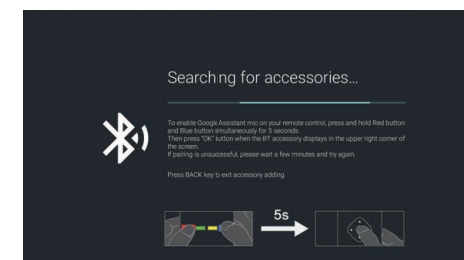

### Remotes & Accessories

Bluetooth Add accessory

SmartTV-RC  
Connected



# PVR MODE

 
## PVR (PERSONAL VIDEO RECORDER)

To access RECORDING menu, (PVR)

1. While watching Live TV, press “MENU” on remote control.
2. “TV Options” will appears, Press “DOWN” arrow on remote control to go to “RECORD” menu (as image shown below)

IMPORTANT - You must have a USB Drive inserted into the USB Port of the TV to in order to use any of these “RECORD” functions. (Must be FAT32 format)

Start Recording -	Select “Start Recording” to start recording the channel you are currently viewing on Live TV.
Record List -	Select “Record List” to view all previous recordings.
Device Info -	Select “Device Info” to view information about your storage device.
Schedule List -	Select “Schedule List” to see future programs you have scheduled to record.
TimeShift Mode -	Select “TimeShift Mode” and switch on to enable Pause/rewind/play of Live TV.

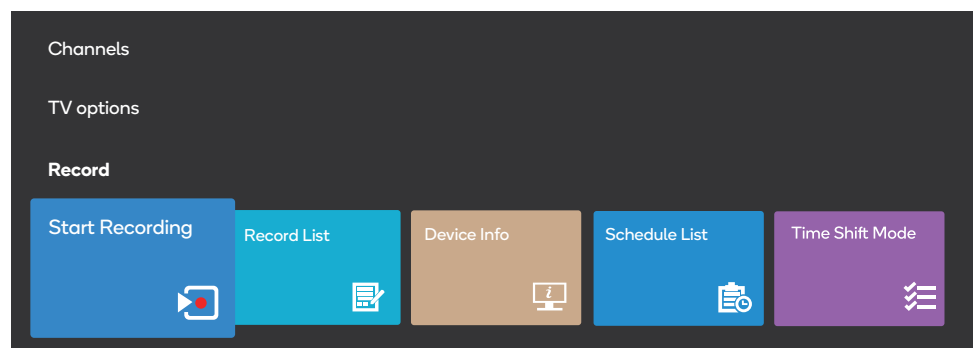

### NOTE

- Don't connect or disconnect any USB device while in USB playback mode.
- Ensure all personal data is backed up before inserting USB device into TV. We assume no liability for any loss of data due to malfunction or misuse.
- USB device should have capacity at least 512MB.
- USB device must support USB 2.0 high-speed specification.
- Use only USB storage devices formatted to FAT32.
- You cannot change channels while recording.
- If the signal is interrupted while recording, the recording will stop until signal is regained.
- While in time-shift mode, do not turn TV off.

 


### Recording controls

- Hold to start recording
- Play Record List Mode, Hold to Play/Pause
- Hold to Stop recording

### Timeshift controls

- Hold to Open timeshift
- Hold to Close timeshift
- OK** Hold to Play timefht

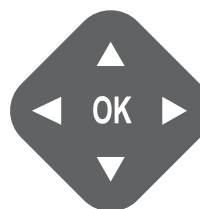


### Media playback controls

- OK** Confirm / Play / Pause
- Navigation


# MEDIA MODE SETTINGS

## MEDIA PLAYBACK

 1. In the Home interface, select the + icon in the APP column to add the application, and click OK. Press up and down to select the Multi Media Player application, and click OK to add it to the Home interface.

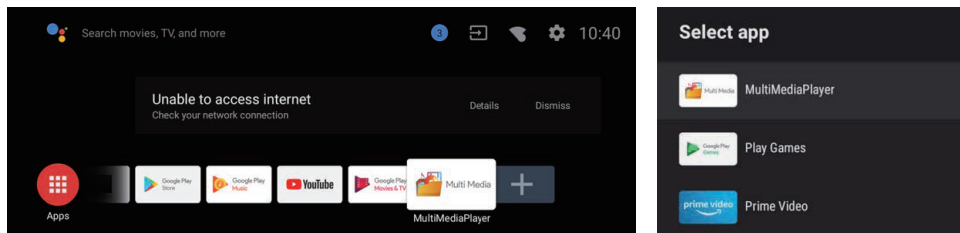

 2. Select OK key to enter Multi Media Player and display Video, Photo, Audio. After inserting the USB flash drive, you can view the corresponding files in the USB flash drive.

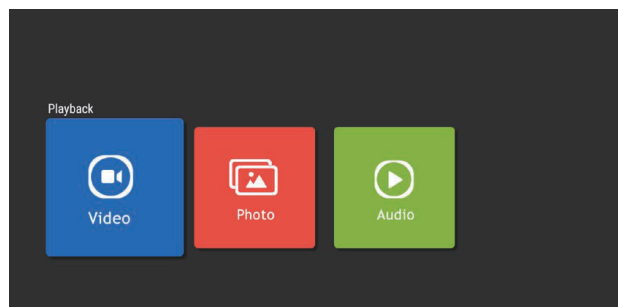

Alongside flashdrives, the TV's USB port is also capable of reading from devices such as digital cameras and USB hard disks. Recordings saved in PVR mode will also be playable.

### Video

- OK** Confirm / Play / Pause
- ◀/▶** Rewind / fast forward function.
- ▲/▼** Play previous / next video
- ←** Exit playback, return to previous menu.
- MENU** Submenu can be called out to make related settings.

### Photo

- OK** Confirm / Play / Pause
- ◀/▶ ▲/▼** Play previous / next picture.
- ←** Back key: Exit picture playback, return to the previous menu.
- MENU** Submenu can be called out to make related settings.

 
### Audio

- OK** Confirm / Play / Pause
- ◀/▶** Rewind / fast forward operation possible.
- ▲/▼** Play previous / next music.
- ←** Exit music playback, return to the previous menu.
- MENU** Submenu can be called out to make related settings.

# APPS

Press the **Home** (🏠) button on the remote to display the main interface.

Use the directional buttons on your remote control to navigate through the pages, and press the OK button to launch selected app. For Netflix and YouTube, you can launch the apps directly using the remote control hotkeys.

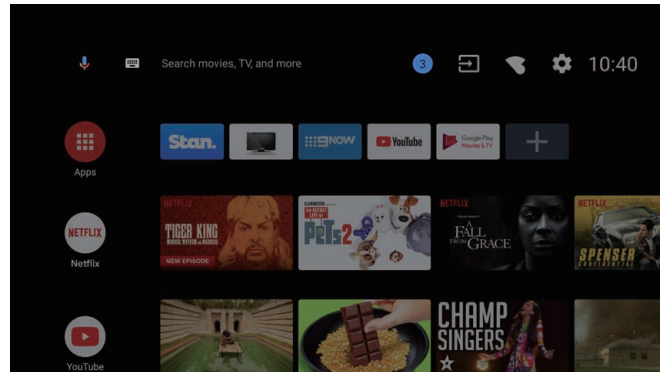

## Netflix

Sign into your Netflix account to browse by genre, search for titles, manage your Instant Queue and review Netflix recommendations all from your TV. If you do not already have a Netflix account, you will need to sign up to use this feature. For more information, visit [netflix.com](https://www.netflix.com)

## YouTube

Enjoy the videos and music you love, upload original content, and share it all with friends, family, and the world on YouTube.

## 9NOW

 
Enjoy the videos and music you love, upload original content, and share it all with friends, family, and the world on 9NOW.

## Google Play Movies&TV

Google's integrated Chrome-based application provides relevant entertainment experience

## Apps


Click to jump to Apps screen where all the installed applications are listed.

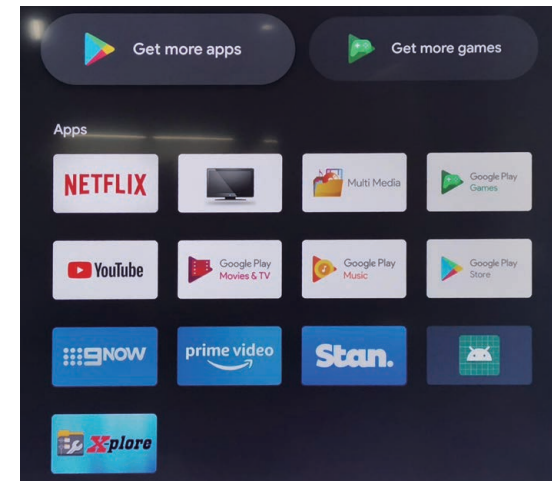

Some of the many streaming applications on the Smart TV Apps portal

# WALL MOUNTING

 Wall mount kit not included. Steps below are provided as an optional alternative to the supplied base-mounts.

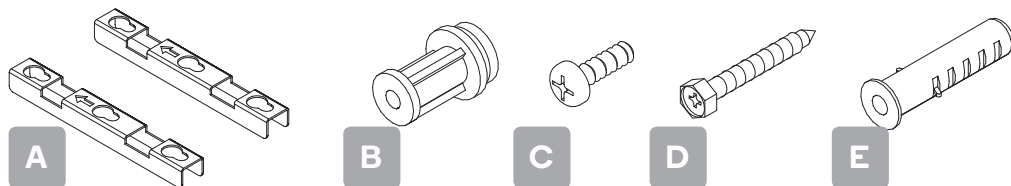

**A** Mounting bracket (x2)

**B** Shaft sleeve – M8(x4)

**C** M6 x 45mm screw (x4)

**D** M6 x 60mm self-tapping screw (x4)


**E** Wall anchor (x4)

**NOTE:** Please refer to the actual product for the screw size.

## 5. Optional wall-mounting installation

 
- Measure and double-check the distance of threaded holes on the back panel of the TV before creating any holes in the wall.
- Use 45mm screws (**C**) to attach shaft sleeves (**B**) within the four threaded holes on the back panel of the TV.

4b

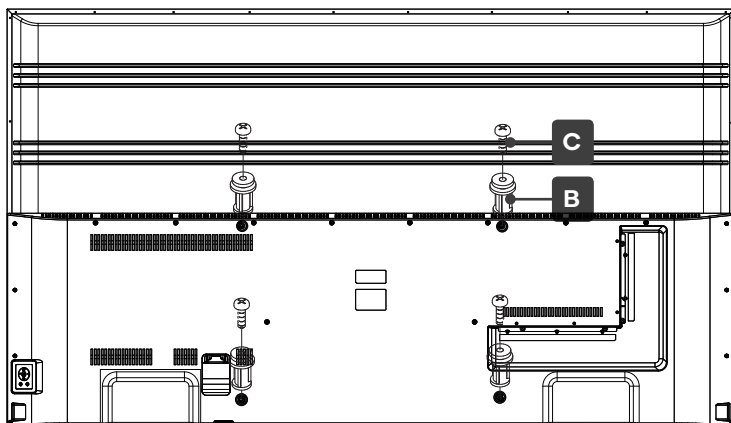

- Use a mounting bracket (**A**) as a guide to mark the positions for the four holes on the wall with a pencil.
- Using a drill, create holes in the marked positions on the wall.
- Insert the four wall anchors (**E**) into the screw holes in the wall.
- Place the mounting brackets against the wall, aligned with the wall anchors, ensuring the directional arrow is facing upwards.
- Fix the mounting brackets with the 60mm self-tapping screws.
- Attach the TV to the mounting brackets by placing all four shaft sleeves into the larger openings of the brackets, then lowering the TV so that the shaft sleeves “lock” into place within the brackets.

 It is recommended that two people perform **step 4h** together to ensure the sleeves are properly aligned before the TV is lowered onto the brackets.

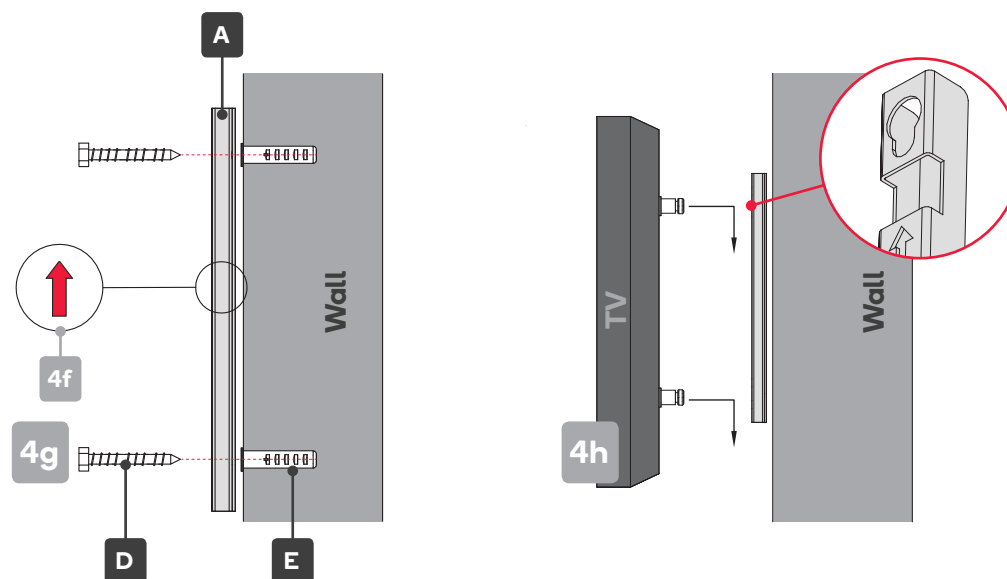

## NOTE:

Only use wall-mounts that match the same size screws and fittings as those listed on this page. Other methods of wall-mounting have not been tested for this model and can not be guaranteed to safely support the TV.

# SPECIFICATIONS

## Audio

Speakers 2 x 10W

## Connectivity

Ethernet (RJ45) Yes

HDMI 4 x 2.0

HDMI-ARC Yes | HDMI 4

HDMI-CEC Yes

USB 2 x USB 2.0

Wi-Fi Yes

Bluetooth Yes (5.0)

## Dimensions

Without Stand 1131 x 78 x 659mm

With Stand 1131 x 243 x 726mm

VESA Wall Mount Pattern 200 x 200

Net Weight 9.4kg

## Display

Colours 1.07G

Frequency 60Hz

Contrast Ratio 5000:1

Native Aspect Ratio 16:9

Refresh Rate 60Hz

Resolution 3840 x 2160

Response Time 8ms

Size 50"

Viewing Angle 178°/178°

## Features

EPG Yes

HDR Yes (HDR 10)

HDCP Yes

TV Resolution 4K UHD

USB Media Playback Yes

USB Media Playback Formats JPG, JPEG, PNG, BMP, MP3, DD, DD+, AAC, MP3, MPEG4, H.265, VP9 (4K @ 60P)

## Inputs

Composite (AV) 1

Component (YPbPr) 1

HDMI 4

## Outputs

3.5mm Stereo Audio 1

Optical Audio Out 1

## Performance

CPU A55\*4@1.2GHz

GPU Mail470MP3 (OpenGLLEL)

OS Android

RAM 1.5G Byte DDR3

Storage Capacity 8G Byte Flash

## Power

Average Consumption 120W

Energy Consumption 290 kWh per year

Energy Rating 4.5 Star

## Tuning And Signal

Tuner Type DVB-T

Note:

- Design and specifications are subject to change without notice.
- Weight and dimension shown are approximate.



The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

# TROUBLESHOOTING

## Common fixes

**Many minor issues can be resolved by hard resetting, or power cycling the unit or upgrading the firmware.**

**To perform a hard reset, or power cycle, please use the following steps.**

- Unplug it from the main power socket and leave it for 10-15 minutes.
- Press and hold the power button on the TV for 5 seconds.
- Connect the TV back to the power and turn it on.

### Poor picture and sound quality

- Try a different channel
- Adjust the antenna
- Check all connections

### No picture or sound in TV status

- Try another channel
- Press the source button
- Make sure TV is plugged in
- Check the antenna connection

### Remote control malfunctions

- Replace remote control batteries (we recommend lithium AAA batteries for best results)
- Ensure battery terminal polarity (+/-) is correct
- Remote is out of range, move closer to TV
- Bluetooth remote not paired to TV (refer to Settings > Remotes & Accessories to pair)
- Remove any obstructions between remote and IR sensor of TV
- Make sure the power cord to your TV is plugged in and turned on

### No sound or sound is too low at maximum volume

- Check the volume settings on any external speakers connected to your television
- Adjust the TV volume accordingly
- Check another channel or input
- Check that MUTE hasn't been turned on

### Blurred or snowy picture, distorted sound

- Check direction, location and connections to your antenna
- Issues may be caused by the use of an indoor antenna (poor signal)

### Picture rolls vertically

- Check all connections

### No colour, wrong colour or tints

- Make sure the program itself is broadcast in colour
- Select the picture menu, then adjust the colour and tint submenus

### Image is not centred on the screen

- Adjust the horizontal and vertical position

### "No Signal" on HDMI source

- Test the device with a different HDMI cable
- Plug the device into another HDMI port
- Try a different device connected to the same cable and port
- Perform a factory reset on your TV

## Care & maintenance

Unplug the television from the power supply before cleaning. Do not use any liquid cleaners or harsh chemicals. Always use a soft, damp cloth.

### Cleaning the screen

Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use it to wipe the screen.

Make sure the excess water is off the screen, and then let it air-dry before you turn on your TV.

### Cleaning the casing

To remove dirt or dust, wipe the TV casing with a soft, dry, lint-free cloth. Please be sure not to use a wet cloth.

**For our full TV troubleshooting guide, head online to [help.kogan.com](https://help.kogan.com)**